





XPENG X9
5 doors / 7 seats / MPV
From 2026

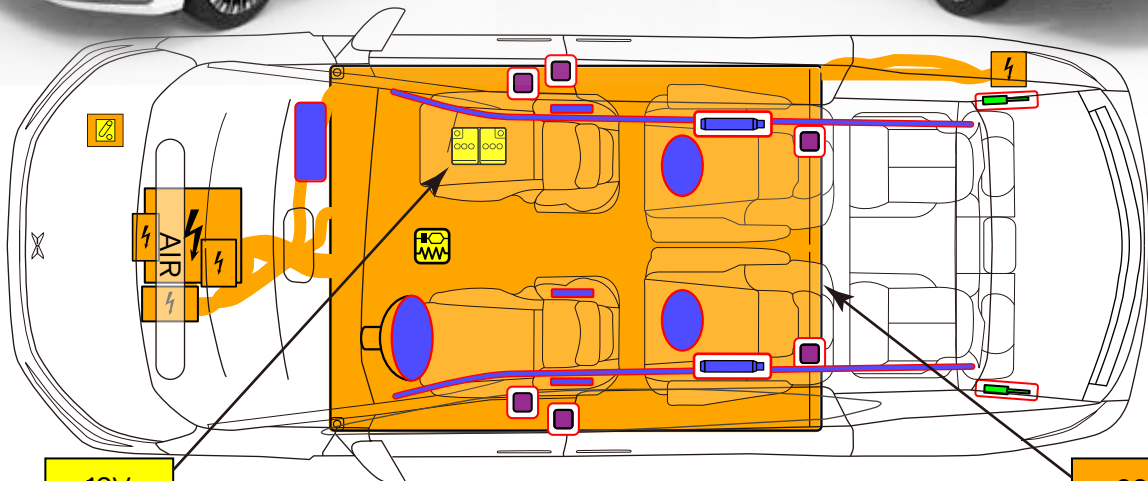

12V
Li-ion

621V/638V
Li-ion

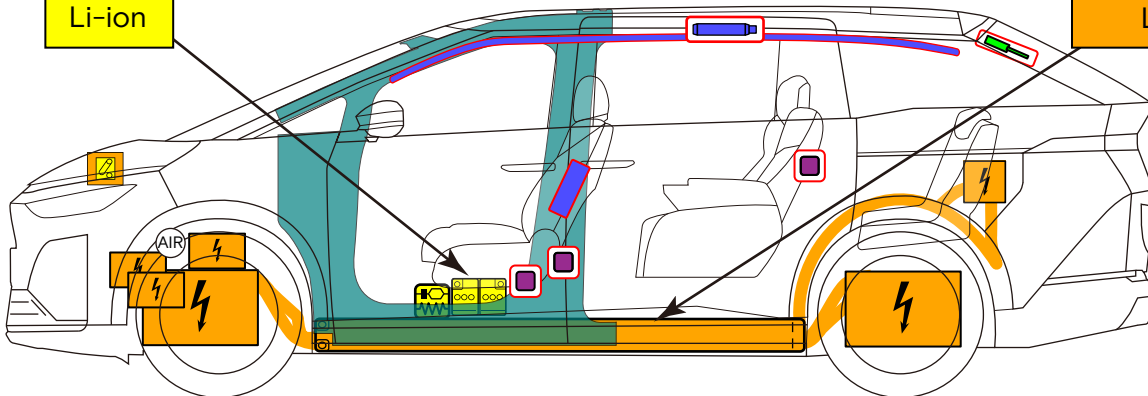

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery Low Voltage		Gas strut/Preloaded spring		High strength zone		Low voltage device that disconnects high voltage
	High voltage component		Battery pack, high-voltage		High voltage power cable		Air tank



XPENG X9
FROM 2026-PRESENT

ID No.

L1N-X9-2026-ERS

Version No.

01

Page No.


1/4

	XPENG X9 5 doors / 7 seats / MPV From 2026		
--	--	---	--

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

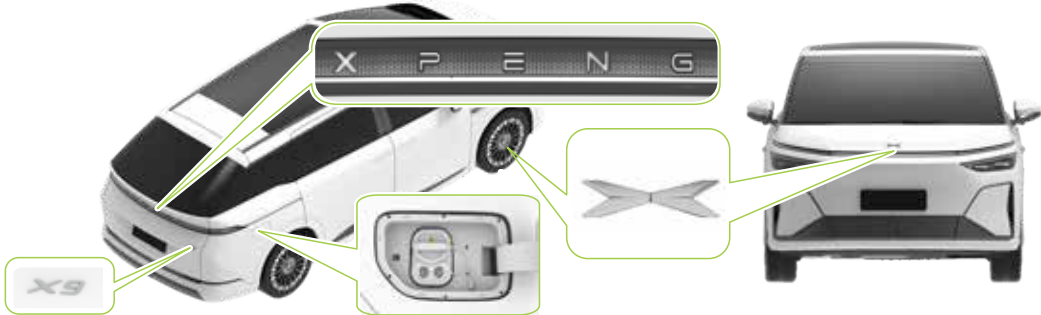

2. Immobilisation / stabilisation / lifting

IMMOBILISE THE VEHICLE

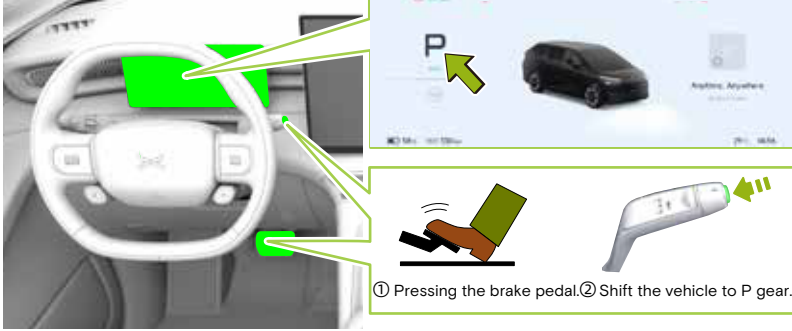

① Pressing the brake pedal.② Shift the vehicle to P gear.

LIFTING POINTS



 Appropriate stabilisation-lifting points
  Appropriate stabilisation points vehicle on side

 High voltage battery

3. Disable direct hazards / safety regulations

MAIN DISABLING METHOD: Automatic power-off

The vehicle is equipped with an automatic power-off function. The high-voltage system is disconnected if you observe deployed airbags or the HV warning icon/message ("Power cut. Please contact service") on the instrument cluster. In a collision or overcurrent, the Pyrofuse ensures physical isolation; for other internal faults, a software-based shutdown is triggered to ensure the safety of occupants and emergency responders.





Instrument Indicator Light

ALTERNATIVE DISABLING METHOD







Select "Power Off" through the central control screen, disconnect the high voltage battery.

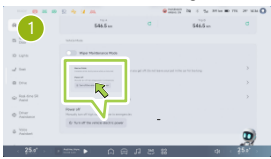

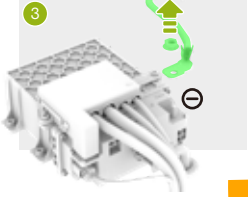


Disconnect the low-voltage maintenance switch, disconnect the high voltage battery.

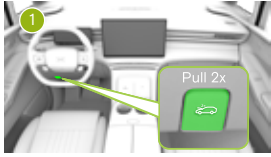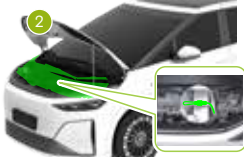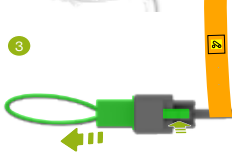Pull the switch twice to open the hood.

Disconnect the low-voltage maintenance switch.





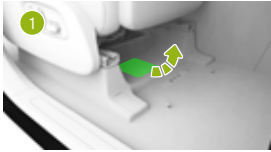




Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

	XPENG X9 FROM 2026-PRESENT	ID No. L1N-X9-2026-ERS	Version No. 01	Page No. 2/4
--	--	-----------------------------------	---------------------------	-------------------------

4. Access to the occupants

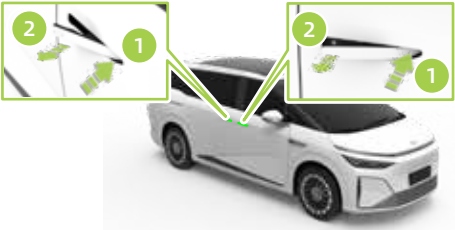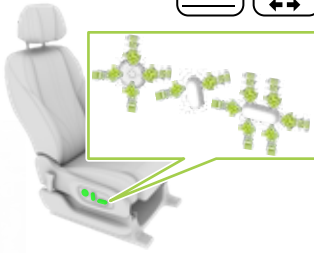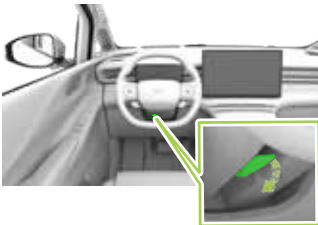Door opening ① Press ② Pull 	Seat adjustment  	Steering column adjustment  	High strength body areas 
Internal opening of front doors  Pull the handle to open the door.	Internal opening of rear doors  Open the flap and pull the pull ring to open the door.	Glass types Laminated glass Tempered glass 	

WHEN THE 12V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.

5. Stored energy / liquids / gases / solids

		12V
		621V/638V
		R134a 1550g±25g

 When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera. 

6. In case of fire


 **USE LARGE AMOUNTS OF WATER.**

  **BATTERY RE-IGNITION!**

 **DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY!**





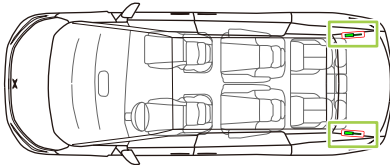

If you observe the warning icon/message ("Battery temperature too high. Please stay away from the vehicle and contact service.") on the instrument cluster, indicates that thermal runaway has occurred, please move away from the vehicle immediately.

 Gas strut/Preloaded spring
 Risk of missile effect of tailgate



7. In case of submersion

Proper PPE should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilise the vehicle and disable the vehicle before starting any operation (see chapter 3).
Tilt the vehicle to one side to allow water to drain out of the vehicle.

8. Towing / transportation / storage

STORE AT SAFE DISTANCE FROM OTHER VEHICLES!

Location front hook

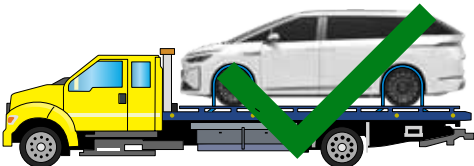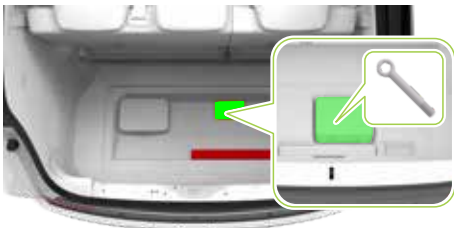

Always transport with all four tires off of the ground.



BATTERY RE-IGNITION!



9. Important additional information

Manufacturer information: XPENG

For further details, please refer to "Emergency Response Guide".

10. Explanation of pictograms used

	Electric Vehicle		Air-conditioning component		Acute toxicity
	Warning, Electricity		Flammable		Remove smart key
	General warning sign		Hazardous to the human health		Seat height adjustment
	Use water to extinguish the fire		Corrosives		Seat adjustment, longitudinal
	Use thermal Infrared camera		Explosive		Steering wheel, tilt control
	Bonnet		Environmental hazard		Warning; low temperature