




Alfa Romeo Tonale

e-Hybrid MHEV - 5 doors

2022-04



Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

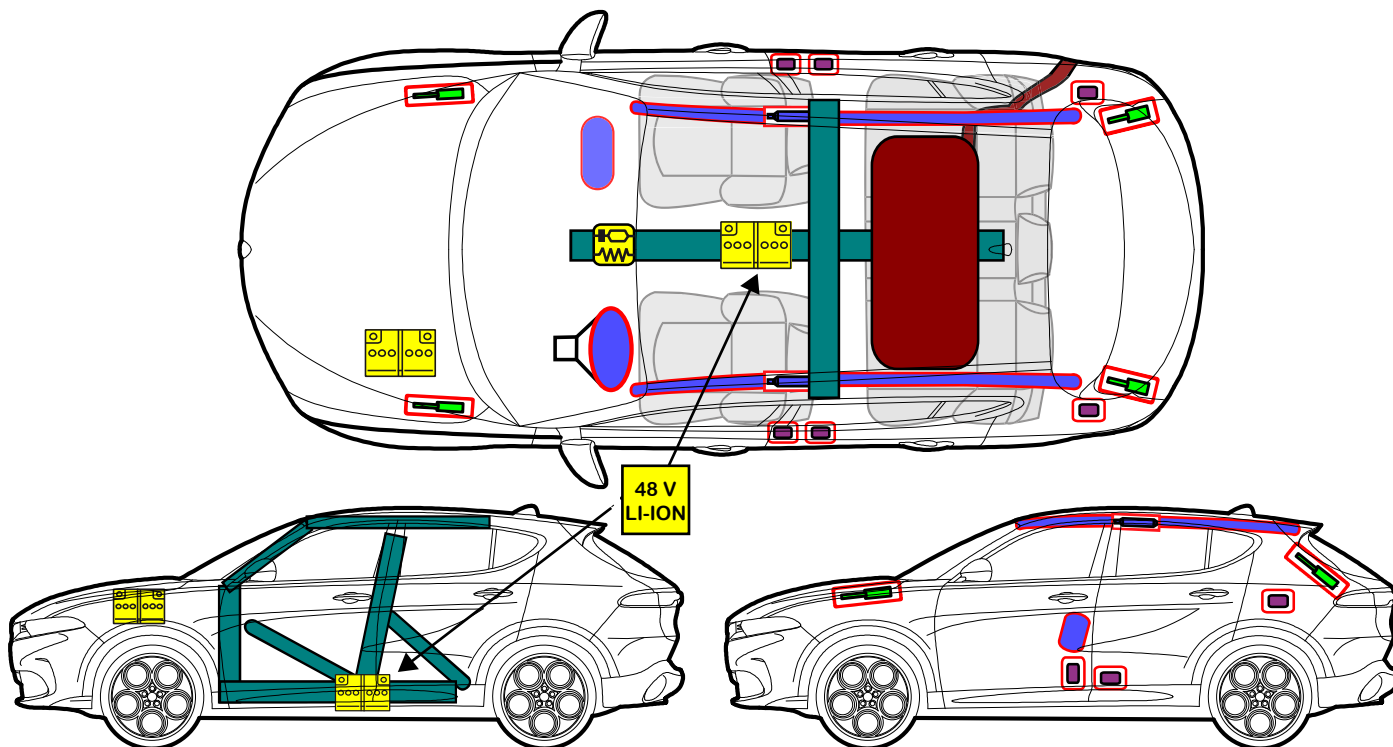

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/Preloaded spring		High strength zone		Zone requiring special attention		
	Low voltage battery		Ultracapacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/component		High voltage disconnection		Fuse box disabling high voltage system		Ultra capacitor, high voltage
	Fuel tank content gasoline								

1. Identification / recognition

- Location of the model name and type of driving power on the vehicle



- Power source: Lithium-ion batteries



THE LACK OF ENGINE NOISE DOES NOT MEAN THAT THE VEHICLE IS OFF.
THERE IS THE POSSIBILITY OF SILENT MOVEMENT OR INSTANTANEOUS RESTART UNTIL THE VEHICLE IS COMPLETELY DISABLED.

2. Immobilization/ stabilization/ lifting

■ IMMOBILISATION


If the 12V system is still active:

1. Lock the wheels and operate on the control to engage the parking brake.
2. Set the selector lever to Park (P) position.


1



2

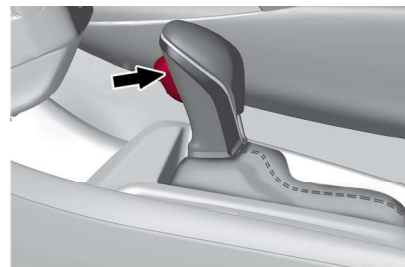

■ STABILISATION / LIFTING POINT

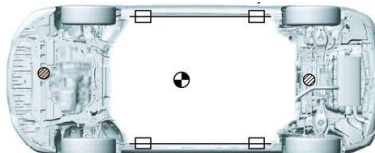

 LIFT POSITION

 SUPPORT POSITION

 CAR CENTER OF GRAVITY



Do not place support elements such as wooden blocks or air lifting devices under the exhaust system, fuel feed system and battery.
An inconvenience can cause fire, electric shock or gas leakage.

3. Disable direct hazards / safety regulations



1. Execute the key OFF

1

 
For Smart Key:



Press the START-ENGINE-STOP button with brake pedal NOT PRESSED



Remove the Smart Key.



ID No.

 
83_965_TONALE_000.00.000_EN_01_03.22_T_TM

Version No.


01

Page N°

2/4



1. Open the engine hood (A,B)
2. Disconnect the 12V battery ground cable (C)

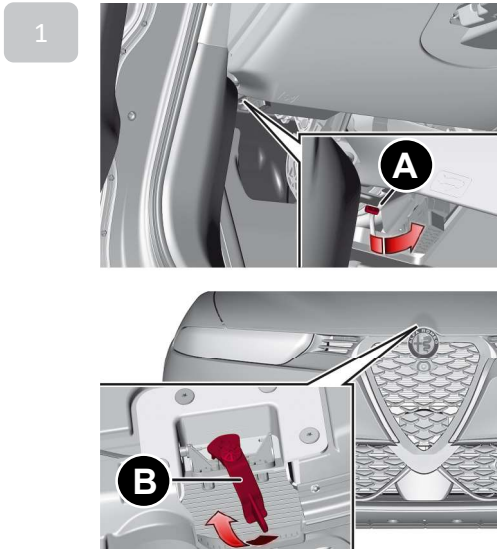

4. Access to occupants

■ Windows / Sunroof


- 1: Laminated glass
- 2: Tempered glass

■ Electric seats (optional)




Electric seats can operate only if the 12V battery in the engine compartment is connected.


■ Adjustable steering wheel

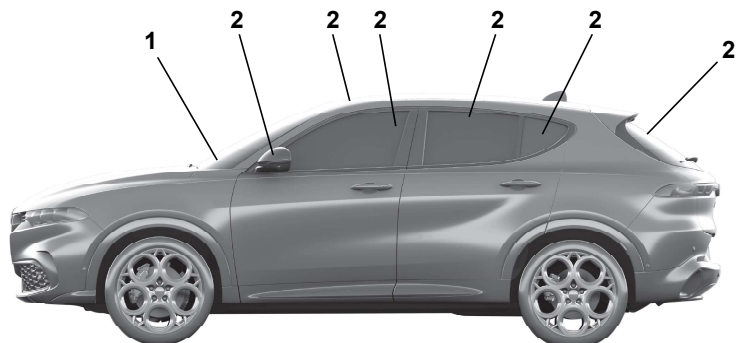

 5. Liquid / Solid / Gaseous energy storage devices



48V
lithium-ion battery

 

12 V battery



Fuel tank: 48L



6. In case of fire



Use water to estinguish fire from lithium-ion battery.
Apply and maintain a high volume of water for a period of time until there is no evidence of fire.

If it is not possible to apply water to the lithium-ion battery it is advisable to allow the battery to burn on its own.

7. In case of immersion



Work on the vehicle only after pulling it out of the water.

See Heading 3.

8. Towing / Transport / Storage



* Allowed only if the Electric Parking Brake is realesed.



PARK THE CAR AT A SAFE DISTANCE FROM THE OTHER VEHICLES

9. Important additional information

—