




GENESIS

Genesis G80

Sedan, 4 doors

From March 2020

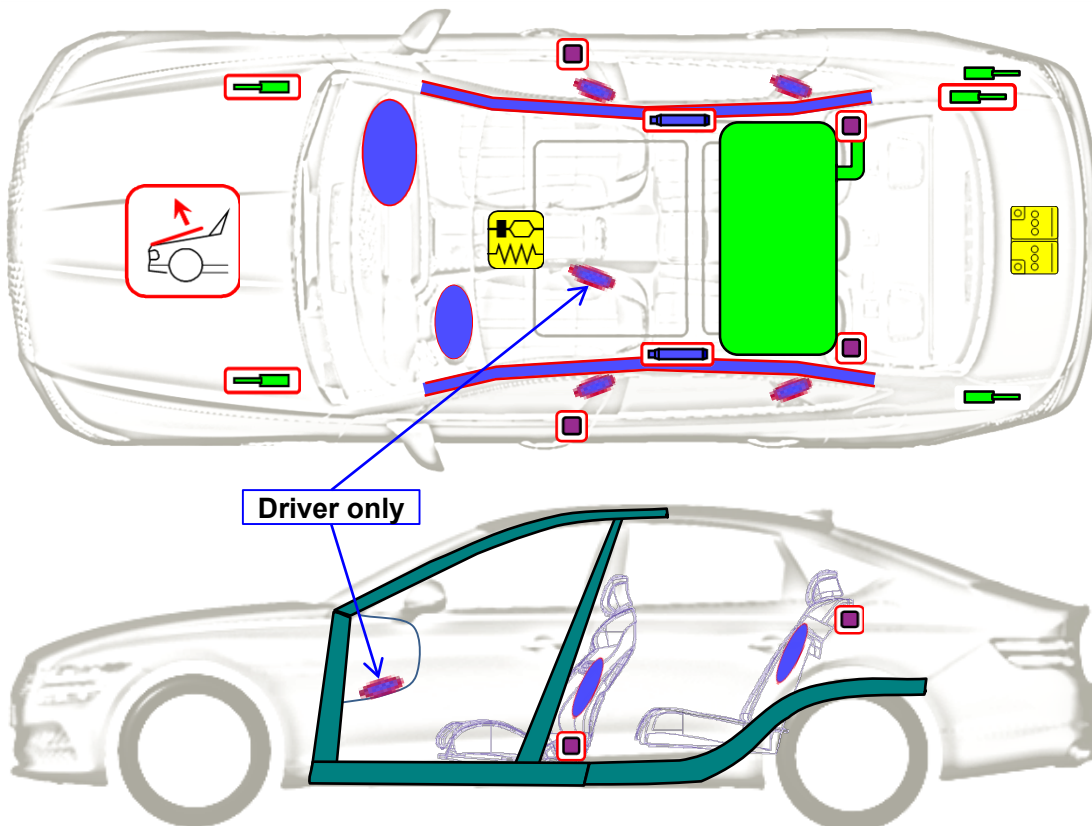


Driver only

Reserved for holes (paper version)


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage
ID No.			Version No.			Version date			Page
KMT-RG3-RSI-03-202101			03			01/2021			1 of 4

1. Identification / recognition

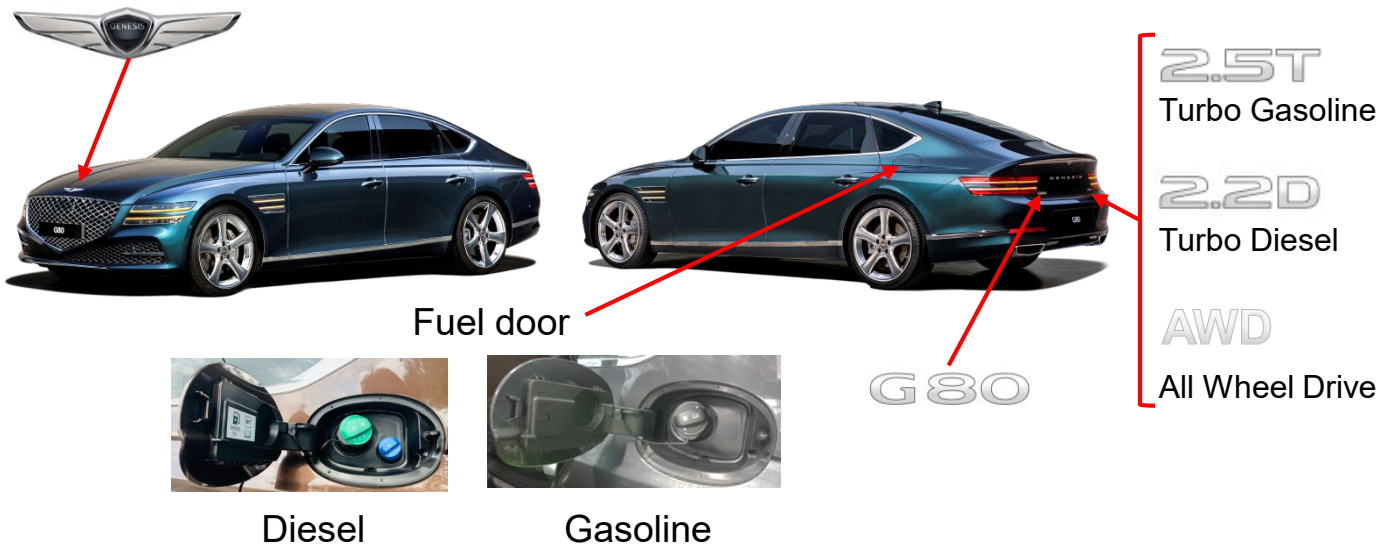


2. Immobilisation / stabilisation / lifting

■ Immobilisation

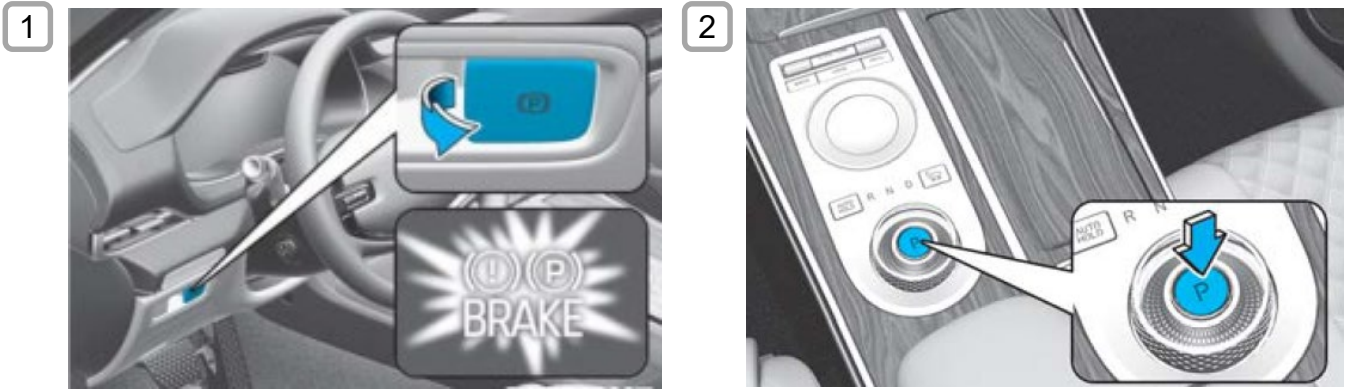

1. Chock the wheels and pull the switch to set the parking brake.
2. For automatic transmission vehicles, shift into park(P) gear.

■ Lifting positions at car underbody: ●

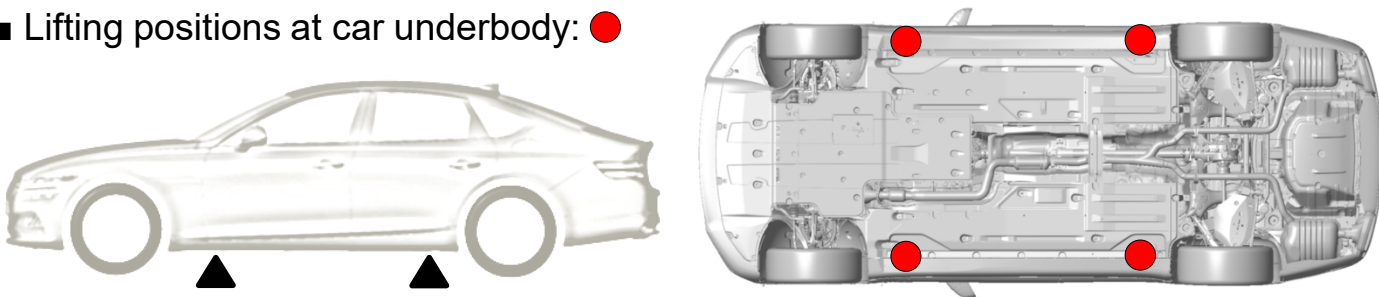

3. Disable direct hazards / safety regulations

■ Access to the battery



1. Press and hold the trunk open button located on the instrument panel to open the power trunk.

or



1. Press the trunk open button located outside the trunk while carrying the smart key to open the power trunk.



2. To access the battery, remove the clip (A) and release the cover (B).

■ Disabling procedure




- 1) Switch off the ignition
- 2) Disconnect the negative terminal (-)
- 3) Disconnect the positive terminal (+)


4. Access to the occupants

Glazing:

- 1 : Laminated
- 2+3: Tempered (Standard)
Laminated (Optional)
- 4+5: Tempered

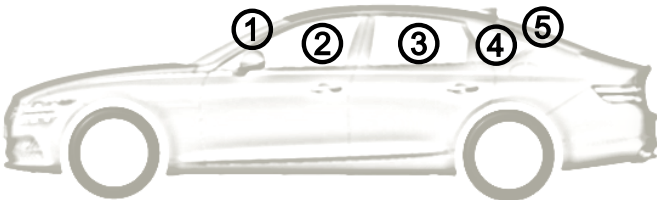

Hardened Steel:

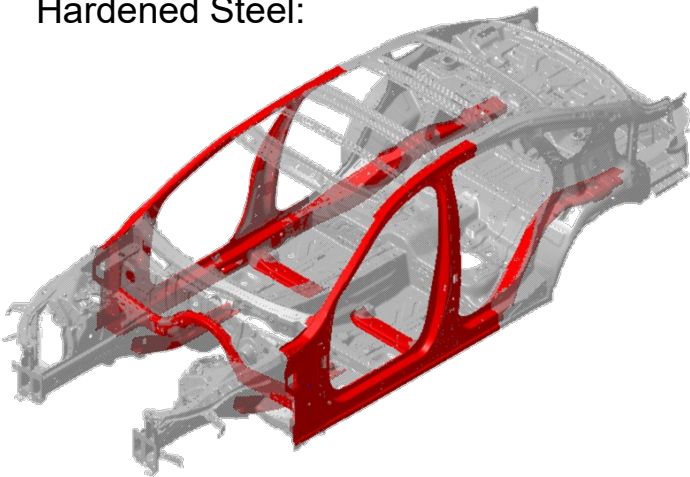

5. Stored energy / liquids / gases / solids

■ Fuel Tank

65ℓ

65ℓ

■ Battery




12 V

	ID No.	Version No.	Version date	Page
	KMT-RG3-RSI-03-202101	03	01/2021	2 of 4

6. In case of fire


Gas Strut

→ Risk of missile effect

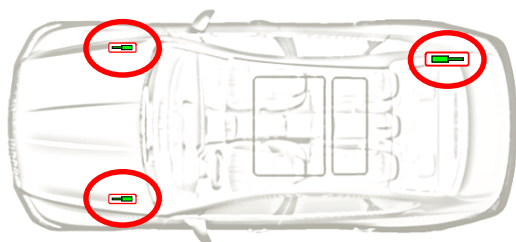



Pedestrian protection active system

→ Pyrotechnical actuators

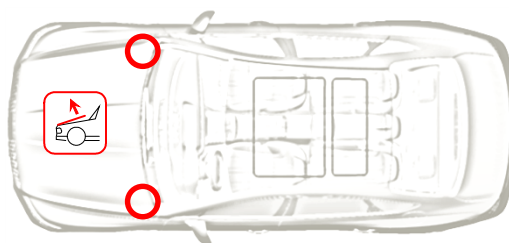


8. Towing / transportation / storage

OK :

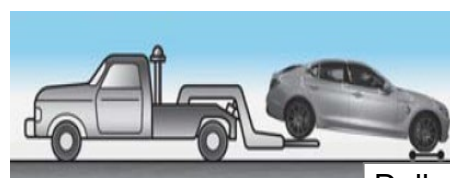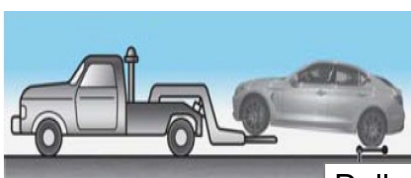

Notice: AWD (All Wheel Drive) vehicle must be towed with all wheels off the ground, either on a flatbed tow truck or using dollies.

Not OK :

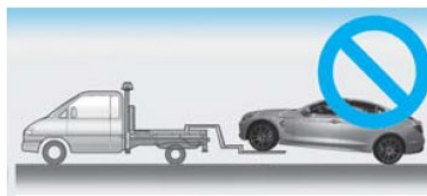

Notice :

Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment.
Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.


	ID No.	Version No.	Version date	Page
	KMT-RG3-RSI-03-202101	03	01/2021	2 of 4



Genesis Electrified G80
Sedan, 4 doors
From Oct. 2021



Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

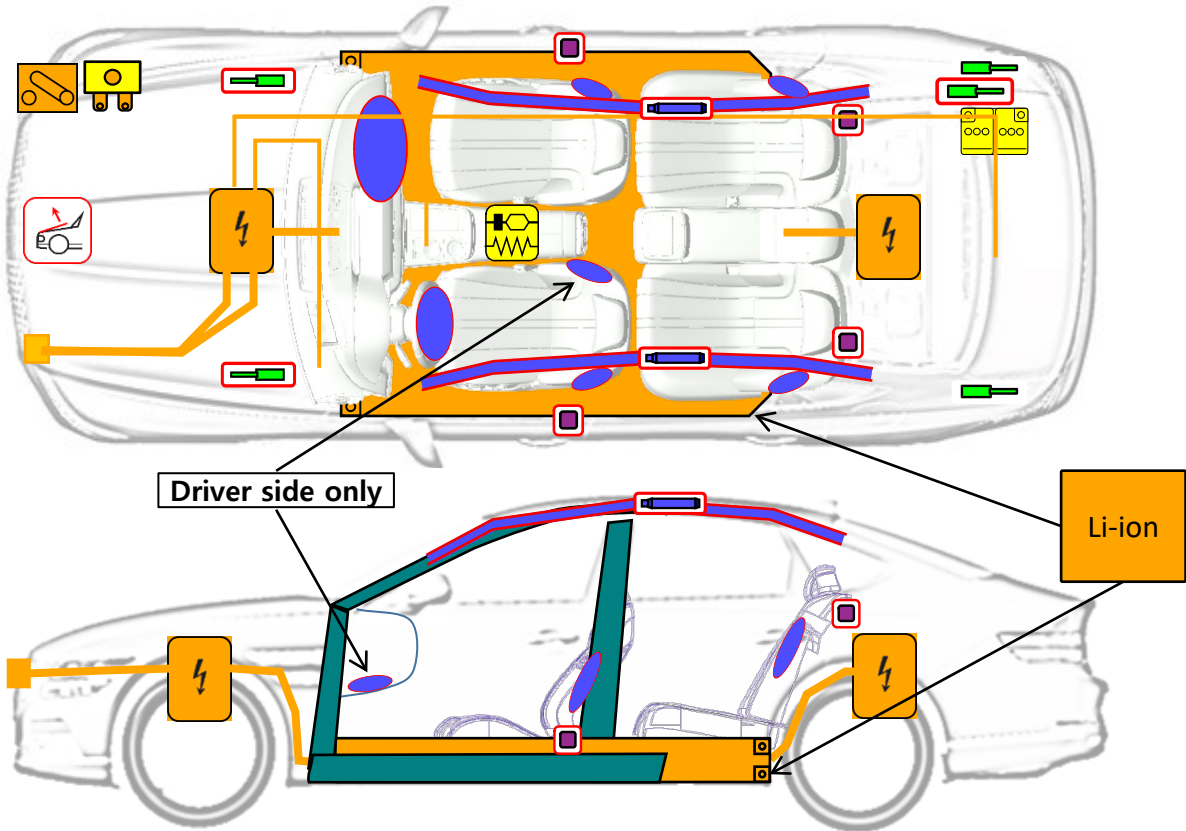

Reserved for holes (paper version)

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		High voltage component
	Battery low-voltage		Ultra-capacitor, low voltage		Fuel tank		Gas tank		Safety value
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra capacitor

1. Identification / recognition

Brand Emblem



Car Name

G80



2. Immobilisation / stabilisation / lifting


■ Immobilisation

1





1. Chock the wheels and pull the switch to set the parking brake.

2

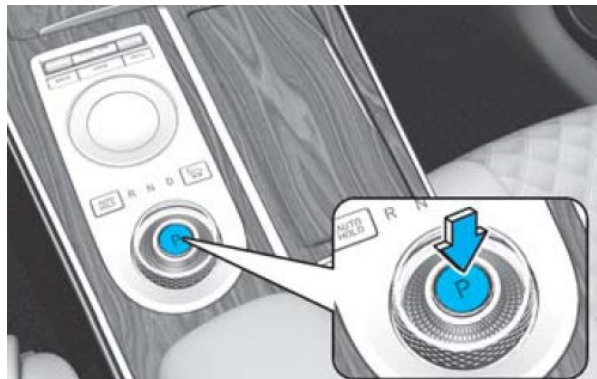

2. For automatic transmission vehicles, shift into park (P) gear.

■ Lifting points under the vehicle:

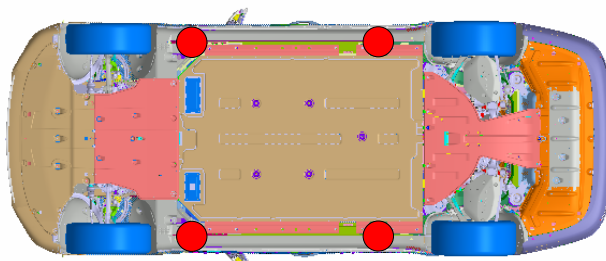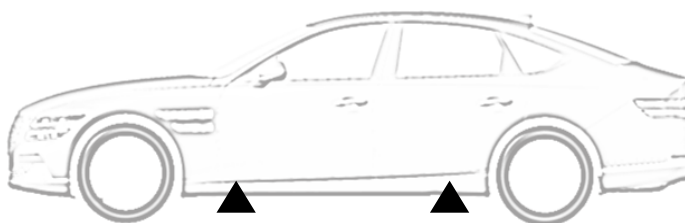

3. Disable direct hazards / safety regulations

■ Access to the battery



or



1. Press and hold the trunk open button located on the instrument panel to open the power trunk.


1. Press the trunk open button located outside the trunk while carrying the smart key to open the power trunk.





2. To access the battery, remove the clip (A) and release the cover (B).

■ Disabling procedure

Low voltage battery (12 V)

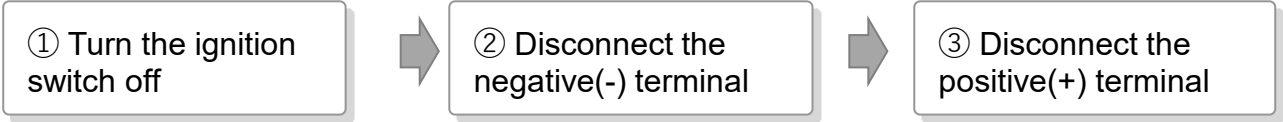

High voltage battery

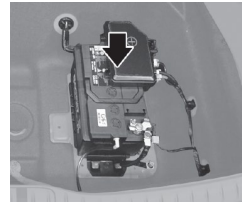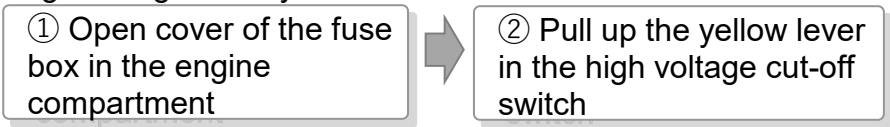


4. Access to the occupants

■ Seat adjustment

Forward and rearward adjustment

Seatback angle adjustment

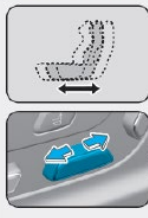

■ Steering column adjustment


Manual adjustment

Power adjustment




■ Side glazing:

Tempered (Standard)
Laminated (Optional)

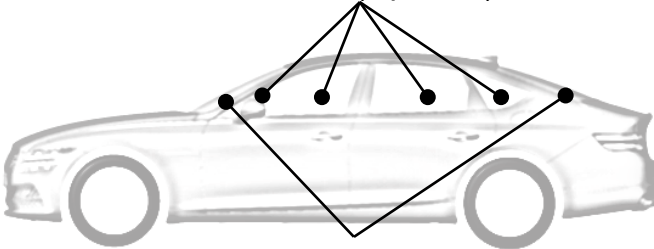


Windshield : Laminated
Rear Glass : Tempered

■ Vehicle Body
Hardened Steel:

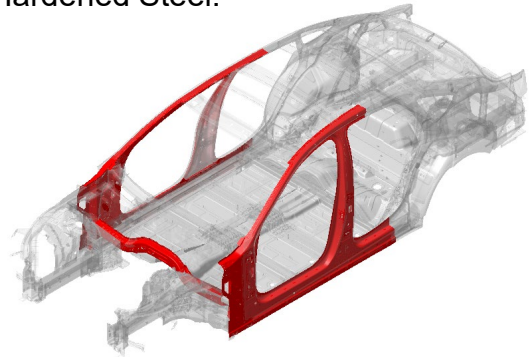


 5. Stored energy / liquids / gases / solids

	Standard: 522.7V		     
	12V		 
		Refrigerant amount	   
	R-134a	980g	
	R-1234yf	925g	



 
When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



6. In case of fire



 
Use large amount of water



BATTERY RE-IGNITION!

■ Gas Strut/ Preloaded spring

Risk of missile effect of hood and tailgate

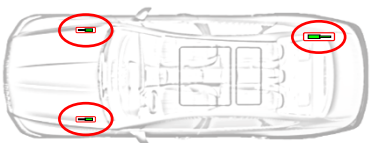


7. In case of submersion



Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.



8. Towing / transportation / storage

 OK :



Location front hook

Location rear hook

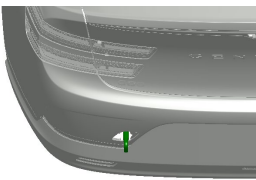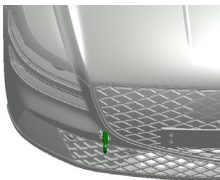

Not OK :



STORE AT SAFE DISTANCE FROM OTHER VEHICLES

10. Explanation of pictograms used

	Electric vehicle		Warning high voltage
	Caution		Risk of flammability
	Risk of corrosive material/substances		Risk of damaging human health
	Risk of an explosion		Risk of acute toxicity
	Air-conditioning component		Warning low temperature
	Use IR Camera (thermal imaging)		Use water to extinguish the fire
	Bonnet		