




BMW 4er-Reihe G23

Convertible
11/2020



Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

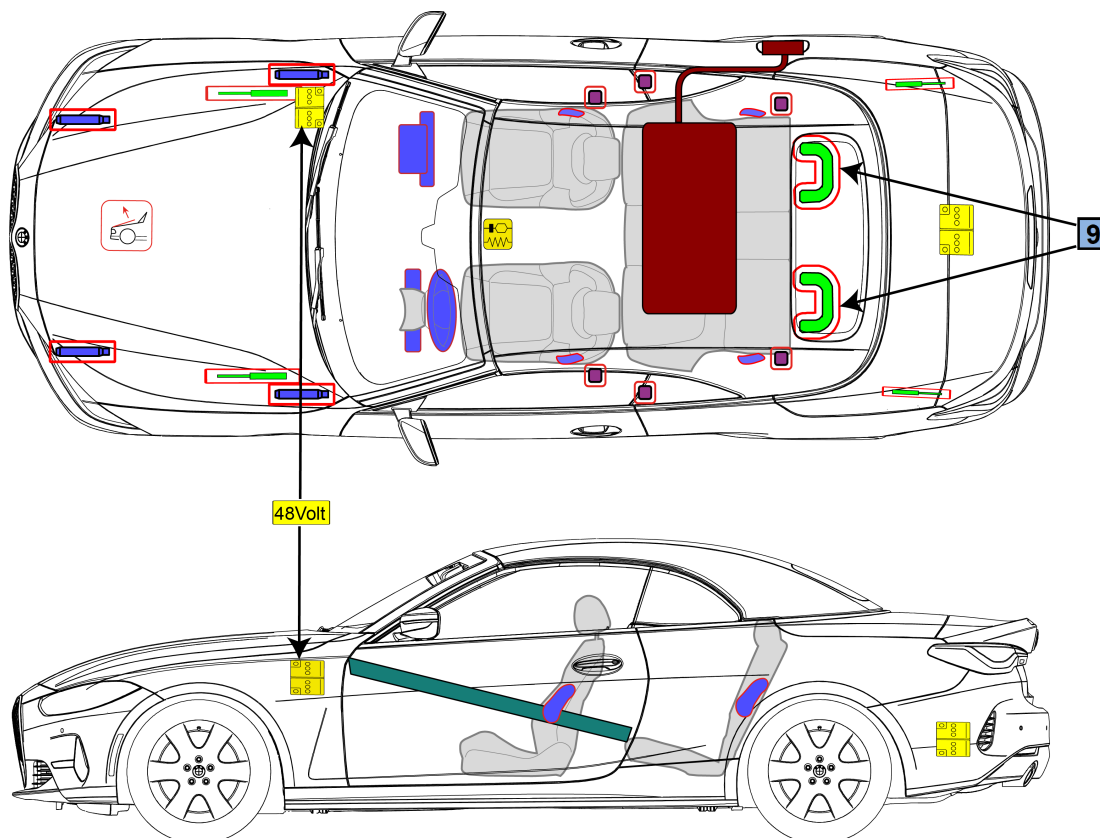

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Gas strut / Preloaded spring		High strength zone		Battery low voltage 12V/48V ¹		Fuel tank content gasoline/ethanol		

¹Switch off the ignition to avoid the risk of an electric arc when disconnecting.

1. Identification / recognition

2. Immobilisation / stabilisation / lifting

Immobilization

1. Press the "Start / Stop" button to turn off the vehicle



2. For automatic transmission: Press the "P" button





2. For manual transmission: Shift to first gear



3. Pull parking brake upwards



Stabilization points/lifting points

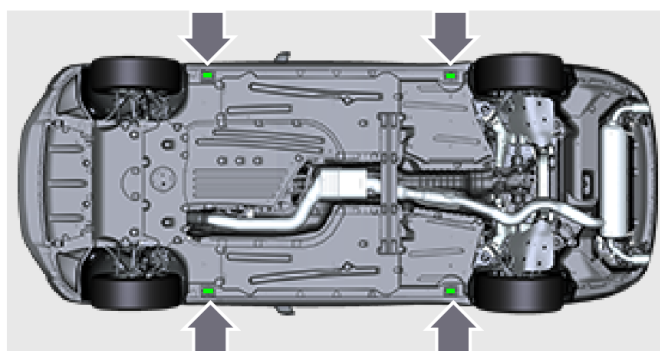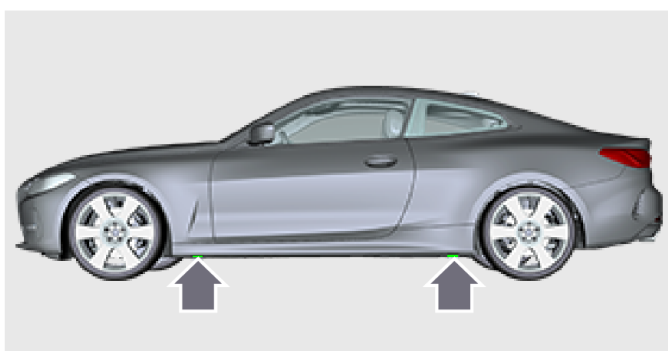


3. Disable direct hazards / safety regulations

4. Access to the occupants

Interfaces

- 1 Interfaces for removing the roof
- 2 Door lock
- 3 Door hinges

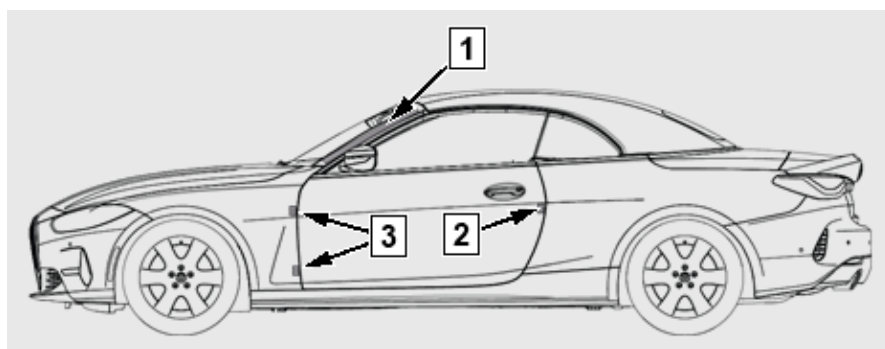

5. Stored energy / liquids / gases / solids

Identification of the high-voltage battery



Identification of the remaining high-voltage components



Fuel

Diesel engine: Diesel DIN EN 590

Gasoline engine: Gasoline 91 – 100 research octane number

6. In case of fire



Even after a fire, there is an electrical hazard. Injury hazard!

Use personal protective equipment identical to the equipment used for conventional vehicle fires.

7. In case of submersion

Vehicle partially or completely submerged in water

After the vehicle has been salvaged from the water, disconnect the low-voltage battery (negative terminal).

8. Towing / transportation / storage



9. Important additional information

The maximum amount of equipment for the vehicle is presented in this document.

The rollover protection extends in the event of a rollover to protect the occupants.