


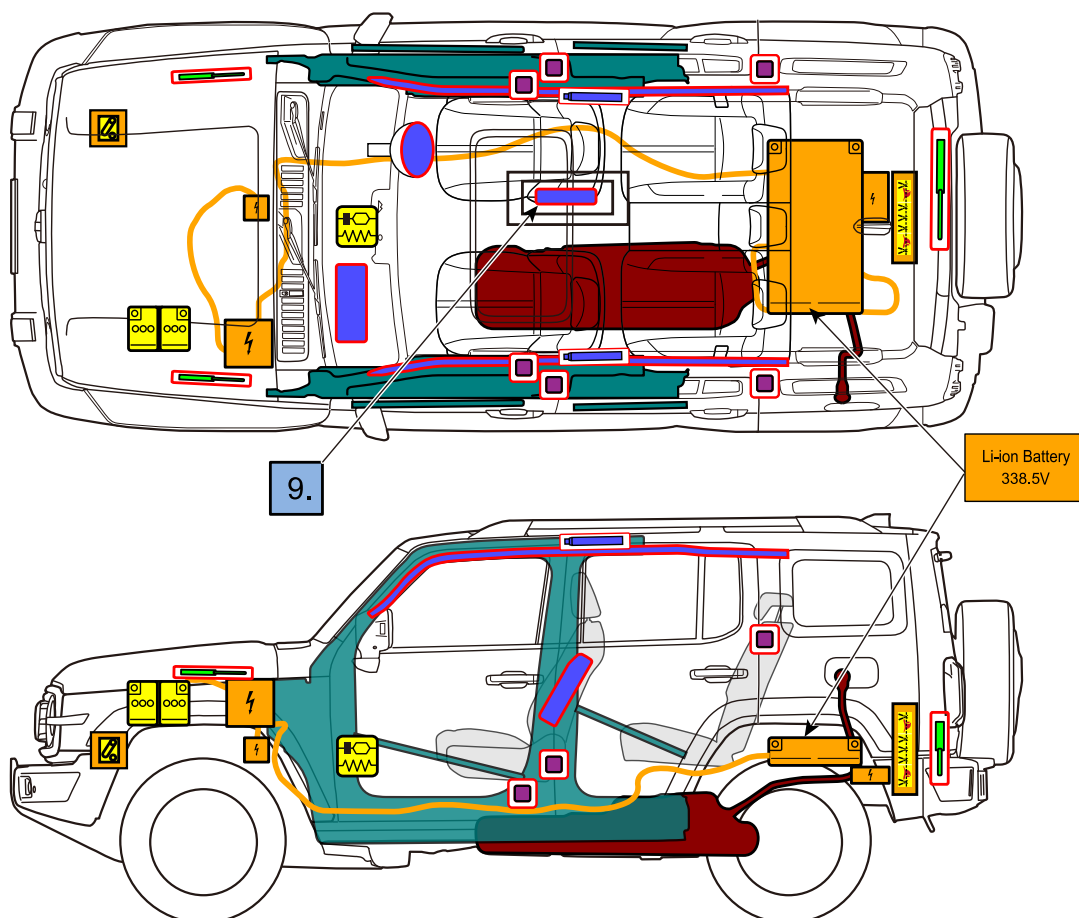

GWM TANK 300
SUV
From 2022



Legend

	Airbag		Airbag inflator/ stored gas inflator		Seat belt preten- sioner		SRS control unit
	Gas strut, preloaded spring		High strength zone		Zone requiring special attention		Battery, low-voltage
	High voltage power cable		Battery pack, high- voltage		Fuel tank content gasoline / ethanol		Low voltage device that disconnects high voltage
	Cable cut		High voltage compo- nent				

This overview shows the maximum range of equipment of the vehicle.

ID No.

Version No.

Page No.

LGW-GWM TANK-300HEV-1


V1

1/4

	GWM TANK 300 SUV From 2022		
---	---	---	--

1. Identification / recognition

 LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

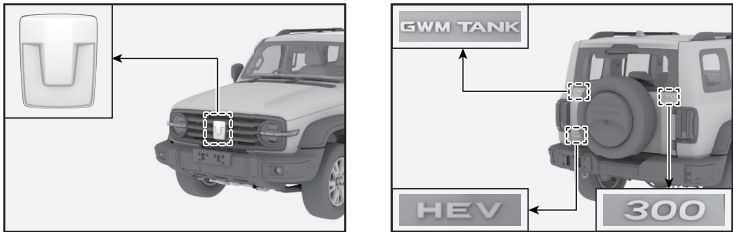


2. Immobilisation / stabilisation / lifting

Immobilize vehicle

- 1.Press the P button to engage the parking gear (P).
- 2.Pull up the EPB switch , ensure the vehicle is stationary.
3. Shut power off .


Stabilisation-lifting points

-  Jacking points
-  Support position

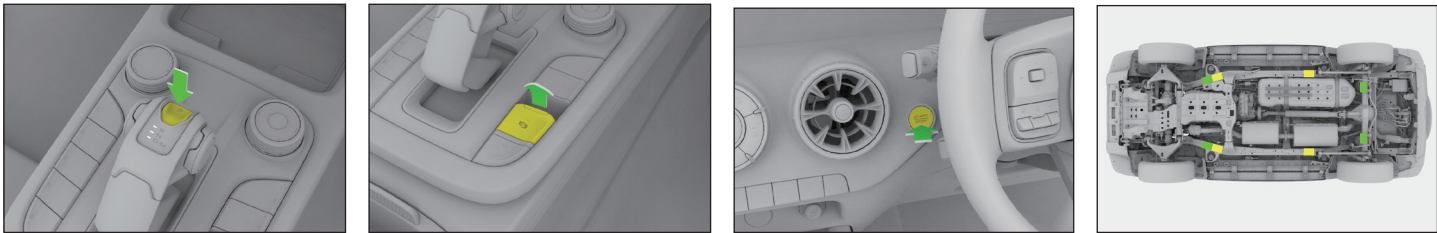


3. Disable direct hazards / safety regulations


Main disabling method

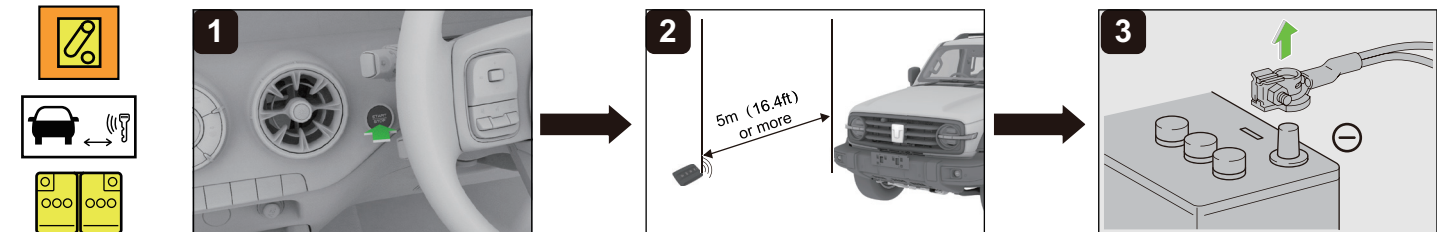

Alternative disabling method

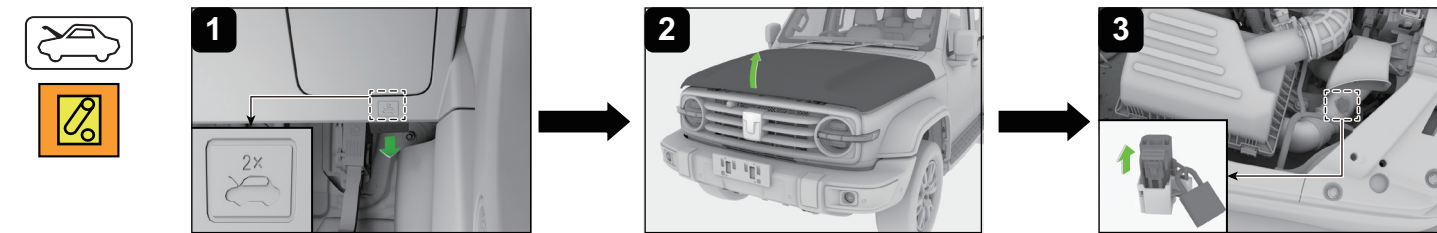


Alternative disabling method

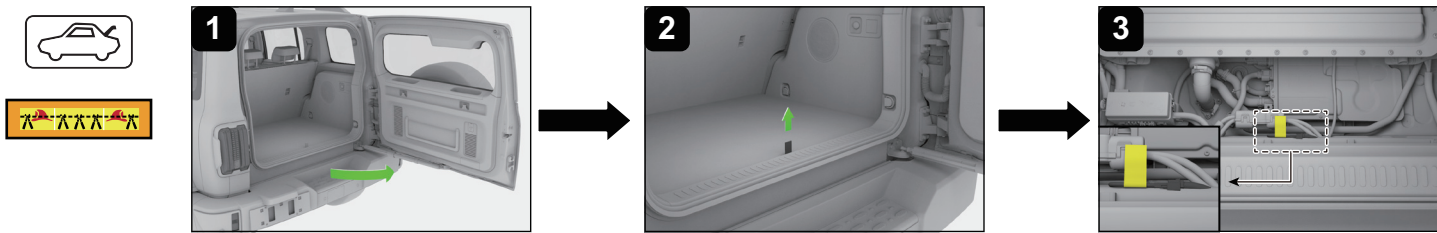

	GWM TANK 300 SUV From 2022		
---	---	---	--

Access to 12V battery

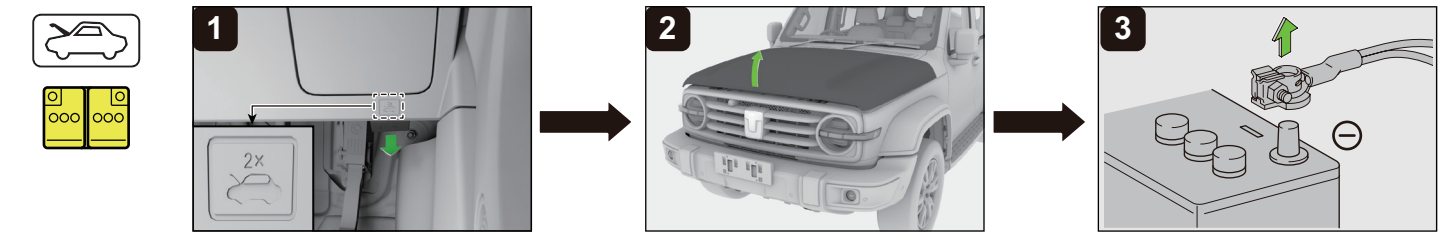



4. Access to the occupants

High strength steel in body

Electrical seat adjustment


Steering column adjustment

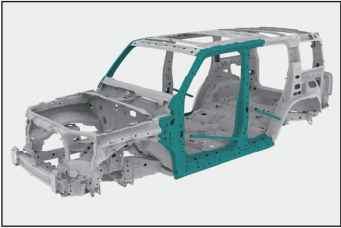

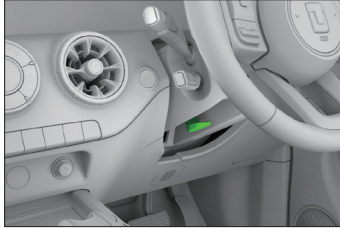WHEN THE 12 V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.

Glass types

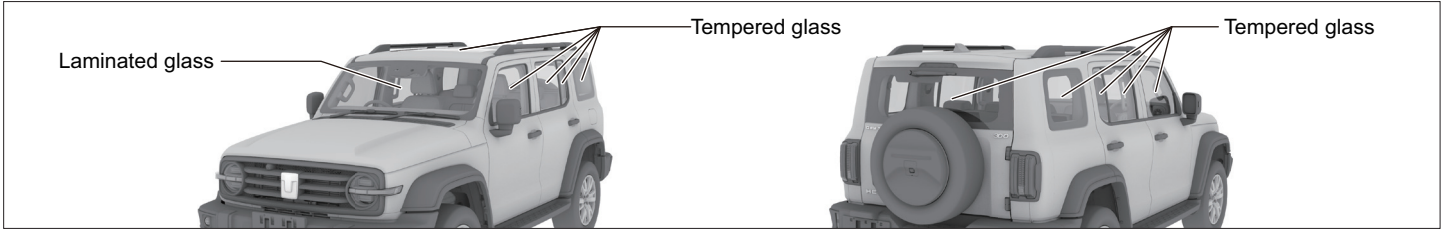


5. Stored energy / liquids / gases / solids

	  	12 V		 	75 L
	     	338.5V		 	600 g

6. In case of fire


USE LARGE AMOUNTS OF WATER

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.

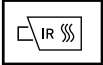


BATTERY RE-IGNITION !







7. In case of submersion

Proper personal protective equipment should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilize the vehicle and disable the vehicle before starting any operation (refer to chapter 3).


Tilt the vehicle to one side to allow water to drain out of the vehicle.

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-GWM TANK-300HEV-1	V1	3/4



	GWM TANK 300 SUV From 2022		
---	---	---	--

8. Towing / transportation / storage

Location front hook

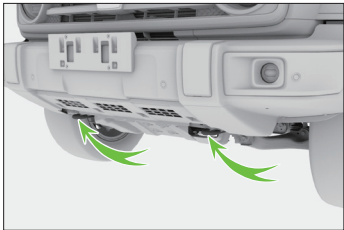

Location rear hook

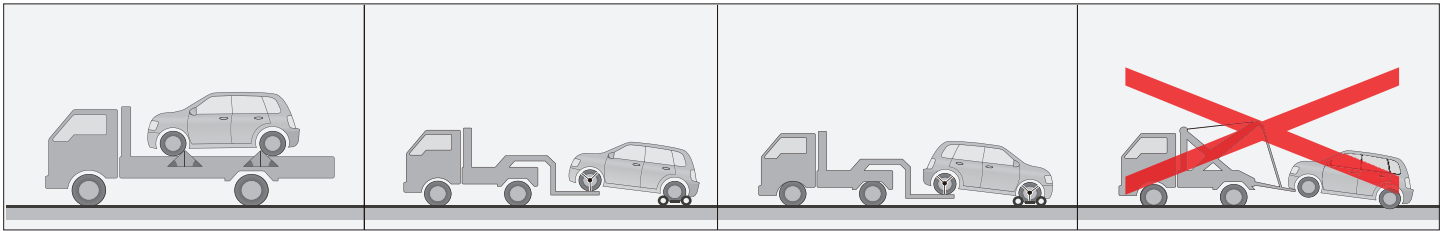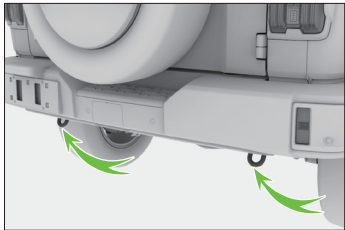



STORE AT SAFE DISTANCE FROM OTHER VEHICLES!





BATTERY RE-IGNITION !

9. Important additional information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark 9. on page 1.

10. Explanation of pictograms used

Pictogram	Designation	Pictogram	Designation	Pictogram	Designation
	Low voltage device that disconnect high voltage		Flammable		Hazardous to the human health
	Remove smart key		Explosive		Use water to extinguish the fire
	Bonnet		Corrosives		Boot
	Use thermal Infrared camera		Warning, Electricity		General warning sign
	Hybrid Electric Vehicle on fuel of liquid group 2		Air-conditioning component		Acute toxicity