
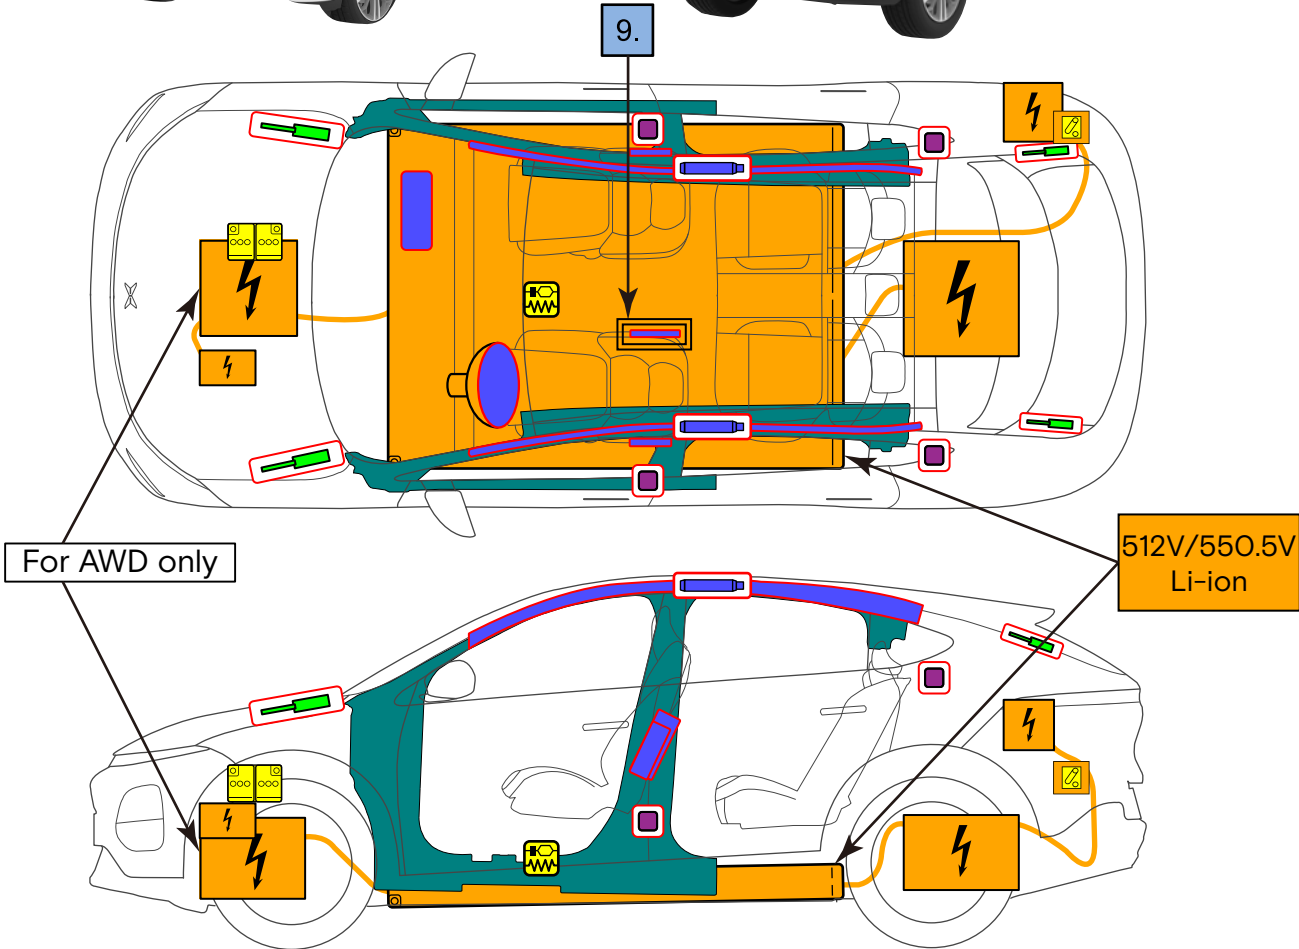
 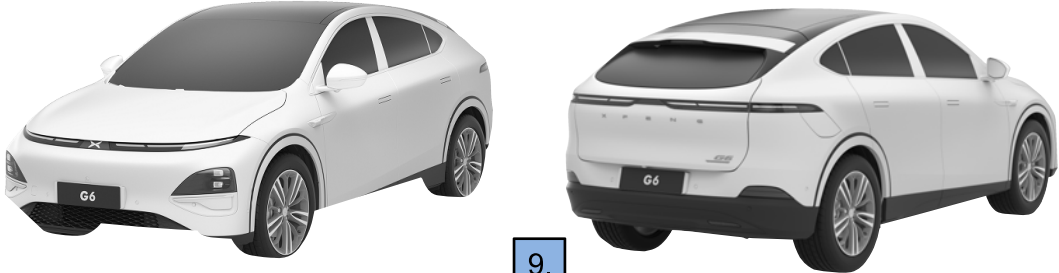
 
 


Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.




	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery Low Voltage		Gas strut/Preloaded spring		High strength zone		Zone requiring special attention
	High voltage component		Battery pack, high-voltage		High voltage power cable		Low voltage device that disconnects high voltage

	XPENG G6 5 doors / 5 seats / SUV From 2024		
--	---	---	--


1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

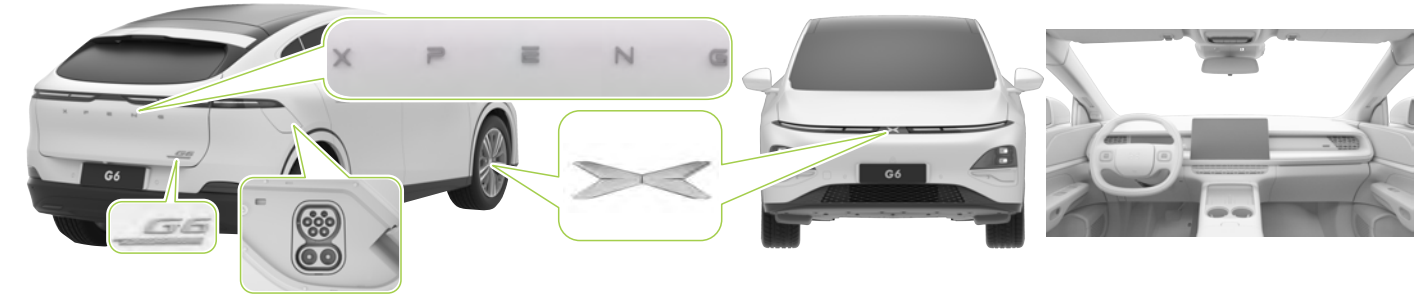

2. Immobilisation / stabilisation / lifting

 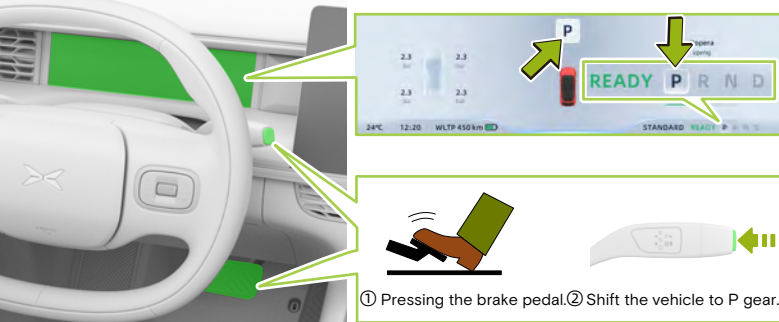
IMMOBILISE THE VEHICLE


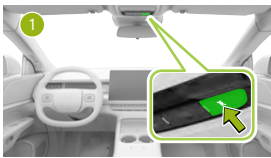
① Pressing the brake pedal.② Shift the vehicle to P gear.

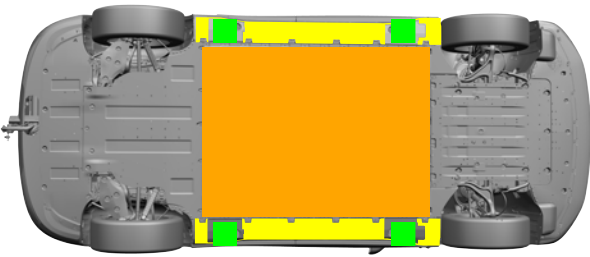LIFTING POINTS


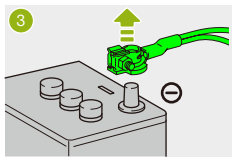
 Appropriate stabilisation-lifting points
 Appropriate stabilisation points vehicle on side

3. Disable direct hazards / safety regulations

MAIN DISABLING METHOD


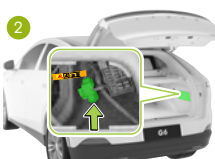
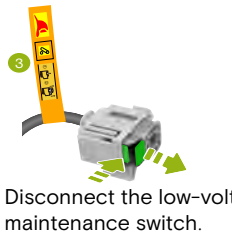


Press and hold for at least 5s.

 



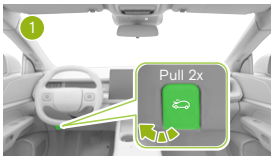
ALTERNATIVE DISABLING METHOD








Disconnect the low-voltage maintenance switch.

ACCESS TO 12V BATTERY




Pull the switch twice to open the hood.

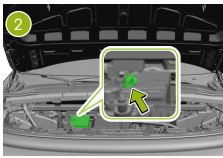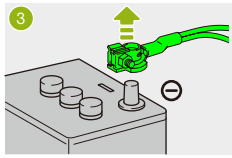




Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.

	XPENG G6 FROM 2024-PRESENT	ID No. L1N-G6-2024-ERS	Version No. 01	Page No. 2/4
--	--------------------------------------	---------------------------	-------------------	-----------------

	XPENG G6 5 doors / 5 seats / SUV From 2024		
--	---	---	--

4. Access to the occupants

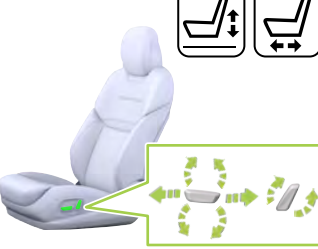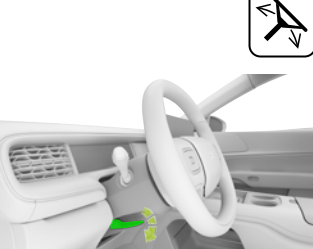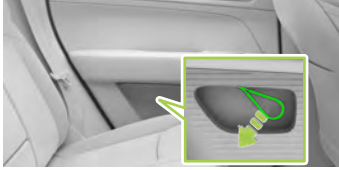Door opening  ① Press ② Pull Press the front end of the door handle. Pull the back end of the door handle to open the door.	Seat adjustment 	Steering column adjustment 	High strength body areas 
Internal opening of front doors  Pull the handle to open the door.	Internal opening of rear doors  Open the flap and pull the pull ring to open the door.	Glass types Laminated glass Tempered glass 	


WHEN THE 12V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.

5. Stored energy / liquids / gases / solids

		12V
		512V/550.5V
		R1234yf 1150g±15g


When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.


6. In case of fire

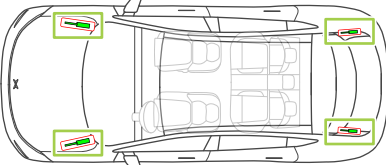 USE LARGE AMOUNTS OF WATER.	
  DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY!	
Gas strut/Preloaded spring Risk of missile effect of hood and tailgate  	


7. In case of submersion

Proper PPE should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilise the vehicle and disable the vehicle before starting any operation (see chapter 3).
Tilt the vehicle to one side to allow water to drain out of the vehicle.

8. Towing / transportation / storage

STORE AT SAFE DISTANCE FROM OTHER VEHICLES!

Location front hook

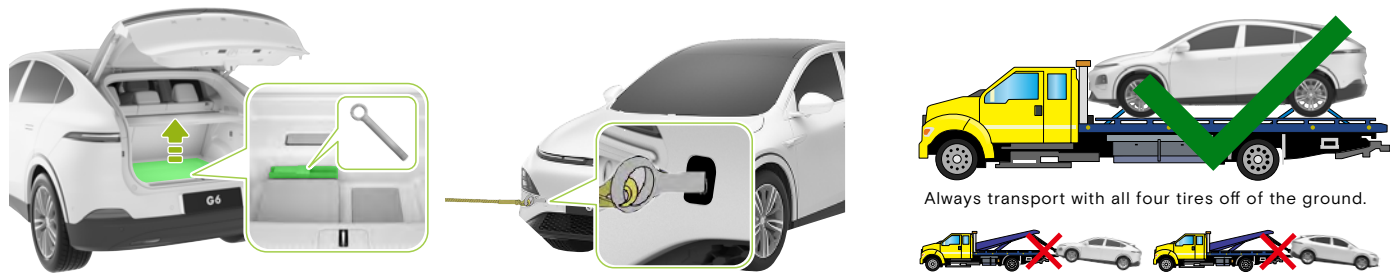

BATTERY RE-IGNITION!



9. Important additional information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark. 9. on page 1.

First Responder information can be found at <https://tis.xpeng.com>

10. Explanation of pictograms used

	Electric Vehicle		Air-conditioning component		Acute toxicity
	Warning, Electricity		Flammable		Remove smart key
	General warning sign		Hazardous to the human health		Seat height adjustment
	Use water to extinguish the fire		Corrosives		Seat adjustment, longitudinal
	Use thermal Infrared camera		Explosive		Steering wheel, tilt control
	Bonnet		Environmental hazard		Warning; low temperature
	Boot				