



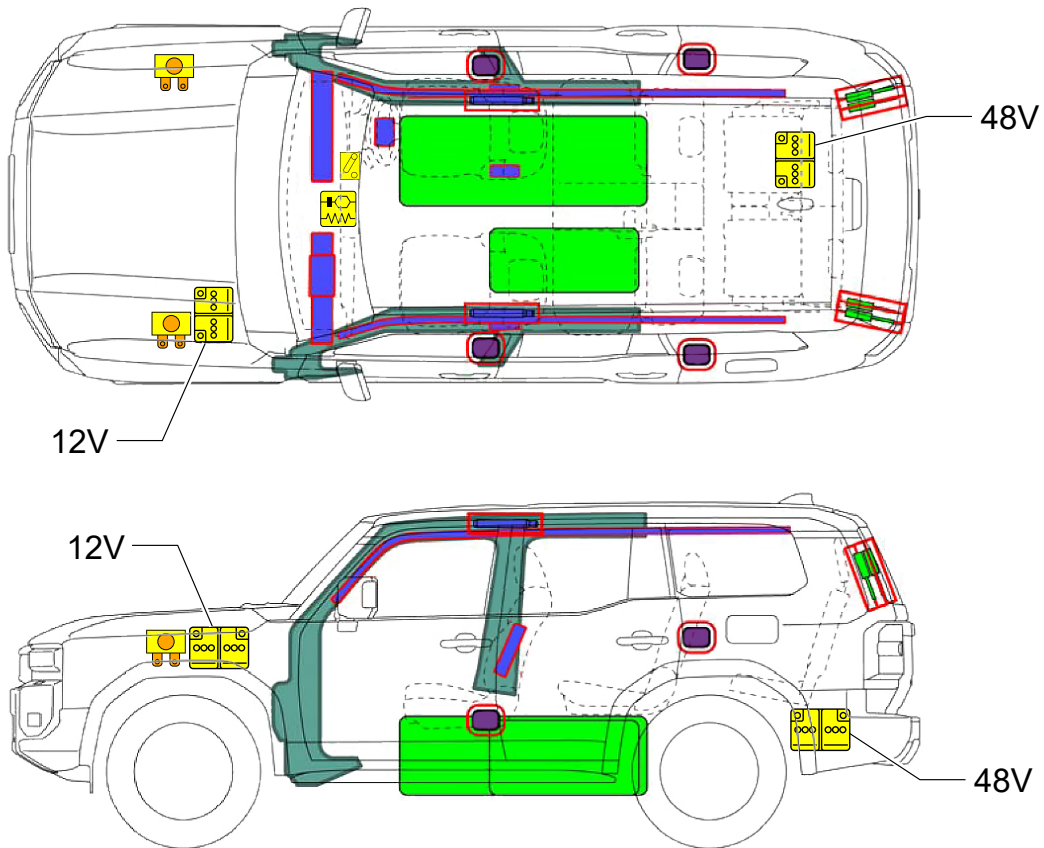

TOYOTA LAND CRUISER / LAND CRUISER PRADO
5 doors / 2 seats, 5 seats or 7 seats / wagon
2024-01

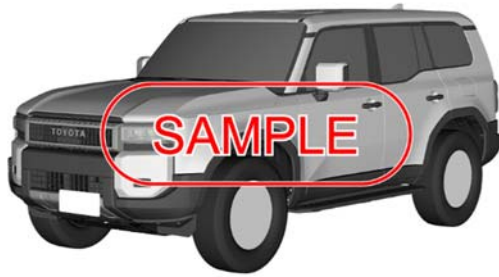


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Gas strut / Preloaded spring		High strength zone						
	Battery low voltage		Fuel tank						
	Device to shut down power in vehicle		Fuse box						
ID No.			Version No.		Version date		Page		
LANDCRUISERPRADODE250			02		04 / 2024		1 / 4		

1. Identification / Recognition





Lack of engine noise does not mean vehicle is off. Silent movement or instant restart capability exists until vehicle is fully shut down.

■ Location of vehicle badges

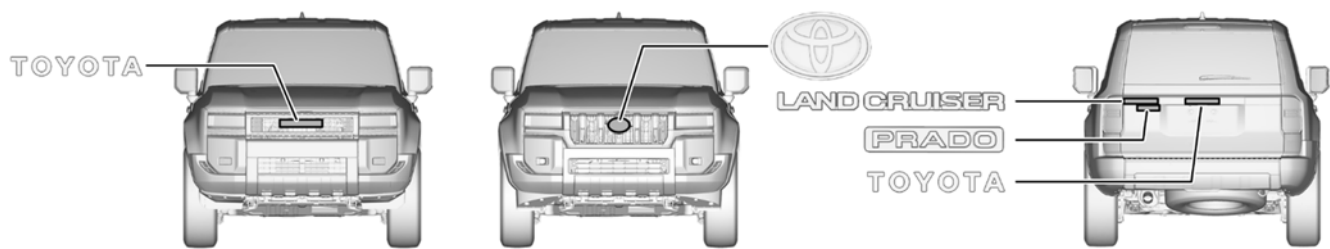

2. Immobilisation / Stabilisation / Lifting


■ Completely immobilize the vehicle

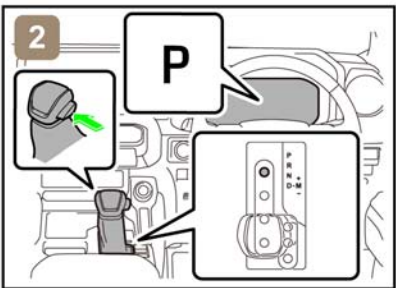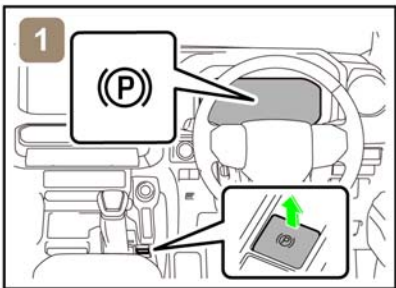

- 1) Chock the wheels and engage the parking brake.
- 2) Move the shift lever to the park (P) position.

■ Stabilisation-lifting point

Place cribbing such as wooden blocks at the four points under the front and rear pillars.

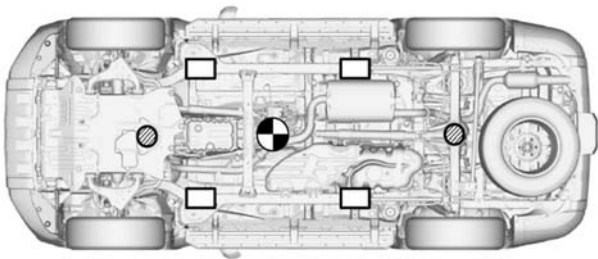

● Extra Reinforced Lifting Points

□ Standard Jack Locations

⊗ Vehicle Center of Gravity



Do not place cribbing such as wooden blocks or rescue air lifting bags under the exhaust system or fuel system. Doing so may result in fuel leaks or fire.

3. Disable direct hazards / Safety regulations

- If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.
- Power door lock

Power window

Power seat
- Power tilt and telescopic steering

Electric parking brake


Power back door
- Sliding roof

Panoramic moon roof

When the 12 V battery is disconnected, electrical components cannot be operated.


- Perform procedure Main or Alternative to completely shut off the vehicle.

<Main Procedure>

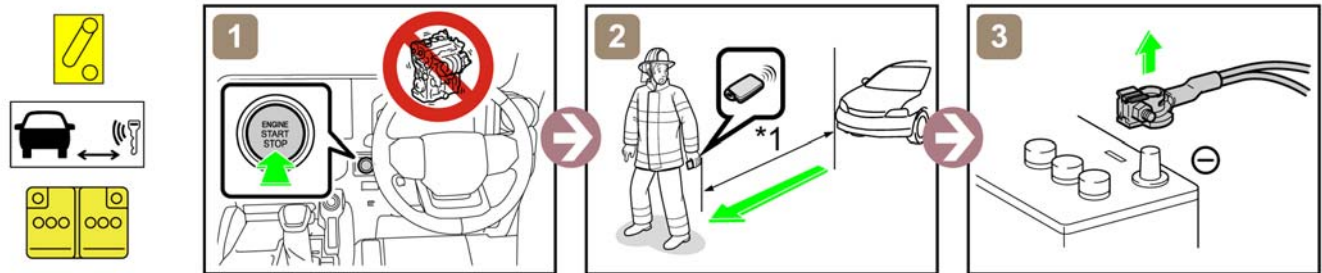


*1: 5 m (16.4 ft) or more

<Alternative Procedure>

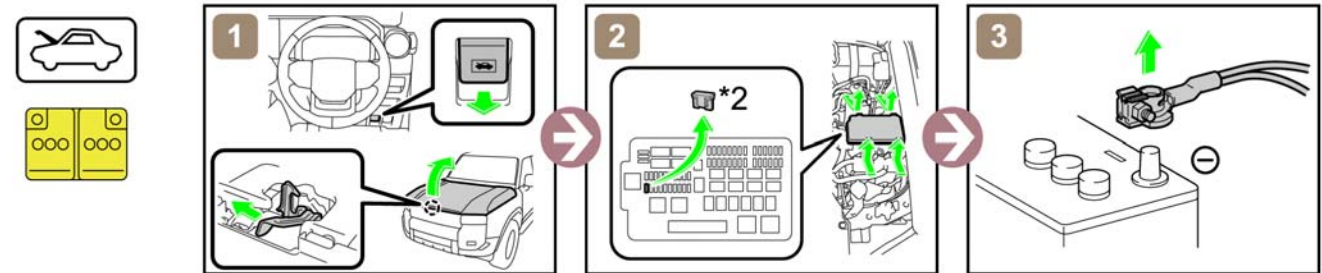


*2: EFI NO.2 FUSE (7.5 A BROWN)

- Access to 12 V Battery

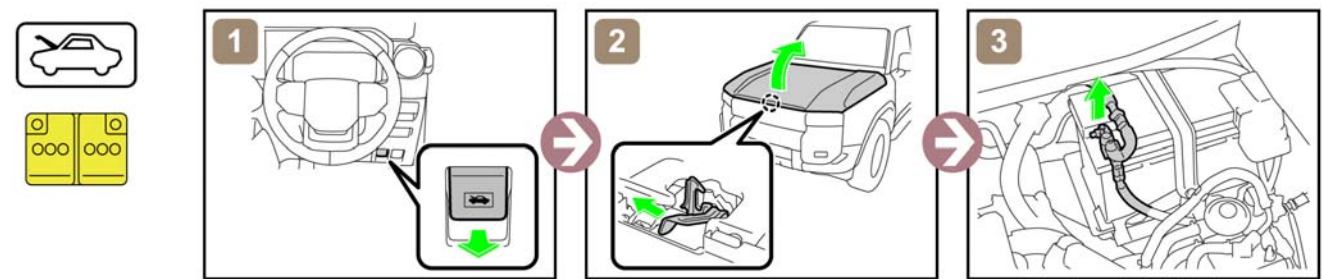

4. Access to the occupants

- Window Glass

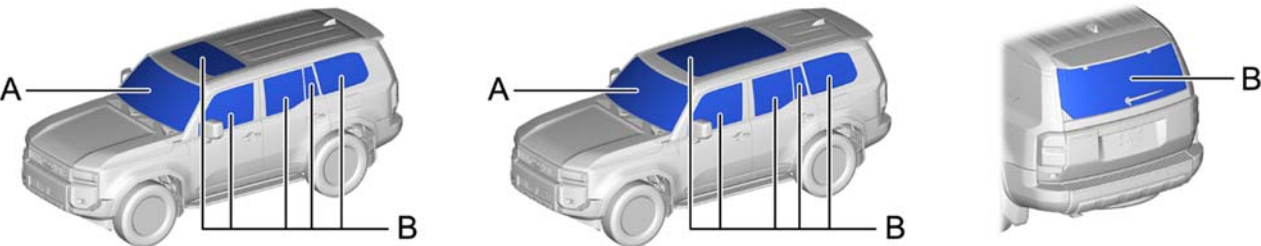

A	Laminated	B	Tempered
---	-----------	---	----------

5. Stored energy / Liquids / Gases / Solids



12 V Battery, 48V Battery



Diesel Tank: 80 L / 110 L (80 L, 30 L)



 
Always wear appropriate personal protective equipment (PPE) when dealing with any of these items.

6. In case of fire



USE COPIOUS AMOUNTS OF WATER

If it is difficult to apply copious amounts of water to the 48V battery, it is recommended to allow the 48V battery to burn itself out.



RE-IGNITION POSSIBLE !






7. In case of submersion



Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / Transportation / Storage

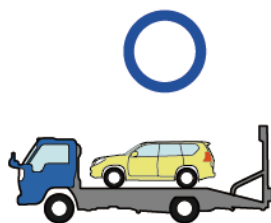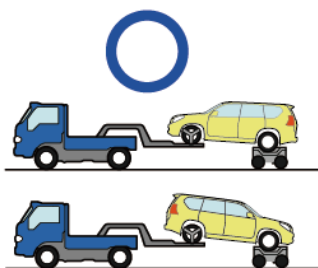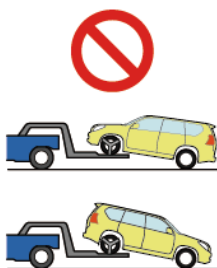

RE-IGNITION POSSIBLE !

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.

9. Important additional information

For further details, please refer to “Emergency Response Guide”.

	ID No.	Version No.	Version date	Page
	LANDCRUISERPRADODE250	02	04 / 2024	4 / 4