




Honda HR-V e:HEV
Type: 5dr SUV
(2021 -)

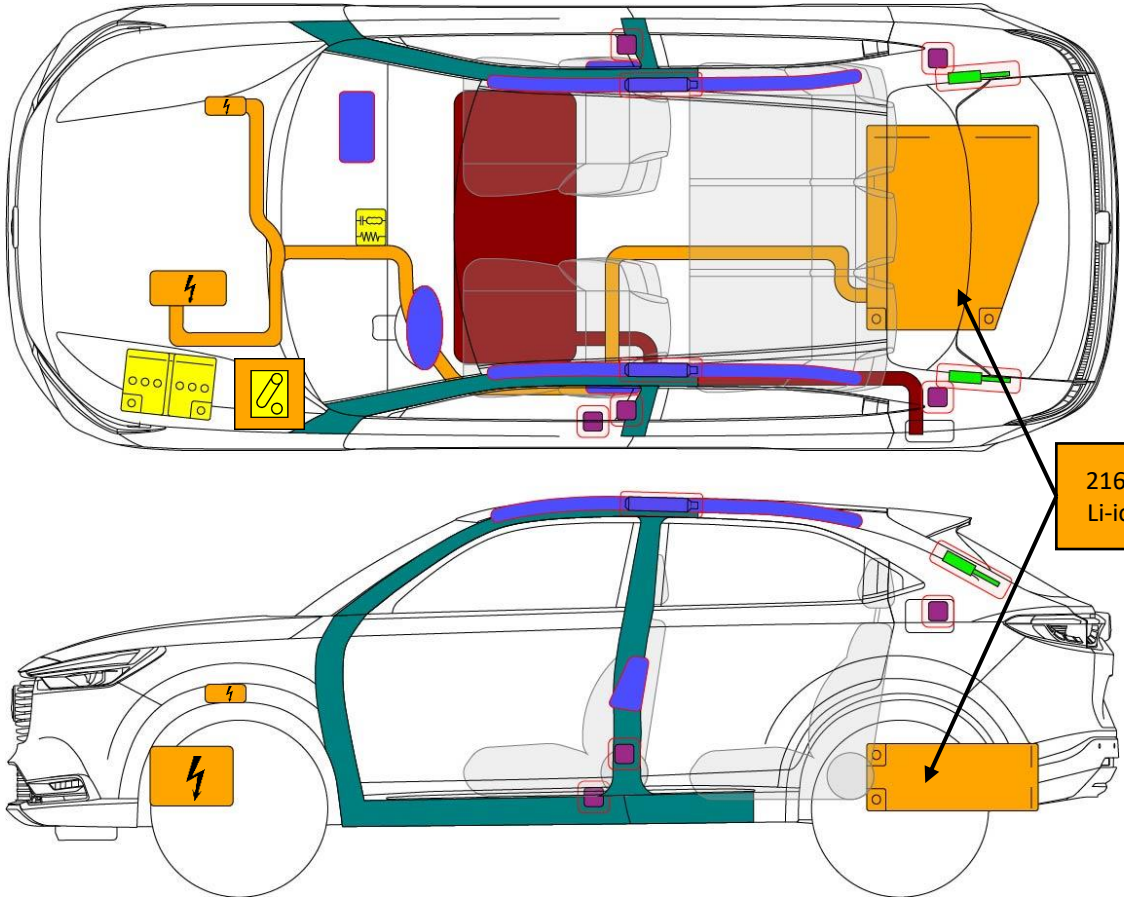

 Airbag	 Stored gas inflator	 Seat belt pretensioner	 SRS control unit	 Pedestrian protection active system
 Automatic rollover protection system	 Gas strut/Preloaded spring	 High strength zone	 Zone requiring special attention	
 Battery low voltage	 Ultra-capacitor, low voltage	 Fuel tank	 Gas tank	 Safety valve
 Battery pack, high-voltage	 High voltage power cable	 High voltage device that disconnects high voltage	 Fuse box disabling high voltage	 High voltage ultra-capacitor
 High voltage power component	 Low voltage device that disconnects high voltage	 Fuel tank content gasoline/ethanol		

Honda HR-V e:HEV Type: 5dr SUV (2021 -) – Additional Pages

1. Identification / Recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.


Brand



Model name



2. Immobilization / Stabilization / Lifting

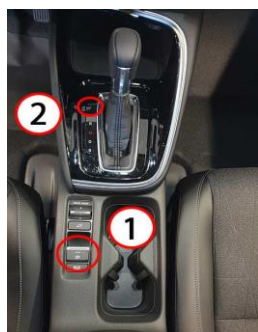


Immobilize vehicle:

1. Block wheels and set parking brake;
2. Move the shift lever to the P (park) position.


Lifting points:

-  Appropriate lifting points;
-  High voltage battery;

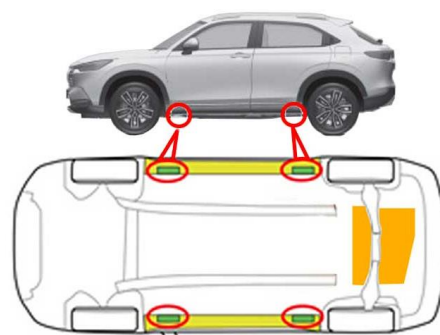


3. Disable direct hazards / Safety regulations

 
1. Deactivation of high voltage system, Main Method




Switch OFF

 

 2. Deactivation of high voltage system, 2e Method



2. Deactivation of high voltage system, 2e Method continuation

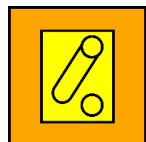

Safety regulations:



Always assume the vehicle is powered, even if it is silent!
Make sure that the vehicle is immobilized and the propulsion system is deactivated;
Never touch, cut, or open any orange high voltage power cable or high voltage component;
In case of a collision with airbag deployment and/or seat belt pretensioner activation, the propulsion system will be disabled. The restraint systems are still active.

4. Access to the occupants

Seat adjustment




Steering column adjustment




Glass types:

- A. Laminated glass.
- B. Tempered glass.

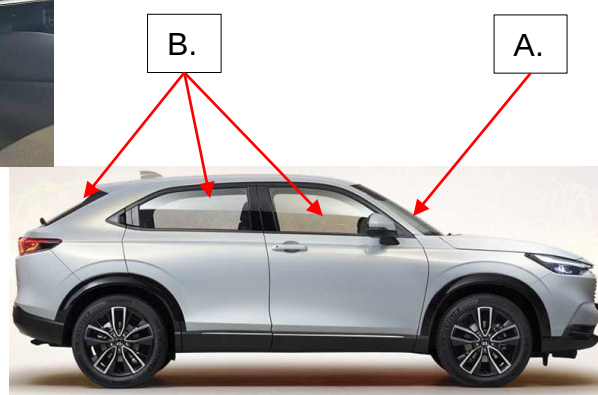

 
5. Stored energy / Liquids / Gases / Solids

	216V	     
	12V	 
	R-1234yf 395-445 g	   
	40L	 

6. In case of fire



 USE LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF BATTERY RE-IGNITION /
DELAYED IGNITION!

7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system;
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3).

8. Towing / transportation / storage

Location tow hook




Location front hook




Location rear hook



Towing

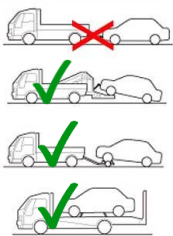

 STORE VEHICLE IN AN OPEN-AIR PARKING AT SAFE $\geq 5\text{M}$
DISTANCE FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF BATTERY RE-IGNITION /
DELAYED IGNITION!

9. Important additional information

- No other important information;

10. Explanation of pictograms used

	Remove smart key		Hybrid Electric Vehicle on fuel of liquid group 2
	Warning high voltage		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Acute toxicity
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Corrosives
	Use thermal infrared camera		Bonnet