



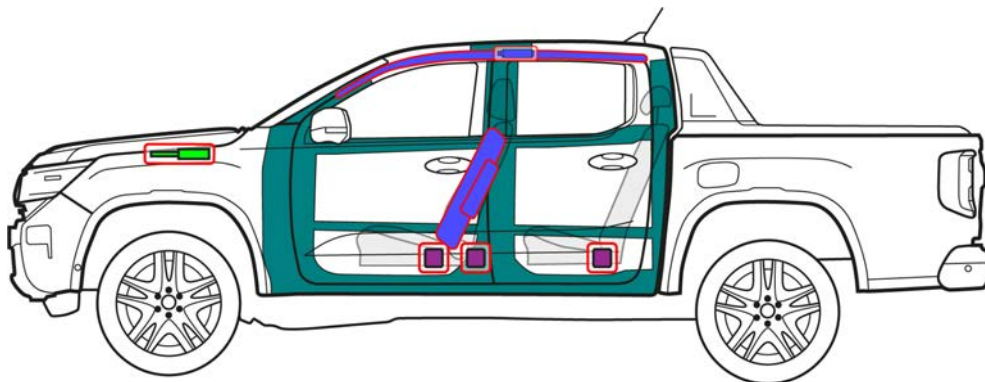

|                                                                                     |                     |                                                                                     |                     |                                                                                     |                        |                                                                                      |                  |                                                                                       |                              |
|-------------------------------------------------------------------------------------|---------------------|-------------------------------------------------------------------------------------|---------------------|-------------------------------------------------------------------------------------|------------------------|--------------------------------------------------------------------------------------|------------------|---------------------------------------------------------------------------------------|------------------------------|
|  | Airbag              |  | Stored gas inflator |  | Seat belt pretensioner |  | SRS control unit |  | Gas strut / preloaded spring |
|  | High strength zones |  | Battery low voltage |  | Fuel tank              |                                                                                      |                  |                                                                                       |                              |

## 1. Identification / recognition

Logo

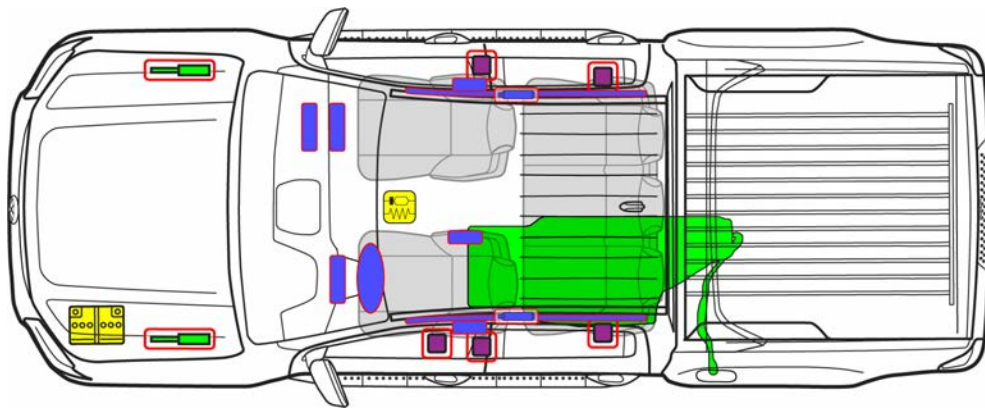

styling bar optional




## 2. Immobilization / stabilization / lifting

### Immobilize the vehicle

Apply electric or mechanical parking brake  
With a manual gearbox: move the gear selector lever to the neutral position.



### Lifting points

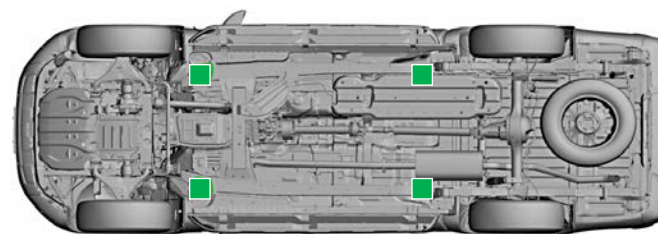

suitable lifting points

### Turn off the ignition



Press the START-STOP button on the steering column or remove the ignition key



A key card or a smartphone app can also be used instead of a remote control key.

## 3. Disable direct hazards / safety regulations


### Disconnect the 12-volt battery



In the engine compartment  
Disconnect the negative (-) terminal of the battery



## 4. Access to the occupants

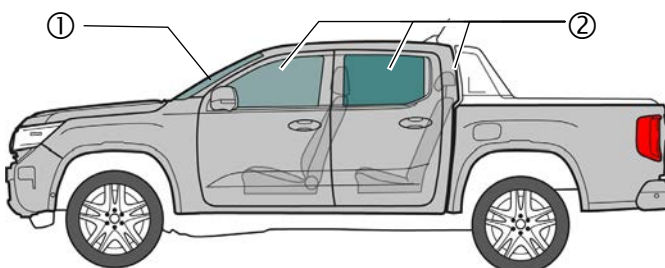

### Glas types:

- ① Laminated safety glass
- ② Toughened safety glass

electrical seat-adjustment




mechanical seat adjustment



mechanical steering column adjustment



## 5. Stored energy / liquids / gases / solids

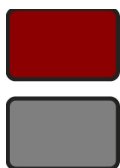

petrol or diesel max. 80 l



12 V

## 6. In case of fire



## 7. In case of submersion

Allow the water to drain off after the vehicle has been recovered. Wear suitable safety equipment.

## 8. Towing / transportation / storage



Do not tow a vehicle that has been involved in an accident on its drive axles.



## 10. Explanation of pictograms used



flammable



corrosive



Hazards to the  
human health



Environmental  
hazard



Diesel vehicle



Petrol vehicle



Use water to extin-  
guish the fire



Remove smart  
key



Release the  
bonnet