
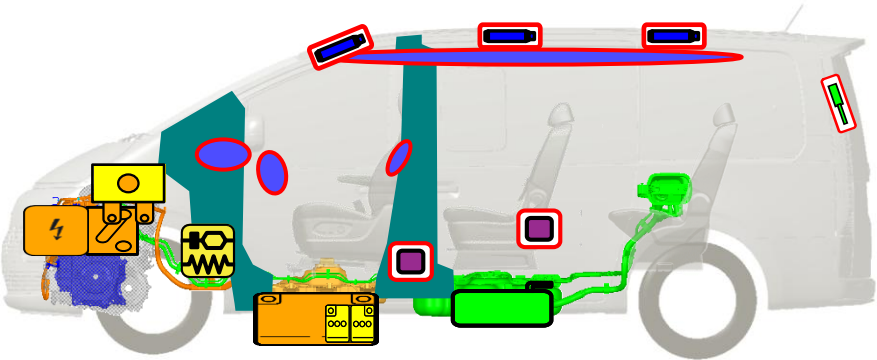


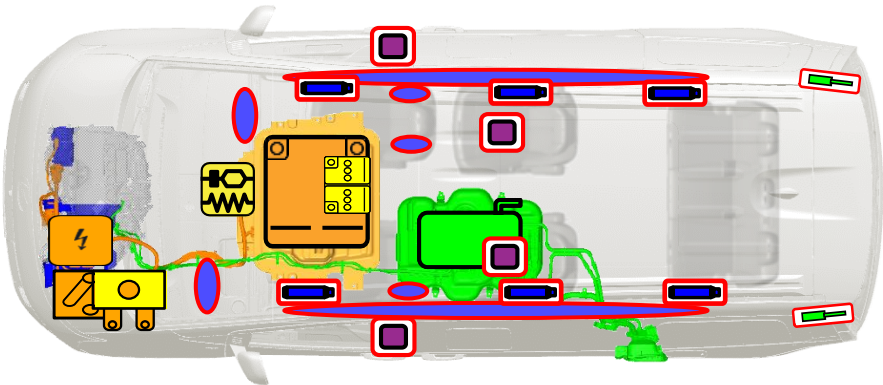


Van (2P) :
1st only

Wagon :
2nd & 3rd

	Airbag		Stored gas inflator (Airbag)		Seat belt pretensioner		SRS Control Module		High voltage component
	High voltage Battery Disabling Fuse Box		Gas lifter (Gas strut)		High strength zone		Battery pack, High voltage		High voltage power cable
	Battery low voltage		Ultra-capacitor low voltage		Fuel Tank		High voltage Cut-off Device		
		ID No.		Version No.		Version date		Page	
		US4K-PE-HEV-01		01		260624		01/04	

1. Identification / recognition

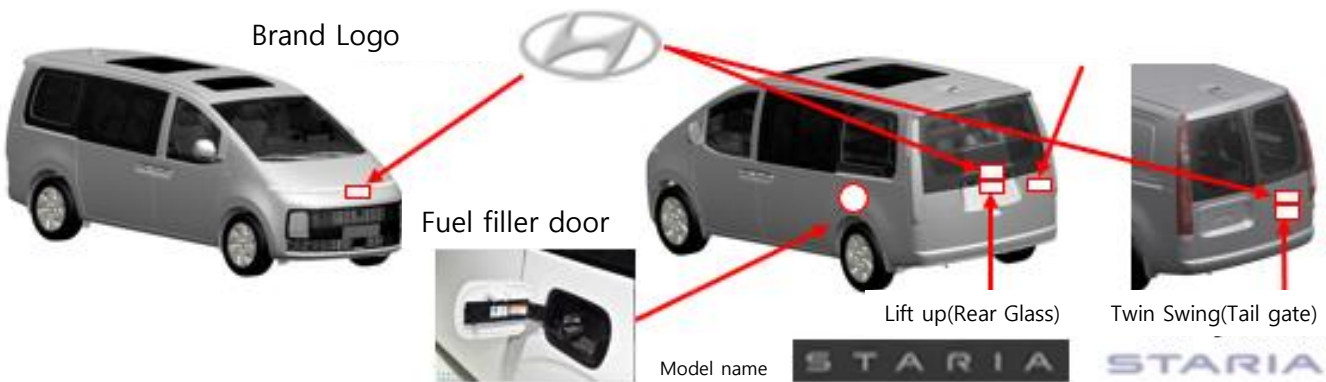

2. Immobilization / Stabilization / Lifting

■ Immobilization

1

1. After stopping the vehicle, press the brake pedal (1) and pull the electronic parking brake switch (2).

2

2. After stopping the vehicle, press the brake pedal and move the shift lever to P (park) position

SBW (Electronic)
('P' button press)

SBC (Mechanical)
(Move the lever to 'P')


■ Lifting points under the vehicle: ▲



3. Disable direct hazards / Safety regulations

■ High-voltage switch and low-voltage battery access method


- ① Pull the hood release lever on the driver's side.
- ② Push the secondary hood release lever to the left while lifting the hood from the front of the vehicle.
- ③ Wear a fire hydrant helmet and remove the sub junction block (A) cover.
- ④ The high voltage stich(B) and the low voltage switch(C) are located inside the sub junction block box (A)

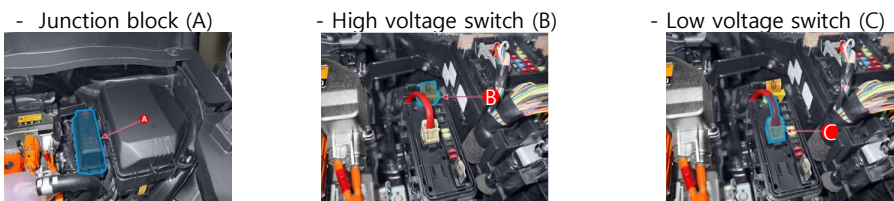

	ID No.	Version No.	Version date	Page
	US4K-PE-HEV-01	01	260624	02/04

■ Disabling Method (Start Off)

■ Battery low voltage

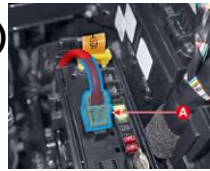

- Disconnect the cable(A) of the 12V battery.

■ Battery high voltage



- ① 1 High voltage connection status.
- ② Pull the switch up to cut off the high voltage.



"High Voltage cut-off switch" does not fully release.



4. Access to the occupants

■ Seat adjustment

MANUAL



POWER




- ①: Adjusting FRT and RR Positions
- ②: Backrest Angle Adjustment
- ③: Cushion Angle Adjustment
- ④: Cushion Height Adjustment
- ⑤: Lumbar Support Adjustment

2nd Comfort Relaxation Seat



■ Steering column adjustment (Manual)

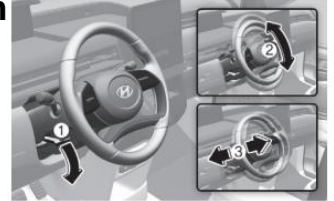


■ Door Handle (Emergency Key)



1. Press the lever under the cover as the emergency key ①.
2. To remove the cover, press the lever and gently push it toward the rear of the vehicle (2) to prevent the emergency key from falling out.
3. In an emergency, you can lock or unlock the driver's door using the key after removing the cover.


■ Glass

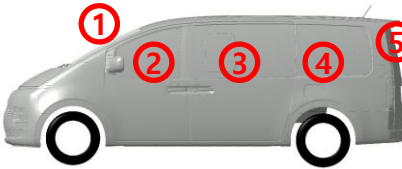


- ① : Laminated
- ② : Tempered, Laminated(OPT)
- ③ : Tempered, Laminated(OPT)
- ④ : Tempered
- ⑤ : Tempered

■ Vehicle body

Side

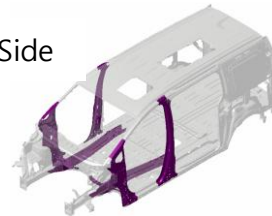

Under

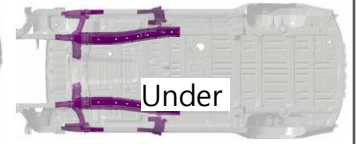


5. Stored energy / Liquids / Gases / Solids

	270V								
	12V								
	Refrigerant	Van Type	Wagon Type						
	R-134a	650±25g	950±25g						



WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA.

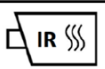


	ID No.	Version No.	Version date	Page
	US4K-PE-HEV-01	01	260624	03/04

6. In case of fire



 Use large amount of water



Battery RE-IGNITION Warning!

■ Gas Strut / Pre-loaded Spring

Risk of missile effect of tailgate.



(Lift Up T/Gate)

7. In case of submersion



Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / transportation / storage

OK :



The use of wheel dollies(A) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK :



Do not tow using the suspension restraint system. The bumper and underbody components could be damaged.


9. Explanation of pictograms

	Hybrid vehicle		Warning, Electricity
	General warning sign		Flammable
	Corrosives		Hazardous to the human health
	Explosive		Acute toxicity
	Air-conditioning component		Warning low temperature
	Use thermal Infrared camera		Use water to extinguish the fire
	Bonnet		Boot(Tail Gate)



Hyundai Staria


Wagon, 8 seaters
From June 2021

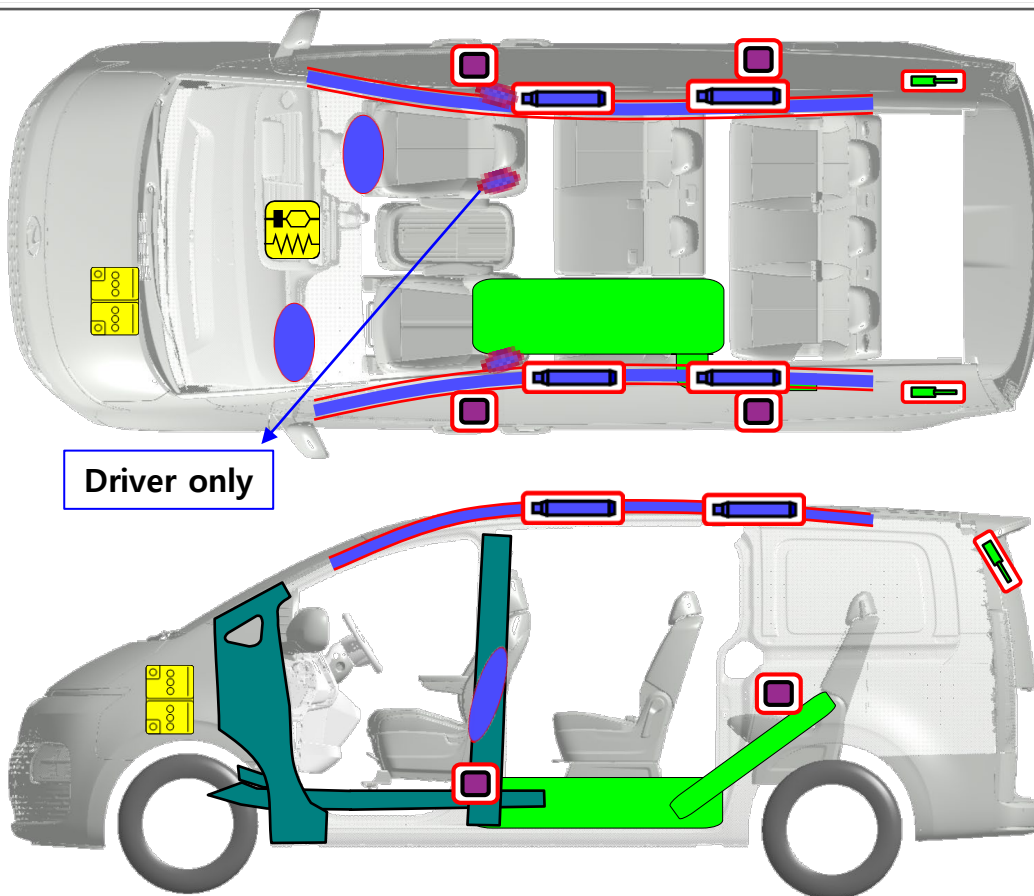

Reserved for holes (paper version)


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage
ID No.			Version No.			Version date			Page
KMH-US4-RSI-01-202107			01			07/2021			1 of 4

1. Identification / recognition

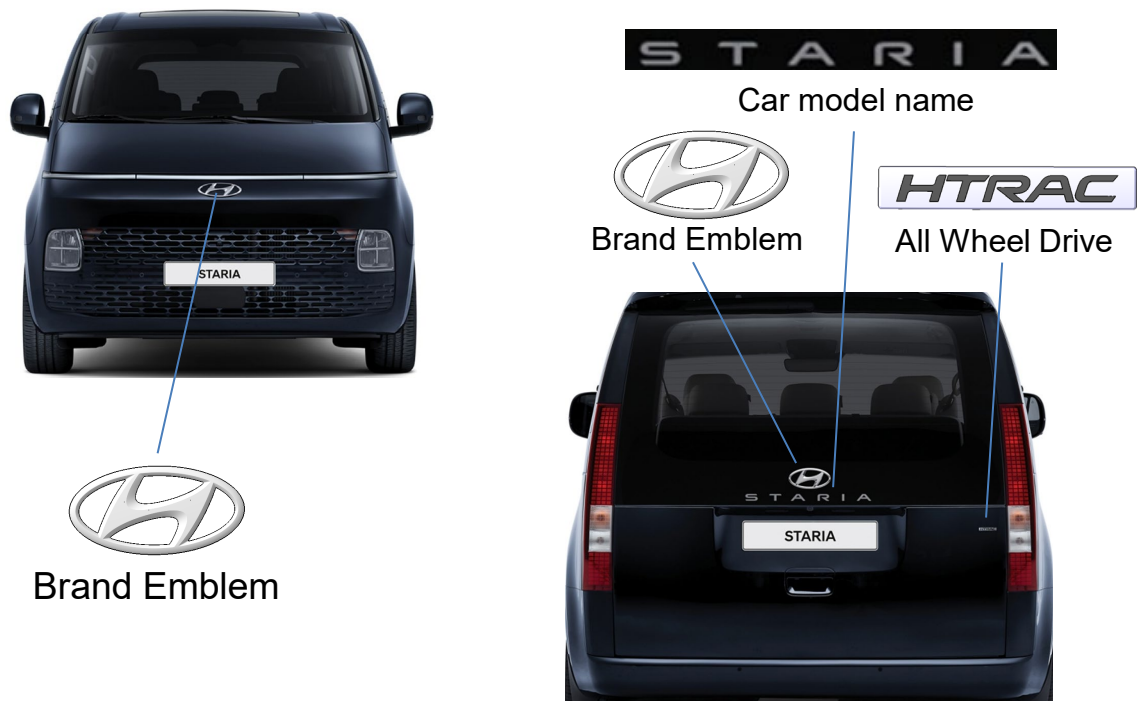


2. Immobilization / stabilization / lifting

■ Immobilisation

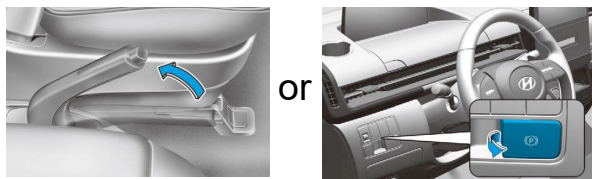

1. Chock the wheels and pull the switch to set the parking brake.
2. For automatic vehicles the shift lever to the park(P) position.

■ Lifting positions at car underbody🚫


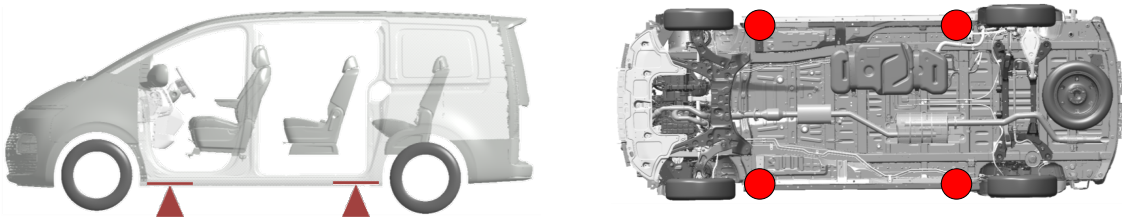


Do not place cribbing such as wooden blocks or rescue air lifting bags under the exhaust system, fuel system or high voltage power cables. The failure will cause of fire, electric shock or gas leak.

	ID No.	Version No.	Version date	Page
	KMH-US4-RSI-01-202107	01	07/2021	2 of 4

3. Disable direct hazards / safety regulations

■ Access to 12V battery 12 V

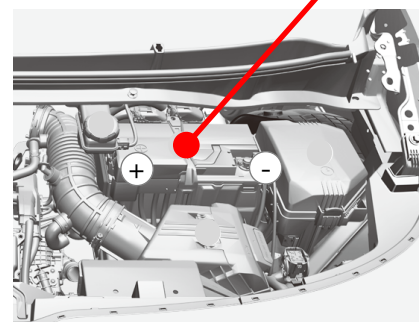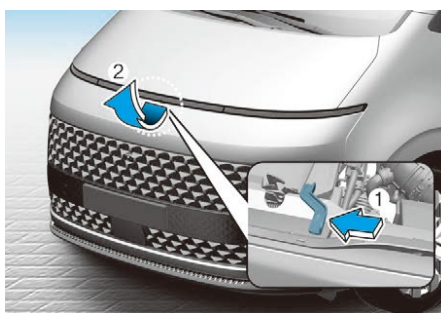

1. Pull the release lever to unlatch the hood. The hood should pop open slightly.
2. Go to the front of the vehicle, raise the hood slightly, push the secondary latch (1) up side and lift the hood (2).

Battery in the engine room

■ Disabling procedure

① Turn the ignition switch off

② Disconnect the negative(-) terminal

③ Disconnect the positive(+) terminal

4. Access to the occupants

▣ Glass


1 : Laminated

2-5 : Tempered




▣ Vehicle Body

Hardened Steel

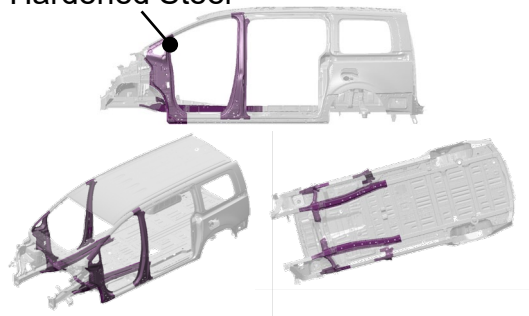

▣ Steering Wheel

Manual type


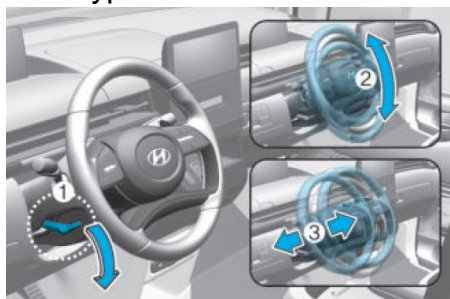


- Pull down the lock release lever(①)
- Adjust the steering wheel angle (②) and height(③)


▣ Seat Adjustment

1st row : Mechanical

2nd row : Mechanical

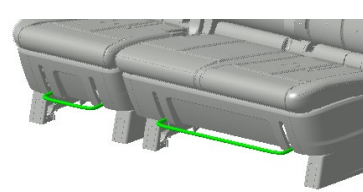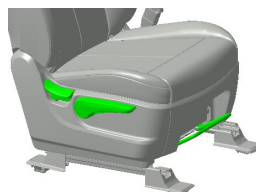

3rd row : Mechanical

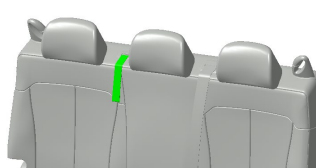


	ID No.	Version No.	Version date	Page
	KMH-US4-RSI-01-202107	01	07/2021	3 of 4


5. Stored energy / liquids / gases / solids

		max. 75 ℓ
		12 V

 6. In case of fire


Gas Strut 

· Risk of missile effect of tailgate.

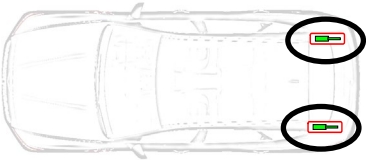


7. Towing / transportation / storage

OK :

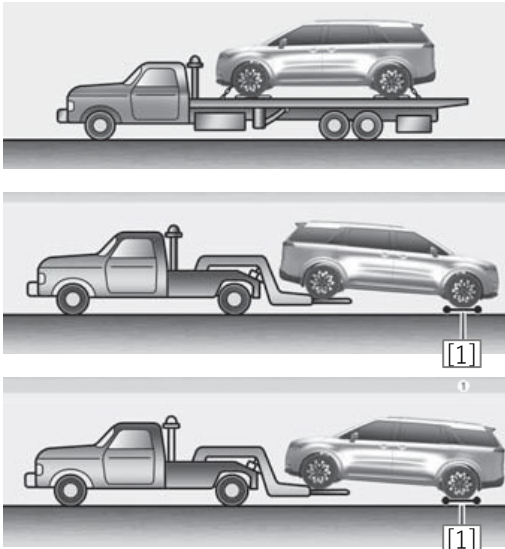

Not OK :

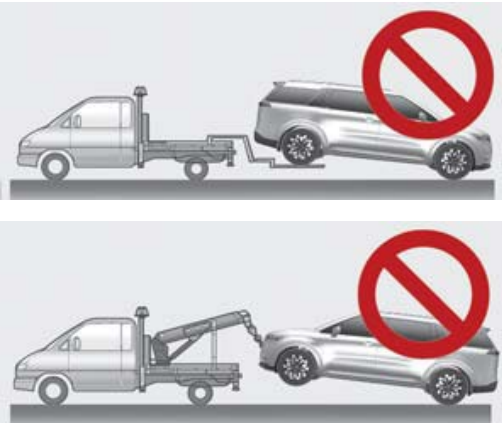

[1] : Dolly

Notice: AWD (All Wheel Drive) vehicle must be towed with all wheels off the ground, either on a flatbed tow truck or using doilies.