





▶ Audi Q8 / SQ8

from 2018


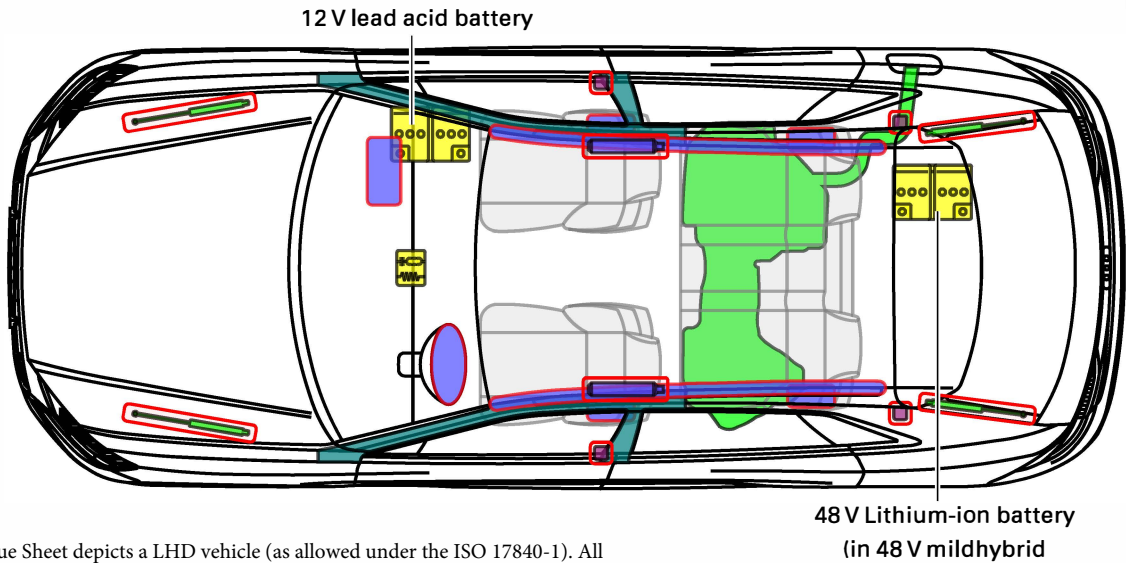


Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

Warning 48 V: Danger of hazardous arc! Switch off Ignition before disconnecting the 48 V battery!

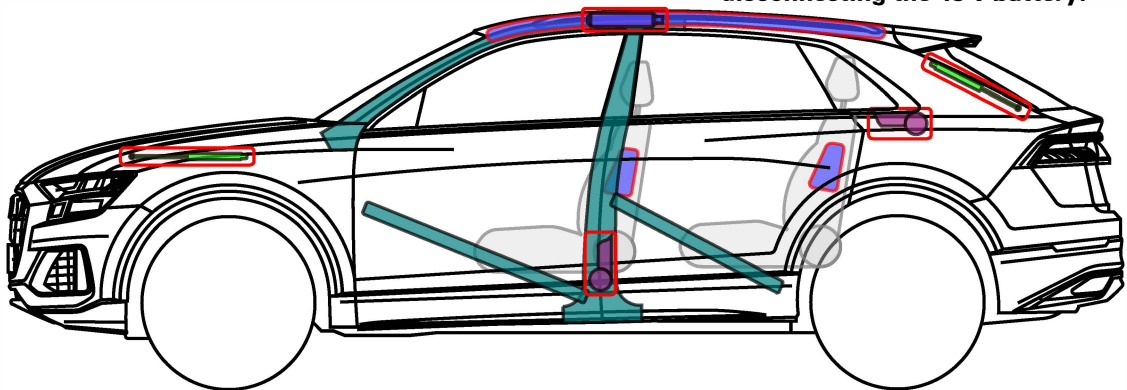

Legend

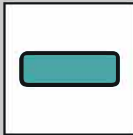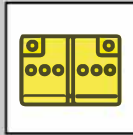	Airbag		Reinforce-ment		SRS control unit
	Stored gas inflator		Automatic roll bar		12 V Battery
	Seatbelt preten-sioner		Cylinder		Fuel tank

This document is a subject to the copyright of AUDI AG, Ingolstadt. Any duplication, distribution, storage, communication, broadcast and reproduction or transmission of the contents without written approval from AUDI AG is prohibited.

► Audi Q8 / SQ8

from 2018

12 V lead acid battery

1. remove foot mat
2. open floor flap
3. separate minus pole of the 12 V battery



48 V Lithium-ion battery (in 48 V mildhybrid)

⚠ The 48 V on-board power supply is automatically deactivated during accidents in which the airbag(s) deployed.

For all other cases, in order to deactivate the on-board power supply the 48 V Lithium-ion battery has to be separately disconnected in addition to the 12 V lead acid battery. Therefore:

⚠ WARNING! Hazard due to electric arc at 48 V

⚠ Turn off ignition before separating the 48 V battery!

For minimization the risk of electric arc it is recommended to disconnect the batteries as follows:

1. remove the cargo floor from the trunk
2. remove the spare tire and vehicle toolkit
3. remove the cover from the 48 V Lithium-Ion battery by removing the four bolts with a screwdriver
4. pull out the communication connector plug
5. remove the pole cap and separate the minus pole of the 48 V Lithium-ion battery.

