




MITSUBISHI OUTLANDER PHEV

Body type: Station wagon

Type: GN0W Model year: 2022 -

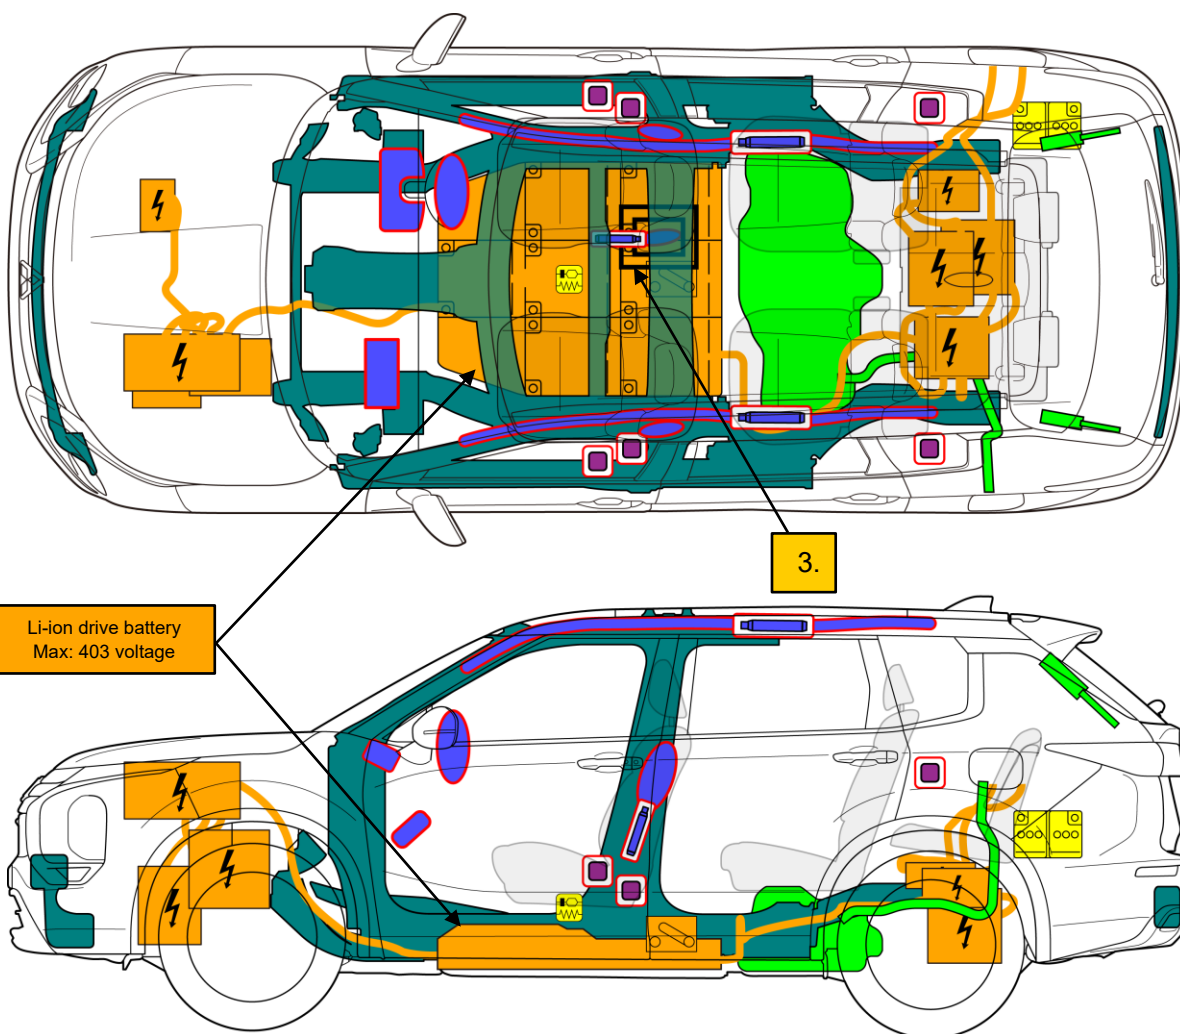

	Airbag		Stored gas inflator		Seat belt Pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength Zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable / component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage
ID No.				Version No.		Version Date.		Page	
GNW-ANRS-EN01				04		8/2024		1/4	



MITSUBISHI OUTLANDER PHEV

Body type: Station wagon
Type: GN0W Model year: 2022 -




1. Identification / recognition

Features on vehicle exterior




2. Immobilisation / stabilization / lifting

Immobilize the vehicle

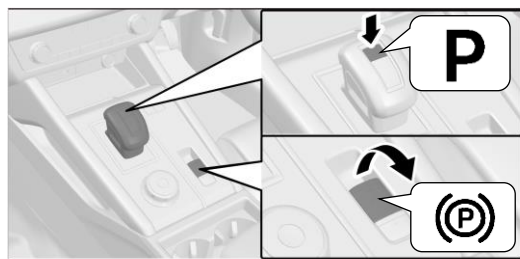

Block the wheels and set the parking brake. Put the vehicle in "P" position.

Support positions for Jack and Lift

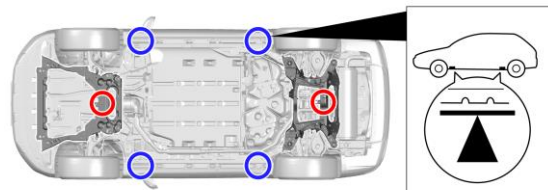

○: Support position for Garage Jack

○: Support position for Jack or Axle stands or Lift

3. Disable direct hazards / safety regulations



Do not apply excessive force to not strongly hit the air bag installation area.

Driver's seat has the front seat-mounted SRS centre-airbag in addition to the side-airbag. Location of the centre-airbag is shown in the mark **3** on page 1.



1. How to determine if vehicle is ON / OFF




2. How to disconnect the 12V auxiliary battery negative terminal


Wait for 5 minutes after turning off the power mode of the electric motor switch, and closing the driver's door.

5m


< Use an open end wrench >

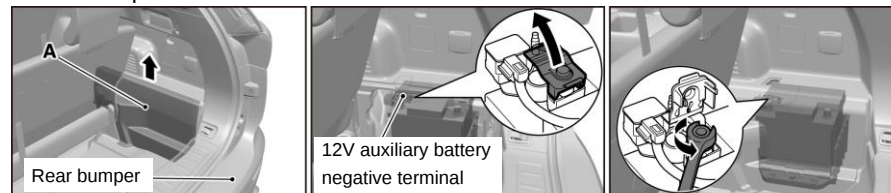

< Use a ratchet handle >

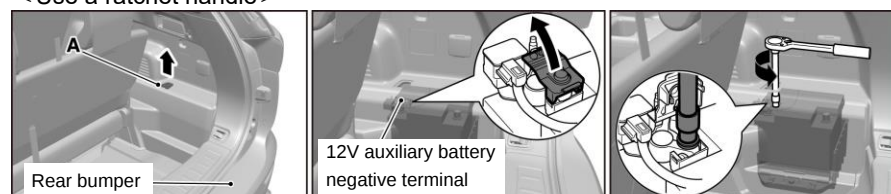

3. How to disconnect the "Power unit control" fuse

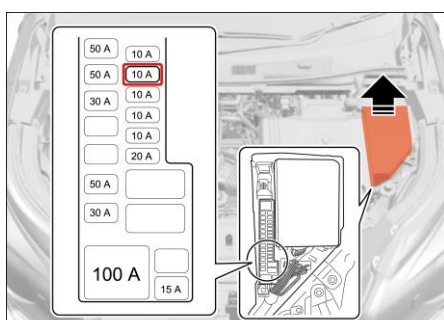

If you cannot locate this fuse, remove all fuses and relays in the fuse box.




4. Use insulating Personal Protective Equipment (PPE) (Rubber insulating gloves, Rubber soled insulating)



5. How to shut down High voltage (pull out the service plug)


Wait for 5 minutes after disconnecting the 12V auxiliary battery negative terminal.

5m

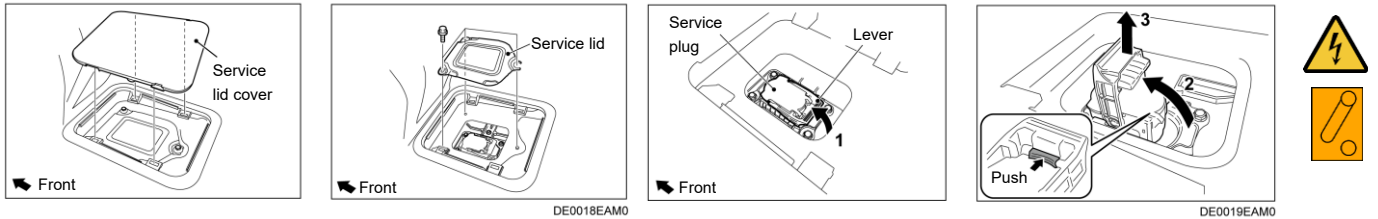


4. Access to the occupants


Windows

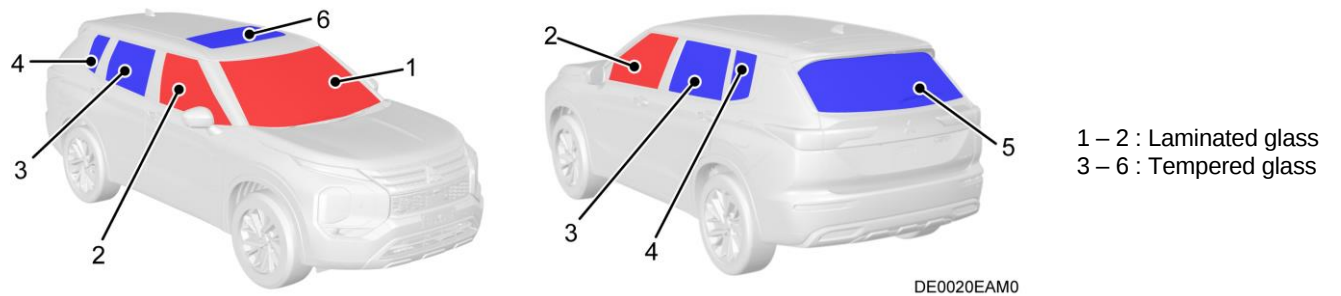



Steering adjustment

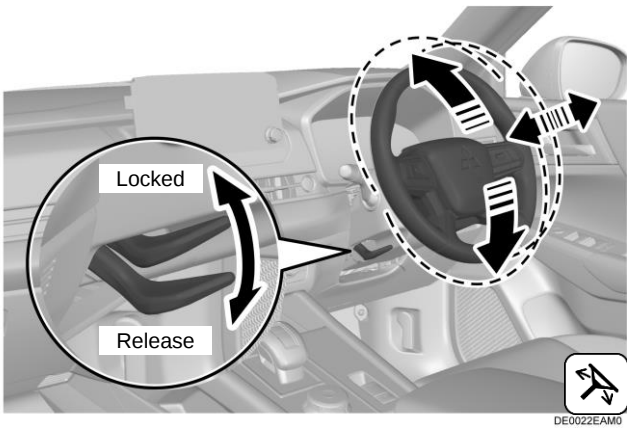


Seat adjustment

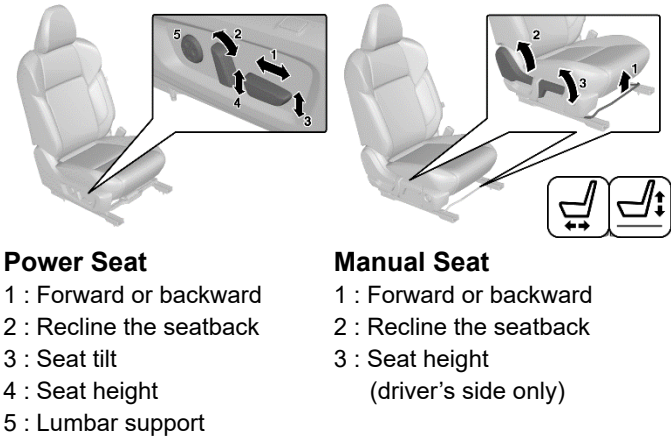

Vehicle CUT Zones

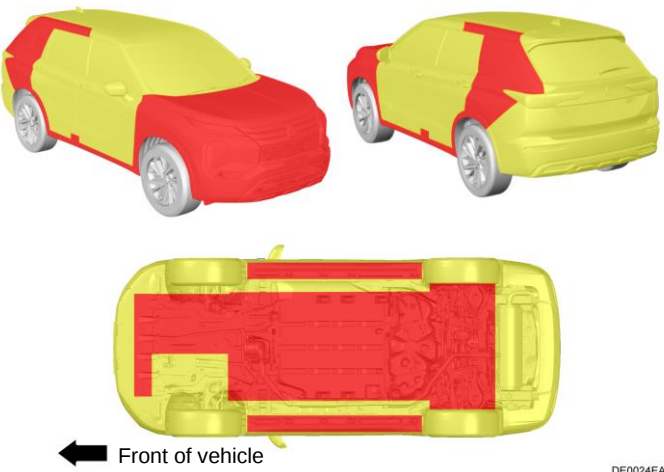 

High-tensile and Ultra-high-tensile steel panels location

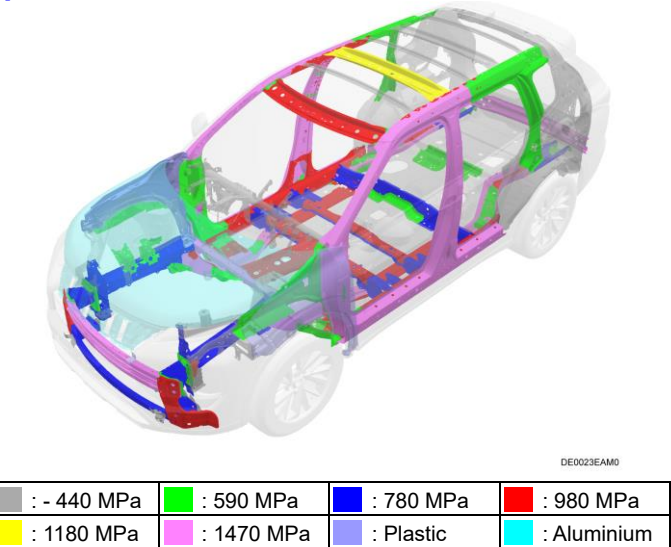

	MITSUBISHI OUTLANDER PHEV Body type: Station wagon Type: GN0W Model year: 2022 -		
--	---	---	--

5. Stored energy / liquids / gases / solids

Fluids / gases used in this vehicle

	Fuel tank	56 liters		12V auxiliary battery	12 V – L1 (50 Ah / 420 A)
	Li-ion drive battery	350 V / 20 kWh		Refrigerant (air conditioner)	HFC-134a: 1,110 – 1,150 g



6. In case of fire



Use large amount of water



RE-IGNITION POSSIBLE !



Never use seawater or any water containing salt.

7. In case of submersion

 
Submerged Vehicle

- If the vehicle is submerged or partially submerged, first pull the occupants out of the vehicle and water.
- Then shut down the high voltage system. (Refer to **3.-3. How to disconnect the “Power unit control” fuse** and **3.-5. How to shut down High voltage (pull out the service plug)**)
- If the vehicle is submerged, the drive battery may generate flammable hydrogen gas.
- If the vehicle is submerged, water may enter the drive battery.



8. Towing / transportation / storage

How to Transport



Store the vehicle at a safe distance from other vehicles.



9. Important additional information

For the detail, please refer to Emergency Response Guide.

10. Explanation of pictograms used

	Keyless operation key distance		Warning, electricity		Risk of damaging human health
	Caution		Warning, low temperature		Risk of flammability
	Lifting point		Device to shut down power in vehicle		Risk of an explosion
	Open Hood		Seat adjustment, longitudinal		Risk of corrosive material / substances
	Open Tailgate		Seat height adjustment		Risk of acute toxicity
	Steering wheel, tilt control		Air-conditioning component		Use water to extinguish the fire
	Fuel tank		Use thermal infrared camera		

ID No.	Version No.	Version Date.	Page
GNW-ANRS-EN01	04	8/2024	4/4