




# Hyundai SANTA FE Hybrid

SUV, 5 door (5-/ 6-/ 7-seater)  
Since 2024



Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

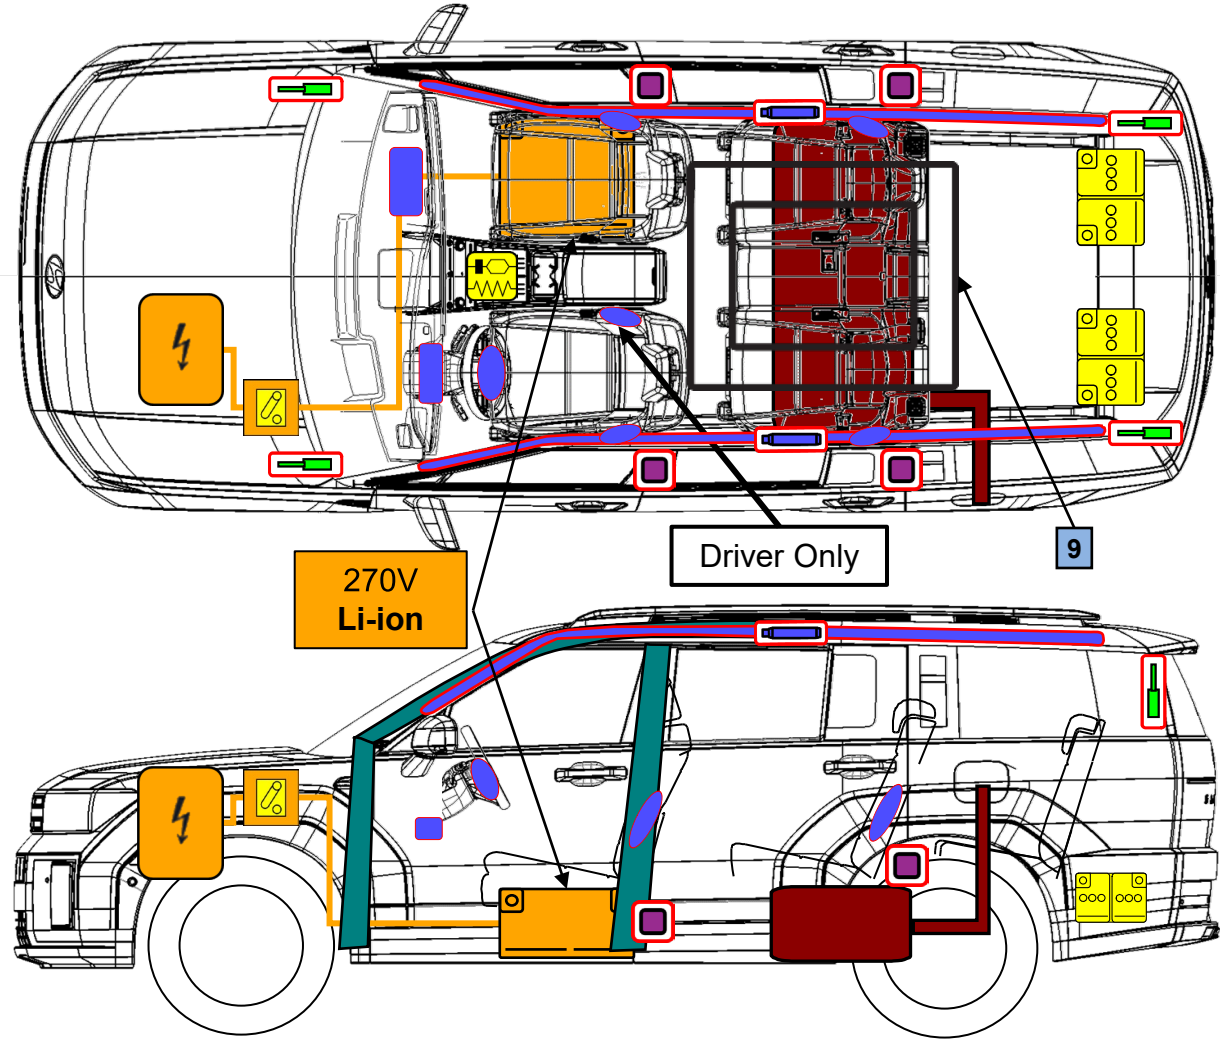

|  |                           |  |                              |  |                        |  |                                                  |  |                                  |
|--|---------------------------|--|------------------------------|--|------------------------|--|--------------------------------------------------|--|----------------------------------|
|  | Airbag                    |  | Stored gas inflator          |  | Seat belt pretensioner |  | SRS control unit                                 |  | Zone requiring special attention |
|  | Battery low-voltage       |  | Gas strut / Preloaded spring |  | High strength zone     |  | Fuel tank                                        |  |                                  |
|  | Battery pack high-voltage |  | High voltage power cable     |  | High voltage component |  | Low voltage device that disconnects high voltage |  |                                  |

## 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE




Brand Logo Name  
 **HYUNDAI**  
Model name  
**S A N T A F E**



Hybrid emblem: **hybrid**

## 2. Immobilisation / stabilisation / lifting


### Immobilization:

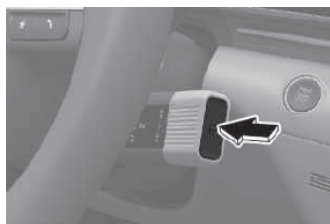

1. Chock the wheels and pull the **EPB** switch to set the parking brake.
2. For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

### Lifting points under the vehicle:

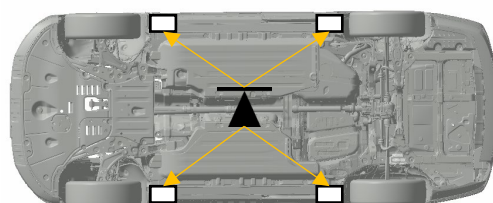

## 3. Disable direct hazards / safety regulations

IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW




### Disabling High Voltage Battery: Access:



Pull the hood release lever to unlatch the hood.



Go to the front of the vehicle, raise the hood slightly, push up the secondary hood release lever (1) inside of the hood center and lift the hood (2).

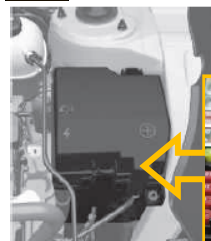

Find the "Service Interlock" in the fuse box


### Disabling:



"Service Interlock" is not completely removable.



Pull up the "Service Interlock"

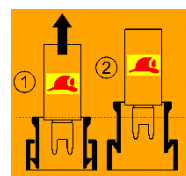


- ① HV connected
- ② HV disconnected



There is the capacitor inside the HPCU. Wait 5+ minutes for the capacitor to discharge after removing the service plug.


Disabling 12V Battery:

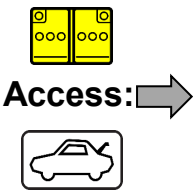

Press the power tailgate open/close button for 1 second. The tailgate opens or closes with a warning sound.




Press the power tailgate open/close button to open the tailgate. If the vehicle is locked, press the power tailgate open/close button with the smart key in your possession.

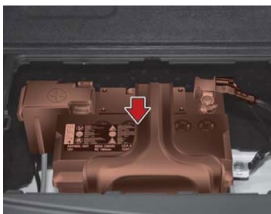

Battery in the trunk.

 Disabling:




4. Access to the occupants

Steering column adjustment:





Seat adjustment:

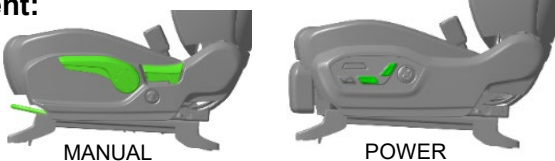

Glass:

- ① : Laminated
- ②③ : Tempered (OPT : Laminated)
- ④⑤ : Tempered

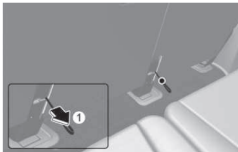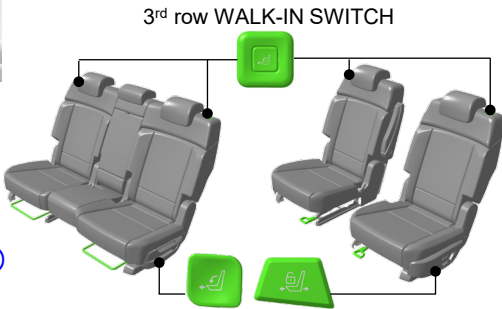


If the walk-in switch does not work, pull the strap (1) located on the lower left side of the seat.

Vehicle body → Hardened Steel


Side



Bottom

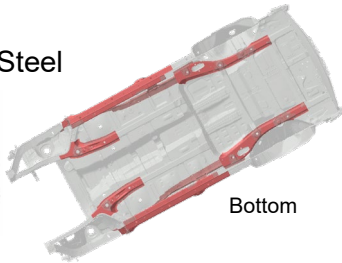

Tailgate:

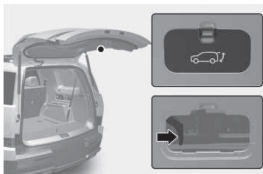

5. Stored energy / liquids / gases / solids


|  |  |      |                           |
|--|--|------|---------------------------|
|  |  | 67l  |                           |
|  |  | 12V  | R-134a 850g R-1234yf 800g |
|  |  | 270V |                           |

WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA


6. In case of fire



Use large amount of water

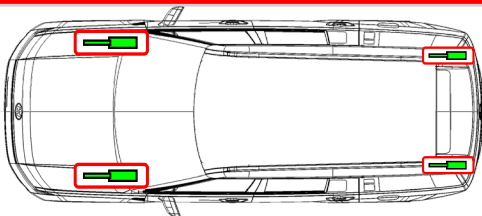

**BATTERY RE-IGNITION!**

 

**Gas strut!**



Risk of missile effect of hood and tailgate.

7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage

OK

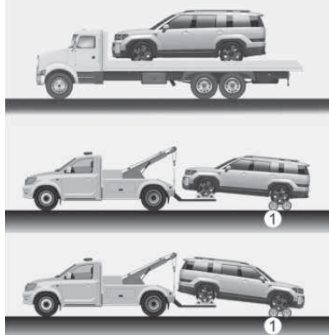

Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.


Not OK

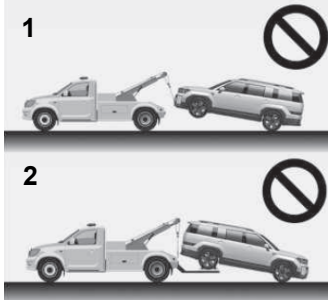


Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Towing - Hook

Front:

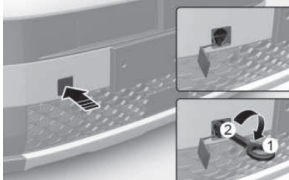

Rear:

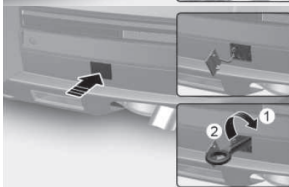

The towing hook is in the tool case in the trunk

9. Important additional information

The SANTA FE has 3 different seat options (5- /6-/ 7-seater) see Emergency Respond Guide

10. Explanation of pictograms used

|  |                                                   |  |                                      |  |                      |
|--|---------------------------------------------------|--|--------------------------------------|--|----------------------|
|  | Gasoline vehicle                                  |  | Fuel tank content gasoline / ethanol |  | Bonnet               |
|  | General warning sign                              |  | Air-conditioning component           |  | Boot                 |
|  | Corrosives                                        |  | Hazardous to the human health        |  | Flammable            |
|  | Explosive                                         |  | Acute toxicity                       |  | Environmental hazard |
|  | Use thermal Infrared camera                       |  | Use water to extinguish the fire     |  | Warning, Electricity |
|  | Hybrid Electric Vehicle on fuel of liquid group 2 |  |                                      |  |                      |