




► Audi Q3 / RS Q3

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

from 2018

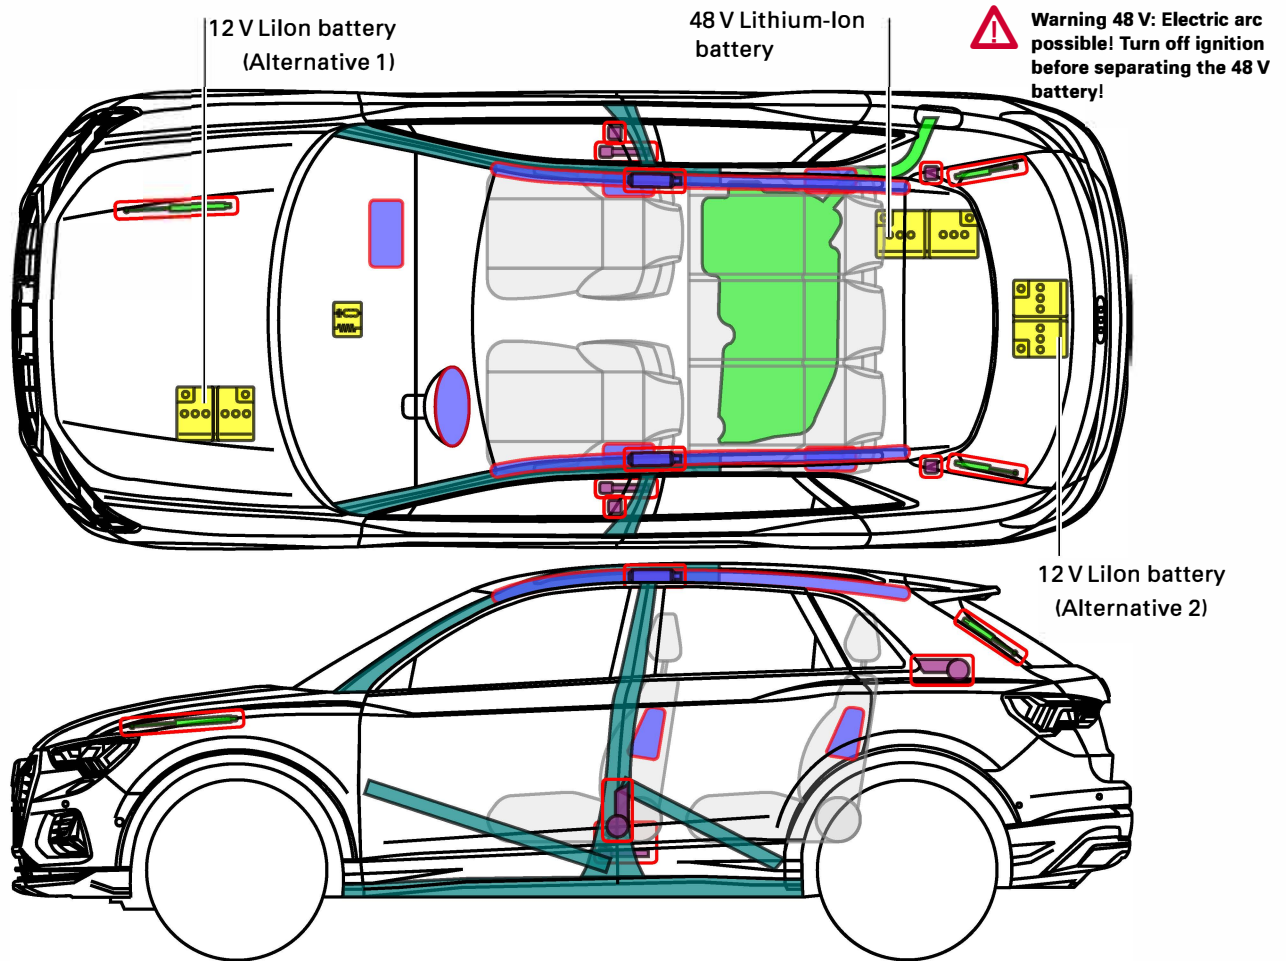

Legend

	Airbag		Reinforcement		SRS control unit		Pedestrian protection system
	Stored gas inflator		Automatic roll bar		12 V / 48V Battery		
	Seatbelt pretensioner		Cylinder		Fuel tank		


This document is a subject to the copyright of AUDI AG, Ingolstadt. Any duplication, distribution, storage, communication, broadcast and reproduction or transmission of the contents without written approval from AUDI AG is prohibited.



► Audi Q3 / RS Q3 Sportback

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

from 2019

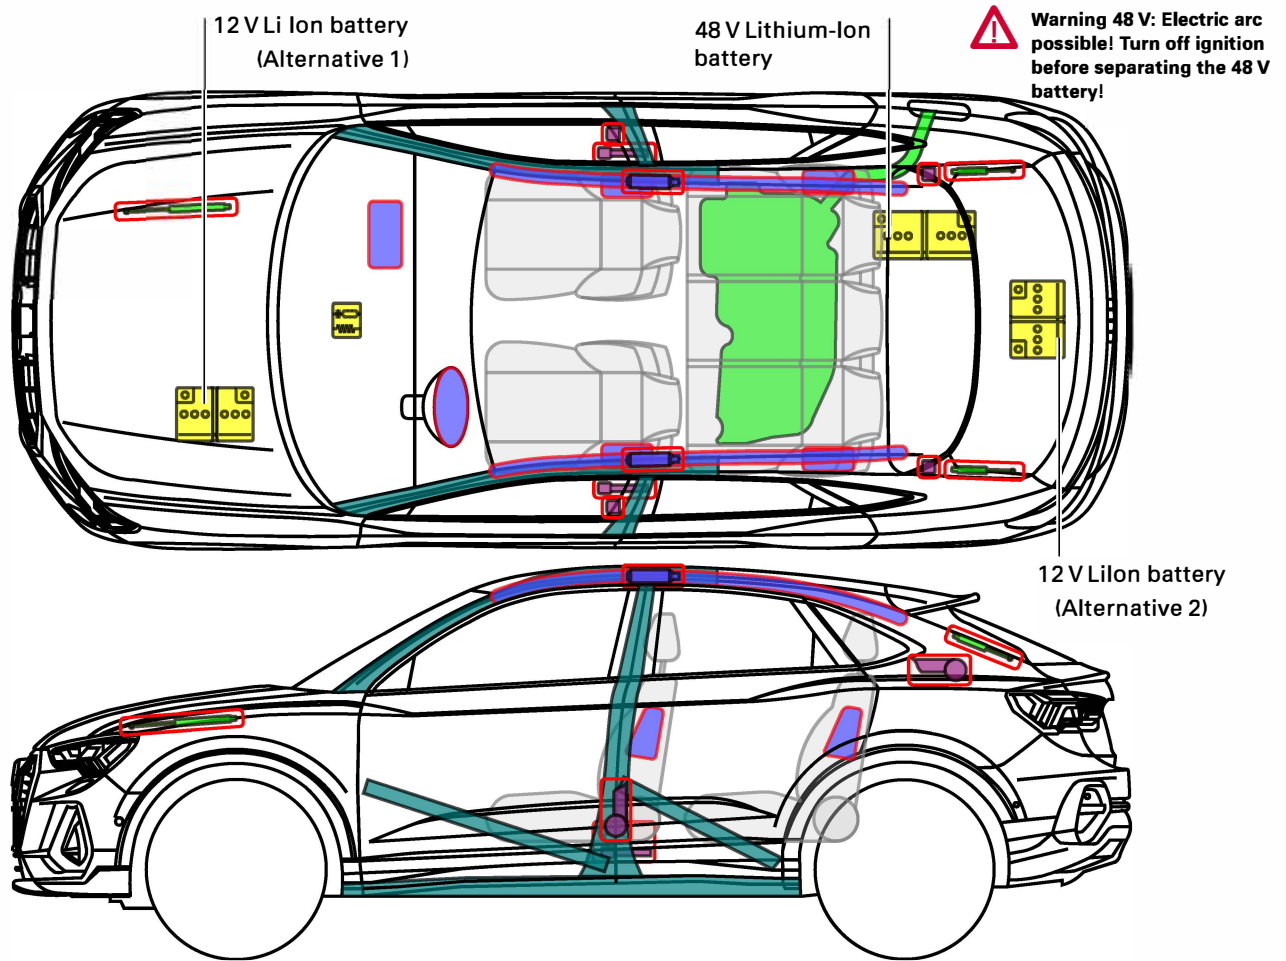

Legend

	Airbag		Reinforcement		SRS control unit		Pedestrian protection system
	Stored gas inflator		Automatic roll bar		12 V / 48V Battery		
	Seatbelt pretensioner		Cylinder		Fuel tank		

Dieses Dokument unterliegt dem Copyright der AUDI AG, Ingolstadt. Jede Vervielfältigung, Verbreitung, Speicherung, Übermittlung, Sendung und Wieder- bzw. Weitergabe der Inhalte ist ohne schriftliche Genehmigung der AUDI AG ausdrücklich untersagt.

Audi Q3 Sportback 48 V Mildhybrid

from 2019

12 V lead acid battery and 48 V Lithium-Ion battery


⚠ 48 V on-board Lithium-Ion battery is automatically deactivated during accidents in which the airbag(s) deployed.

For all other cases, in order to deactivate the on-board power supply the 48 V Lithium-Ion battery has to be separately disconnected in addition to the 12 V lead acid battery. Therefore:


⚠ WARNING! Hazard due to electric arc at 48 V

⚠ Turn off ignition before separating the 48V battery!

1. Open the bonnet and separate the minus pole of the 12 V battery
2. Remove the cargo floor from the trunk
3. Remove the cover of the 48 V Lithium-ion battery
4. Pull out the communication connector plug of the 48 V Lithium-ion battery
5. Separate the minus pole of the 48 V Lithium-ion battery

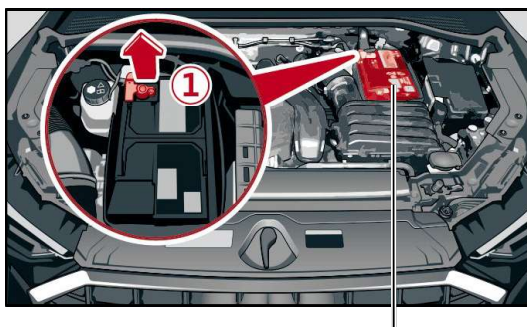

12 V lead acid battery

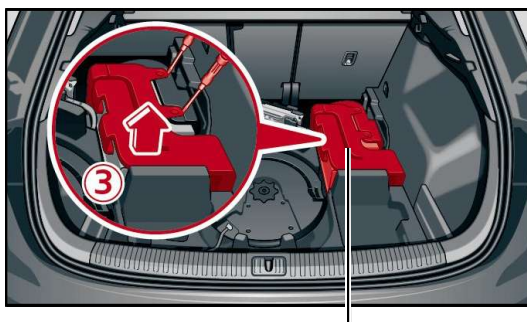

48 V Lithium-Ionen battery

