



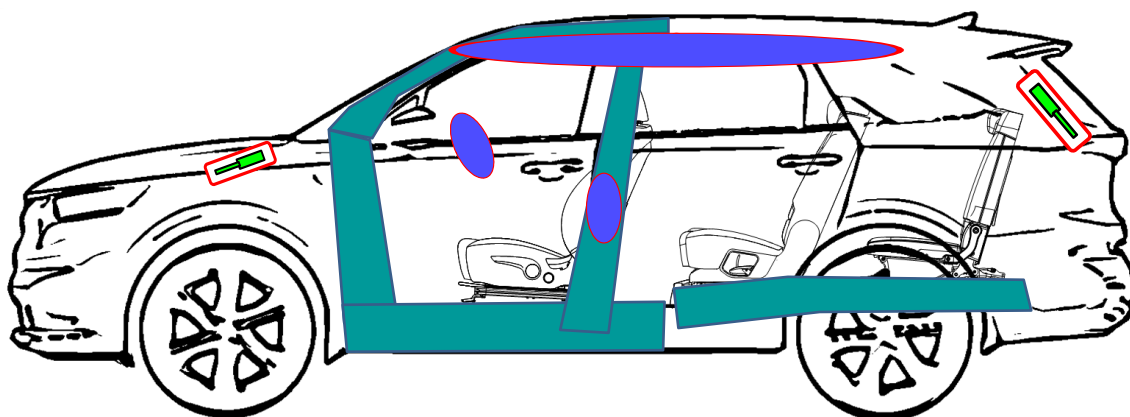

Kia Sorento

SUV, 4 doors, 5 & 7 seats
From August 2020

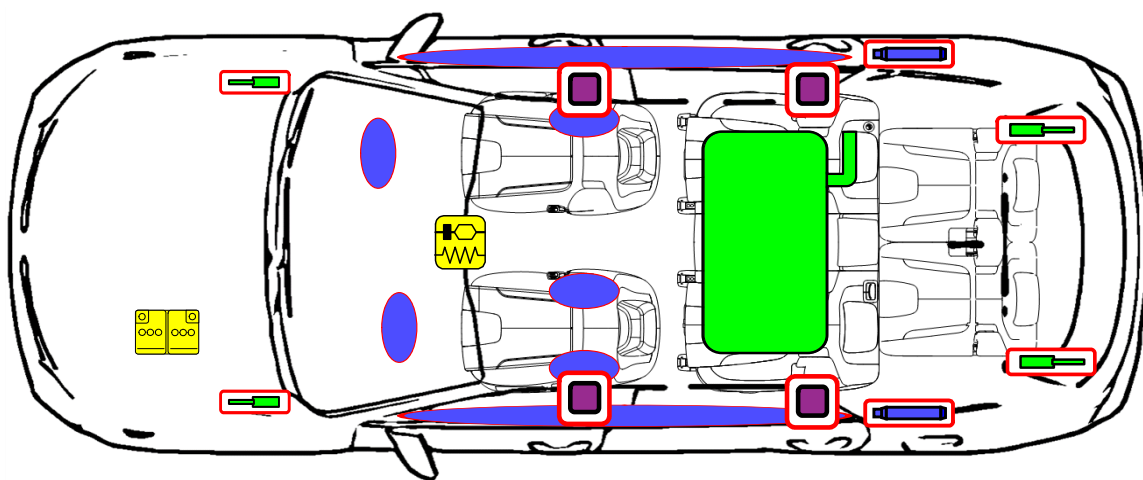

Reserved for holes (paper version)

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Fuel tank
	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		

ID No.

Version No.

Version date

Page N°

KNA-MQ4-RSI-01-202007

01

07/2020

1 of 4

1. Identification / recognition

Brand Emblem



Brand Name



AWD
All Wheel Drive

S O R E N T O

Car model name

2. Immobilization / stabilization / lifting

■ Immobilization

1 Parking pedal




- 1. Move the shift lever to the P position.
- 2. Press the parking pedal to set the parking brake

2 EPB



- 1. Push the P button.
- 2. Chock the wheels and pull the switch to set the parking brake.


■ Lifting positions at car underbody:■

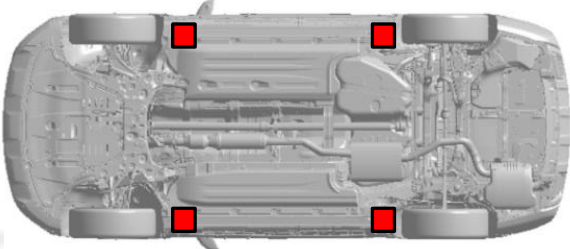


	ID No.	Version No.	Version date	Page N°
	KNA-MQ4-RSI-01-2020	01	08/2020	2 of 4

3. Disable direct hazards / safety regulations

 
▣ Access to the battery

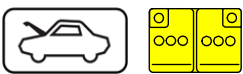

1. Pull the release lever to unlatch the hood. The hood should pop open slightly.

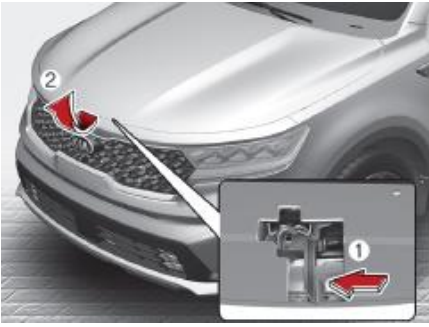


2. Raise the hood slightly, push the secondary latch up (①) inside of the hood center and lift the hood (②)

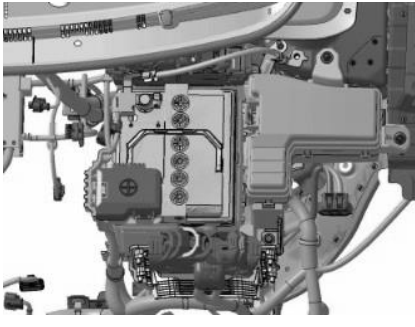

3. Battery in the engine compartment

 ▣ Disabling procedure

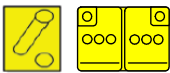

① Turn the ignition switch off



② Disconnect the negative(-) terminal



③ Disconnect the positive(+) terminal

4. Access to the occupants



▣ Glass

- 1 : Laminated
- 2 : Tempered



▣ Vehicle body

Hardened Steel

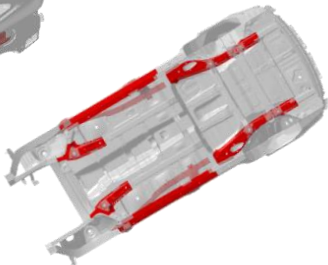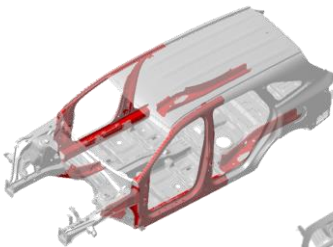

	ID No.	Version No.	Version date	Page N°
	KNA-MQ4-RSI-01-2020	01	08/2020	3 of 4

5. Stored energy / liquids / gases / solids

☒ Fuel Tank

67ℓ

 Diesel Tank : 67L

☒ Battery




 12 V

6. In case of fire

☒ Gas Strut




- Risk of missile effect of hood and trunk.

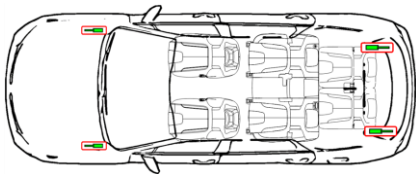

7. Towing / transportation / storage

OK :

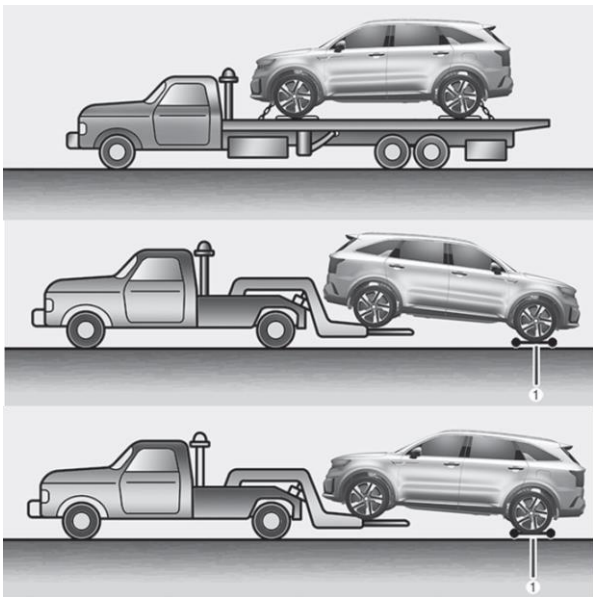


The use of wheel dollies (1) or flatbed is recommended.

It is acceptable to tow the vehicle with the rear wheels on the ground (without dollies) and the front wheels off the ground.

If any of the loaded wheels or suspension components are damaged or the vehicle is being towed with the front wheels on the ground, use a towing dolly under the front wheels.

Not OK :

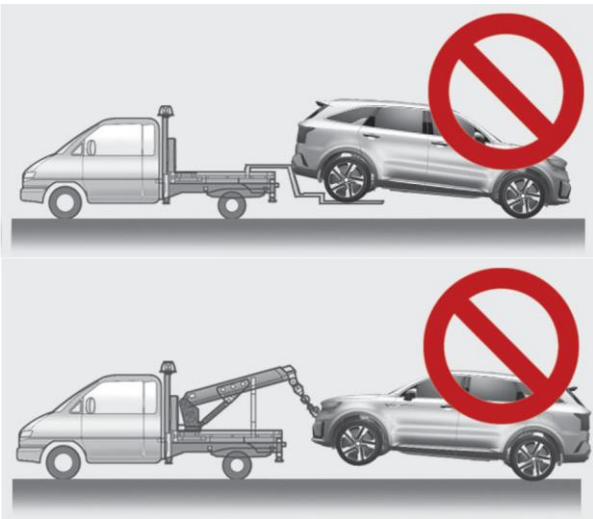

Do not tow the vehicle backwards with the front wheels on the ground as this may cause damage to the vehicle.

Do not tow with sling-type equipment with the rear wheels on the ground as this may cause damage to the vehicle. Use wheel lift or flatbed equipment.

	ID No.	Version No.	Version date	Page N°
	KNA-MQ4-RSI-01-2020	01	08/2020	4 of 4