




DENZA B5

(5-door Model, 2025-)

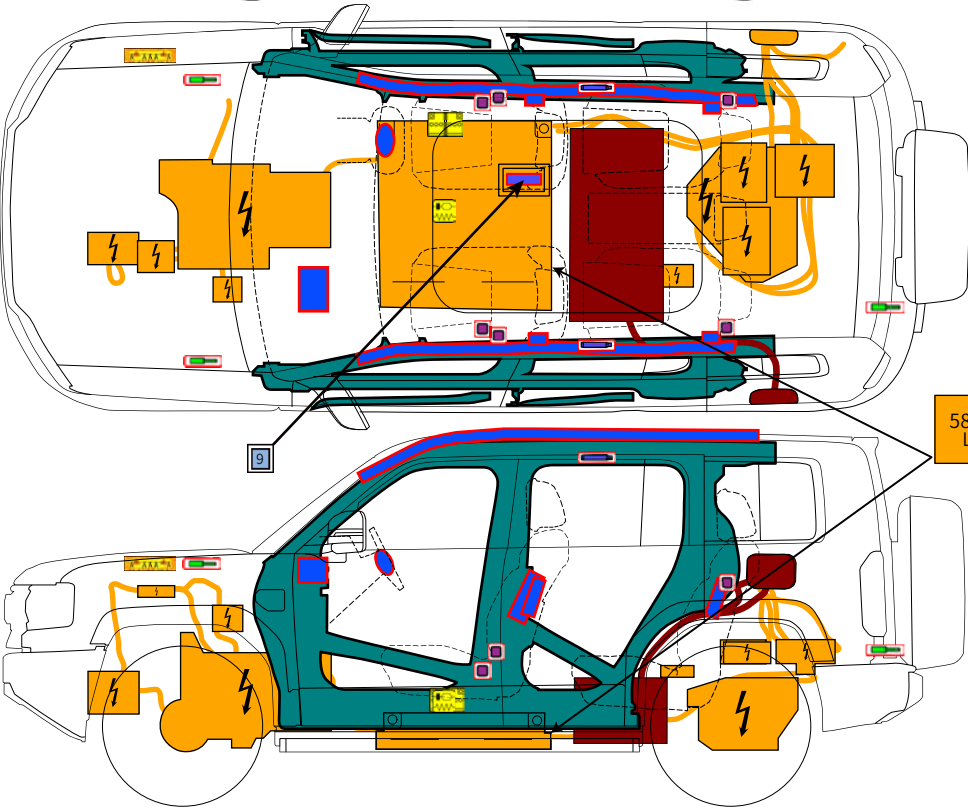

	Airbag		Battery low voltage		Battery pack, high-voltage		Cable cut
	Fuel tank content gasoline/ethanol		Gas strut/ Preloaded spring		High strength zone		High voltage component
	High voltage power cable		Seat belt pretensioner		SRS control unit		Stored gas inflator
	Zone requiring special attention						



1. Identification / recognition



The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.



Configuration 1



Configuration 2



2. Immobilisation / stabilisation / lifting

Immobilise the vehicle




Shift into Park



Turn off the ignition

Stabilisation-lifting points

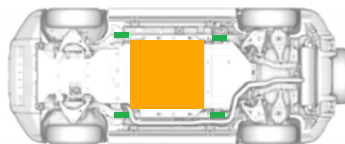

■ Stabilisation-lifting points
■ High-voltage battery

3. Disable direct hazards / safety regulations

Main disabling method



Alternative disabling method



Access to 12V battery



Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.



4. Access to the occupants

High strength zone



Seat adjustment



Steering column adjustment



Glass types



① Laminated glass

② Tempered glass

5. Stored energy / liquids / gases / solids

		12.8V
		588.8V
		R1234yf 1550±20g



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!

7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.




8. Towing / transportation / storage

Front hook locations



Rear hook locations

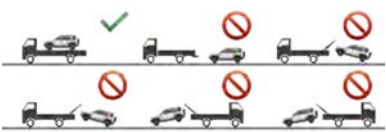

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Additional important information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark  on page 1.

10. Explanation of pictograms used

	Acute toxicity		Air-conditioning component
	Bonnet		Corrosives
	Explosive		Flammable
	General warning sign		Hazardous to the human health
	Remove smart key		Use thermal Infrared camera
	Use water to extinguish the fire		Warning; Electricity
	Warning; low temperature		