





FORD Ranger

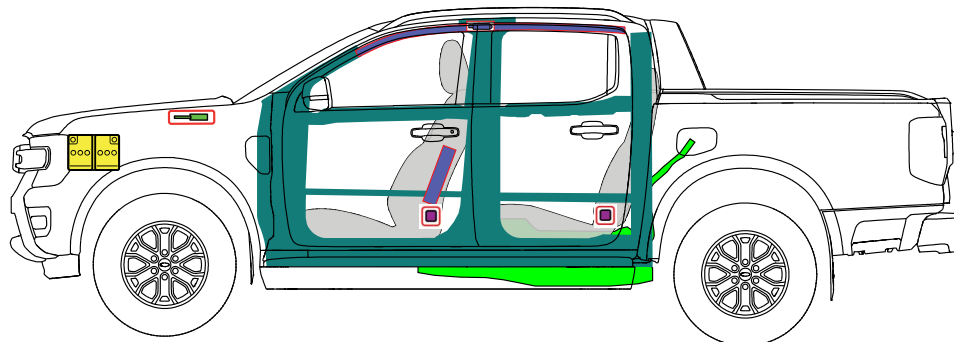

E384332

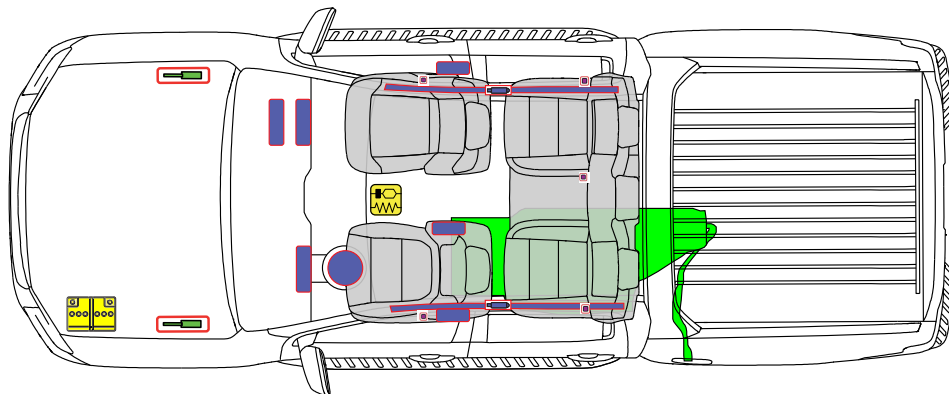

E384333

Note: The illustration shows the maximum possible range of equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / preloaded spring		High-strength zones		Zone requiring special attention		
	Battery pack, low-voltage		Ultracapacitor, low voltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high-voltage		High-voltage power cable		High-voltage disconnect		Fuse box, disabling high-voltage system		Ultracapacitor, high voltage
	Low voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage component				



FORD Ranger

1. Identification/recognition



E392380

Label on the front grill and the rear tailgate.

2. Immobilisation / stabilisation / lifting

Immobilize the vehicle

Vehicles with electronic parking brake



E392381


Apply the parking brake.

Vehicles without electronic parking brake



E392382

Apply the parking brake.

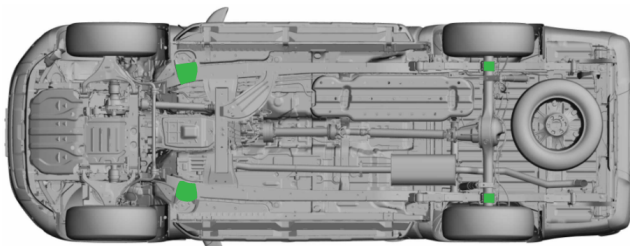


E392384

Jacking points.



FORD Ranger

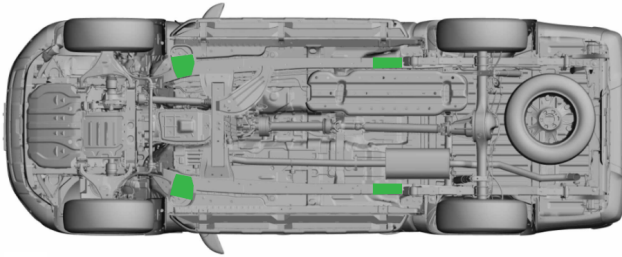

E392385

Jacking/Lifting points.

Turn off the ignition



E39387



NOTE: Instead of a radio key, it is also possible to use a key card or smartphone app.


Press the "START-STOP" button on the steering rack.

3. Disable direct hazards / safety regulations

Disconnect the 12-volt battery



E375218

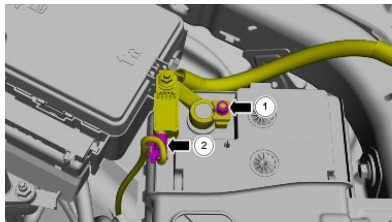

1. Loosen the nut.
2. Disconnect the electrical connector and position aside the battery negative (-) terminal.


4. Access to the occupants



E392383

Glass types:

1. Laminated safety glass
2. Toughened safety glass

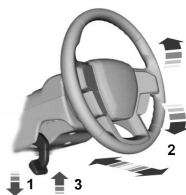

1. Unlock the steering column
2. Adjust the steering wheel
3. Lock the steering column



Battery power is required to operate the power seat.



5. Stored energy / liquids / gases / solids

 E382962	80 l
 E377212	12 Volt


6. In case of fire

 E377214	
--	--

7. In case of submersion


After rescuing the vehicle from the water, deactivate the high-voltage system (see Chapter 3) and allow the water to drain. Wear appropriate protective equipment!

8. Towing / transportation / storage

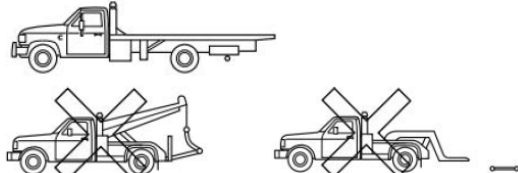 E377229	Do not tow a vehicle that has been involved in an accident on its drive axles.
--	--

9. Important additional information

 10. Explanation of pictograms used

flammable  E377230	Hazards to the human health  E377231	Environmental hazard  E377232	Vehicle on fuel of liquid group 2  E382962	Vehicle on fuel of liquid group 1  E382963	Caution, danger  E377233	Use lots of water to extinguish the fire  E377234	Use thermal Infrared camera  E377235
Remove smart key  E377236	Bonnet  E382964						