




BMW i5 G60 BEVE

Saloon

From 07/2023

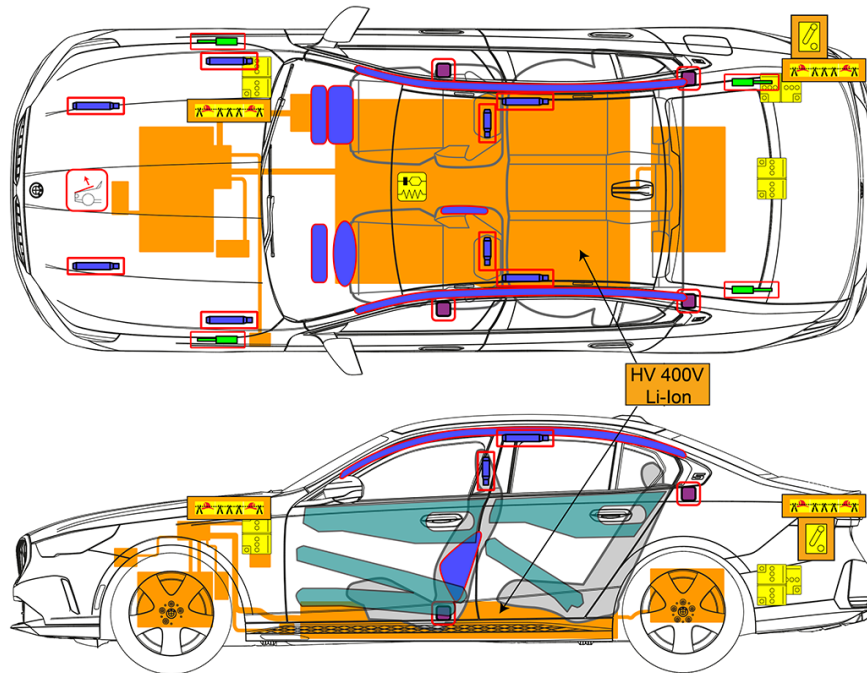

	Airbag		Gas generator		Belt tensioner		Supplementary Restraint System control unit		Active pedestrian protection
	Gas-filled shock absorber / preloaded spring		Body reinforcement		High-voltage disconnect (rescue disconnect)		Low-voltage battery		High-voltage battery
	High-voltage cable / component		High-voltage disconnect						

*Switch off the ignition to avoid this risk of an electric arc when disconnecting.

1. Identification / recognition

The absence of engine noise does not mean that the vehicle is switched off. Quiet movement or restart capability is possible until the vehicle is switched off completely. Wear appropriate personal protective equipment.

Vehicle identification features

Model designation "i5"

The blue outline around the badge indicates a high-voltage vehicle

High-voltage charging socket on the rear right side panel



2. Immobilisation / stabilisation / lifting


Immobilisation

1. Press the "Start / Stop" OFF button of the vehicle

2. Press the "parking brake button" of the vehicle



Stabilisation / lifting points

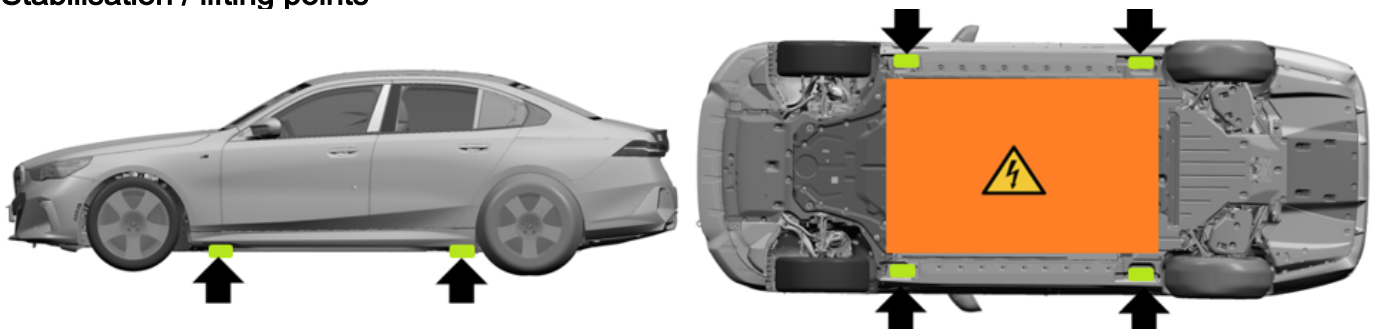

3. Disable direct hazards / safety regulations

Procedure for deactivation


Standard method



1. Open bonnet.



2. Cut the low-voltage cable (1) marked with a label to deactivate the high-voltage system.

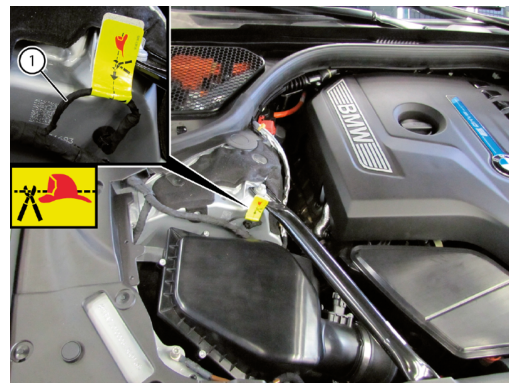

Alternative method



1. Open the tailgate and remove the cover on the right-hand side.



2. Press the catch (1) downwards and pull it out to disconnect current (2). Pull the connector apart in the direction of arrow.

3. The high-voltage system is deactivated when the drilled hole is completely visible.




4. Disconnect the 12 V battery.



Disconnecting the negative terminal of the 12 V battery

The low-voltage battery is located on the passenger's side in the front section and in the luggage compartment on the left and in the centre of vehicle.

1. Remove the covers
2. Loosen the nuts (1), (2) and (3) and pull the negative battery cables out toward the top
3. Cover the negative battery terminal to prevent contact with the negative battery cable

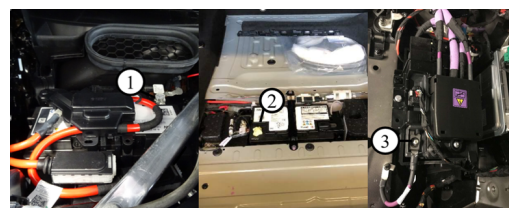

4. Access to the occupants

Interfaces


A Laminated glass

B Tempered glass

1 Interfaces in order to remove the roof

2 Door lock

3 Door hinge

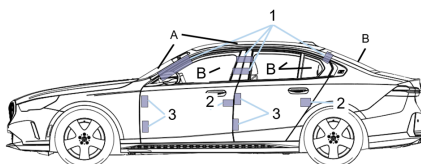

5. Stored energy / fluids / gases / solids

		12V
		400V
		600g

6. In the event of fire



There is an electrical risk even after a fire. Danger of injury!

Use personal protective equipment identical to that for conventional vehicle fires.



BGI / GUV-I 8677 electrical risks at the place of deployment. Danger of injury!

Do not touch high-voltage components.

Maintain safety distance when extinguishing:

- 1 m for spray jet
- 5 m for direct jet



Extinguish with large quantities of water.

To do so, if possible, open the engine bonnet and direct the extinguishing agent in these areas towards the vehicle underbody / high-voltage battery. Water can also be added via the wheel arches. Large quantities of water are required to cool down the battery.



Use a thermal imaging camera to detect an increase in temperature at the high-voltage components

7. In water

Vehicle in and under water


After the vehicle has been recovered from the water, remove the high-voltage safety plug and disconnect the low-voltage battery (negative terminal) to switch off the high-voltage system.



After the vehicle has been recovered from the water:

- Observe vehicle precisely
- Park vehicle outdoors and far from flammable substances
- Ensure access for the fire service

8. Towing / transportation / storage

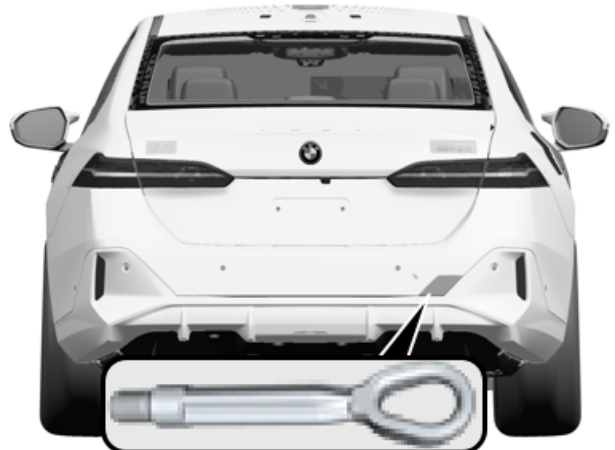

As a general principle, removing the vehicle from the immediate danger zone at walking speed is permitted.

Transport is permitted exclusively by truck. Other variants of towing of the vehicle are prohibited. It is recommended to secure the vehicle by its wheels.

Only use the towing eye supplied in the vehicle and screw in firmly to the limit position.

Only use the towing eye for towing away on a paved roadway. Avoid transverse loads on the towing eye. For example, do not raise the vehicle by the towing eye.

Electric vehicles with damaged batteries or with a red high-voltage warning light should be parked outside buildings with a safety distance of 5 m from adjacent vehicles/objects.

If 5 m is not feasible, vehicles should be parked next to non-combustible structures such as concrete barriers.



High-voltage battery: Repeated ignition is possible!

9. Important additional information


This document presents the maximum configuration of the vehicle.



BMW 5er Reihe G60

Saloon

07/2023

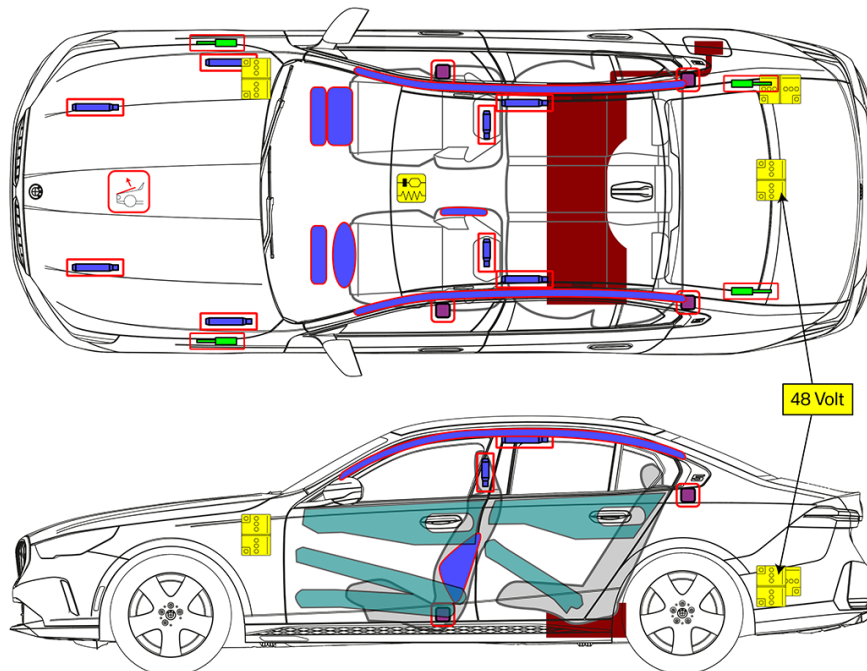

	Airbag		Gas generator		Belt tensioner		Supplementary Restraint System control unit		Active pedestrian protection
	Gas-filled shock absorber / preloaded spring		Body reinforcement		Low-voltage battery		Fuel tank		

¹Switch off the ignition to avoid the risk of an electric arc when disconnecting.

1. Identification / detection

2. Immobilisation / stabilisation / lifting


Immobilisation

1. Press the "Start / Stop" OFF button of the vehicle

2. Press the "parking brake button" of the vehicle



Stabilisation / lifting points

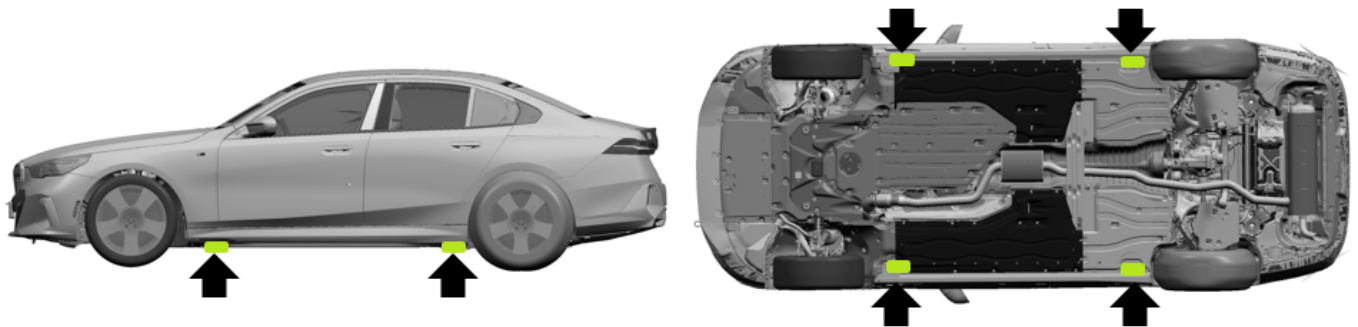

3. Eliminate direct dangers / safety regulations

4. Access to the occupants

Interfaces


A Laminated glass

B Tempered glass

1 Interfaces in order to remove the roof

2 Door lock

3 Door hinge

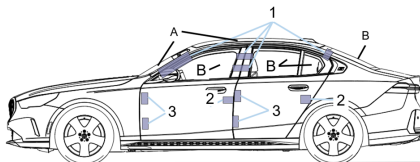

5. Stored energy / fluids / gases / solids

Fuel

Diesel engine: Diesel DIN EN 590

Petrol engine: Petrol 91 – 100 RON

		48V
		60 l
		550g

6. In the event of a fire



There is still a danger of injury even after a fire!


Use personal protective equipment identical to that for conventional vehicle fires.

7. In water

Vehicle in and under water

After the vehicle has been recovered from the water, disconnect the low-voltage battery (negative terminal).

8. Towing / transportation / storage

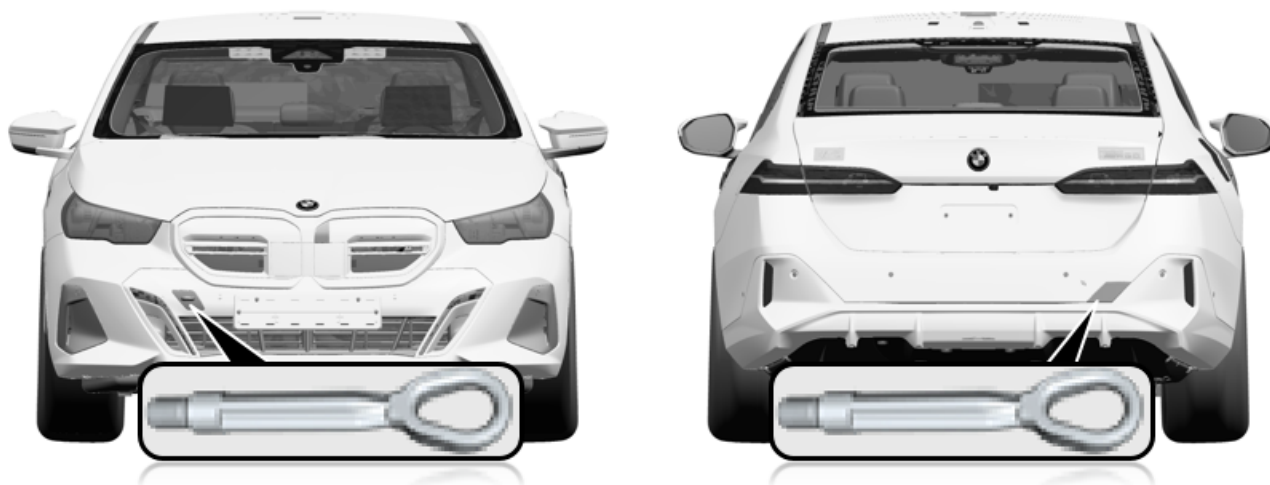

Only use the towing eye supplied in the vehicle and screw in firmly to the limit position.

Only use the towing eye for towing away on a paved roadway. Avoid transverse loads on the towing eye. For example, do not raise the vehicle by the towing eye.

9. Important additional information

This document shows the maximum possible vehicle equipment.