# Audi A5 / S5
## Avant / Saloon
From 2024, 5-door, 5-seater

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

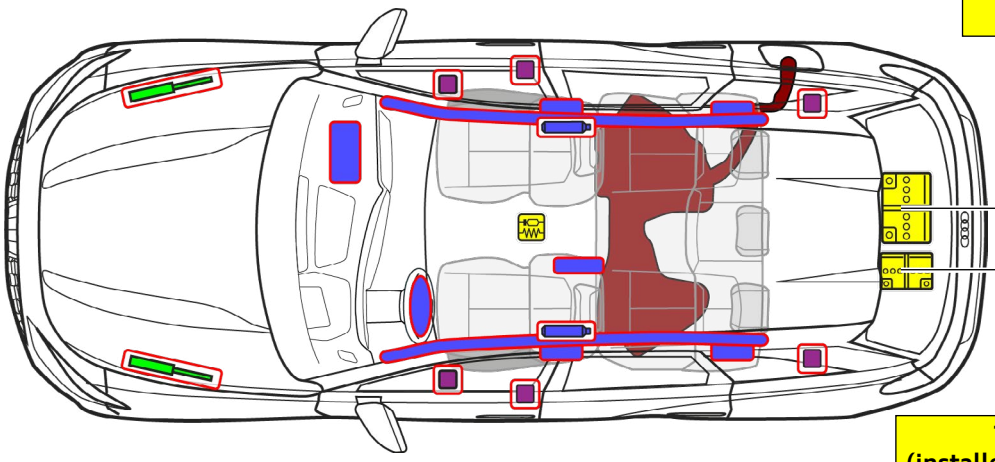


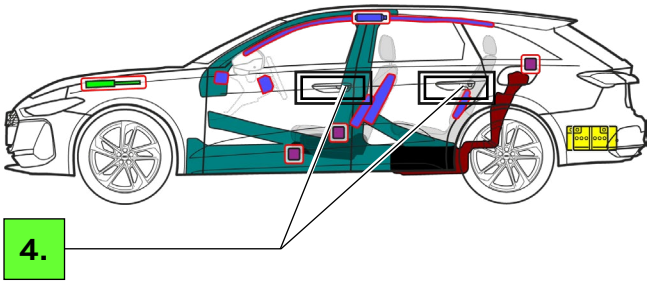


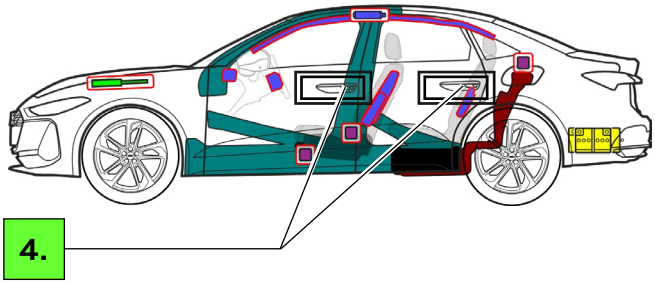


| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| | Airbag | | Stored gas inflator | | Belt tensioner | | SRS control unit | | Gas strut / Preloaded spring |
| | High strength zone | | Zone requiring special attention | | Battery low voltage | | Fuel tank, petrol or diesel | | |

# Audi A5 / S5
## Avant / Saloon
From 2024, 5-door, 5-seater

## 1. Identification / recognition

Model designation on B-pillar

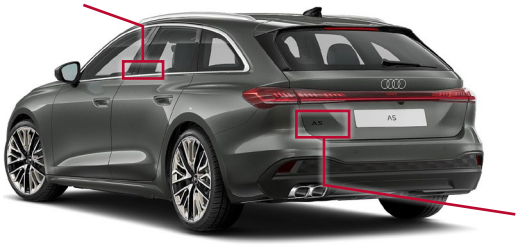

Model designation on rear (can be deselected)

Avant

Saloon

## 2. Immobilisation / stabilisation / lifting

**Immobilising the vehicle**

① Press the park button “P”

Secure the vehicle to prevent it from rolling away

**Lifting points**

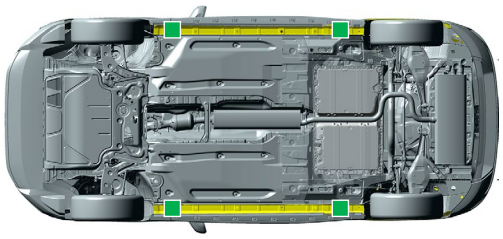

Appropriate lifting points

## 3. Disable direct hazards / safety regulations

**Main method: switch off ignition**

Press the “Start-Engine-Stop” button in the centre console without operating the foot brake.

**Remove vehicle key, key card and/ or smartphone app so that they are more than 5 m away from the vehicle if possible.**

**Disconnecting the 12-volt battery in the luggage compartment (vehicles without a 48-volt vehicle electrical system)**

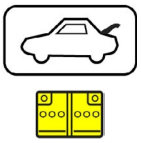

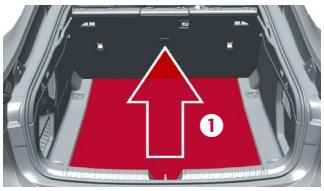

① Lift luggage compartment floor

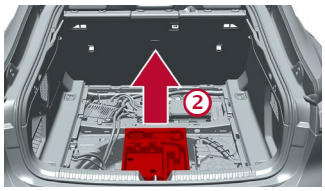

② Remove tool box

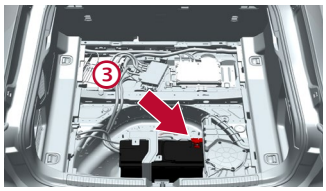

③ Disconnect the negative battery terminal

**Disconnecting the 12-volt battery in the luggage compartment (vehicles with 48-volt vehicle electrical system)**

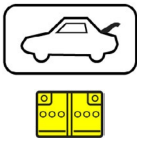

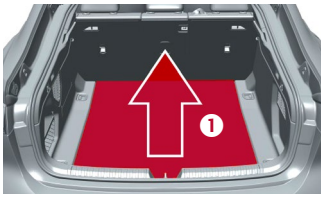

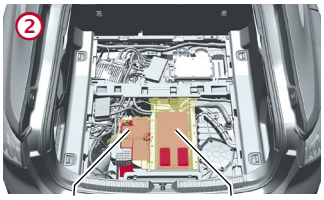


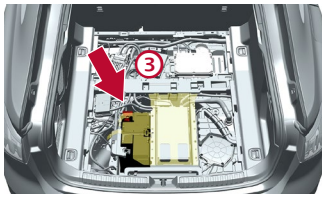

① Lift luggage compartment floor

② Locate the batteries

③ Disconnect the negative battery terminal

**Disconnecting the 48-volt vehicle battery in the luggage compartment**

**In the event of an accident in which the airbag is triggered, the 48-volt vehicle electrical system is automatically deactivated as soon as airbag triggering is detected.**

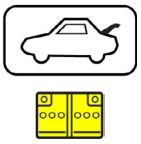

In addition, the 48-volt vehicle electrical system is deactivated after approx. 10 seconds if the following procedure is followed:
1) Ignition off
2) Disconnect 12-volt vehicle battery

For all other cases, the 48-volt vehicle electrical system can be deactivated as follows:

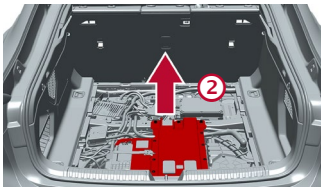

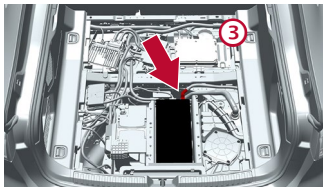

① Remove luggage compartment floor support

② Remove battery cover

③ Disconnect the negative battery terminal

## 4. Access to the occupants

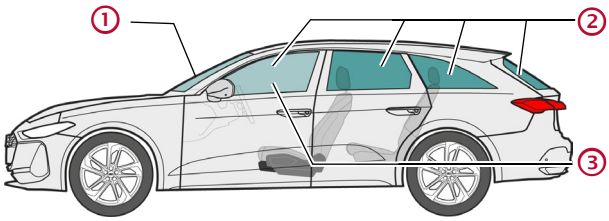

**Glass types:**
① Laminated glass
② Tempered glass
③ Laminated glass (optional)

Vehicle is equipped with sensor door handles. Reach into the door handle to open the doors!

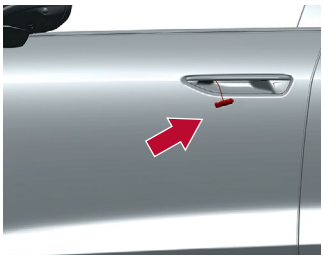

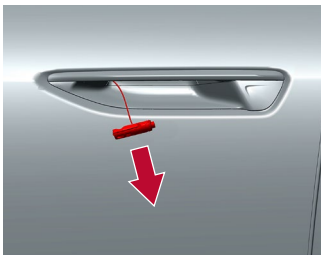

**In the event of accidents with airbag triggering, the 4 doors are unlocked and can only be opened mechanically. To do this, pull on the ejected pin at the end of the rope!**

## 5. Stored energy / liquids / gases / solids



Petrol 61 l
Diesel 64 l

12 V

48 V
Lithium-ion (optional)

## 6. In case of fire

**Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!**
**Wear appropriate personal protective equipment!**

IR

## 7. In case of submersion

**After recovery, allow the water to drain and disconnect the battery/batteries (see section 3).**
**Wear appropriate personal protective equipment!**

## 8. Towing / transportation / storage

**Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!**
**Wear appropriate personal protective equipment!**

IR

## 9. Important additional information

Further information can be found in the Audi guideline for rescue services at www.audi.com/rescue

## 10. Explanation of pictograms used

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| Flammable | Corrosives | Hazardous to human health | Environmental hazard | Fuel tank, petrol | Fuel tank, diesel | Use water to extinguish the fire | Remove smart key |
| Unlock boot | General warning sign | | | | | | |