

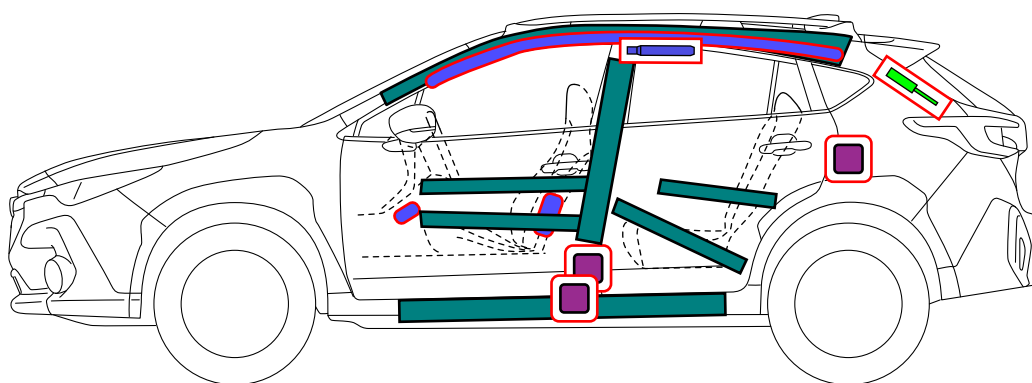
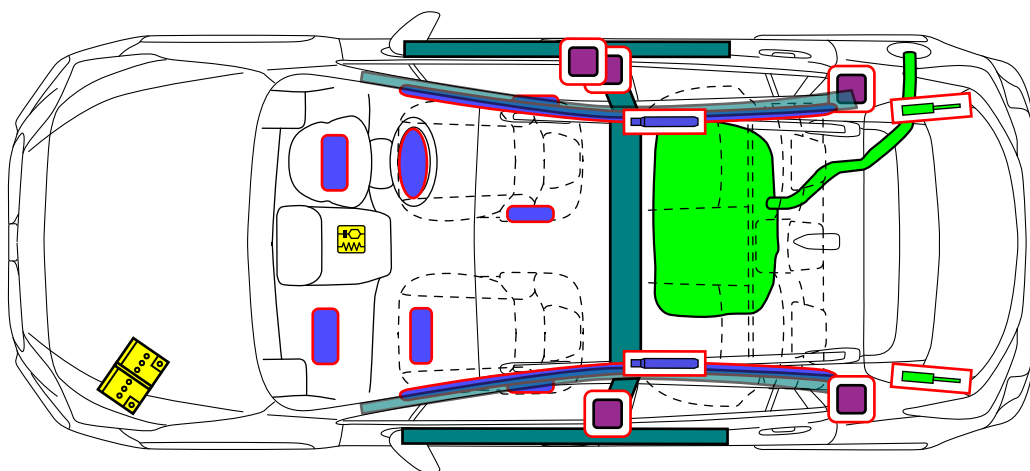


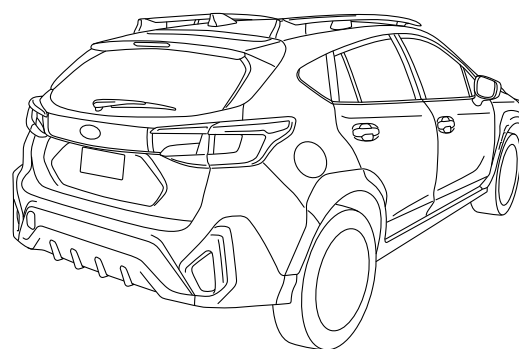

SUBARU



SUBARU Impreza
SUBARU Crosstrek
5 door Wagon
2023-

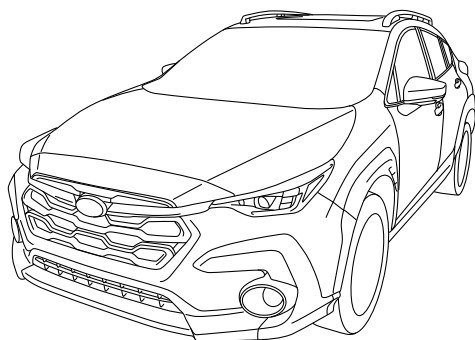

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		Fuel tank
ID No.		Version No.		Version date		Page			
JF1-T1520AE		02		03/2025		1 / 4			


1. Identification / Recognition

■ Location of vehicle badges

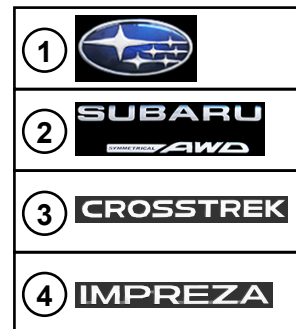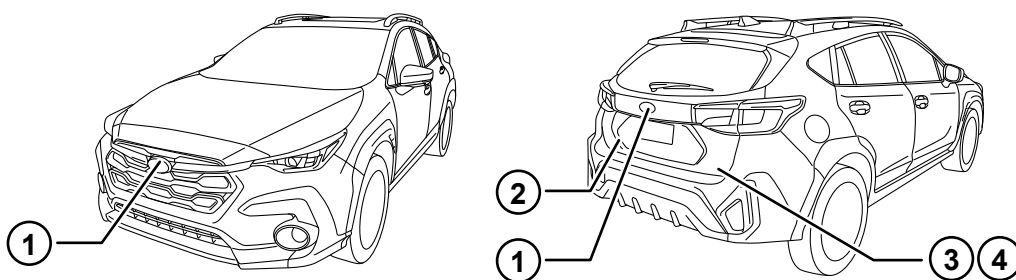


2. Immobilisation / Stabilisation / Lifting

■ Completely immobilize the vehicle

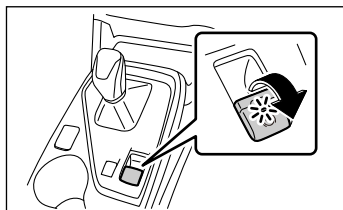



1. Chock wheels and set the parking brake.

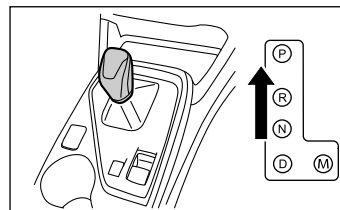

2. Shift the select lever to the Park position.

■ Stabilisation-lifting point

Crib at 4 points directly under the front and side sills.

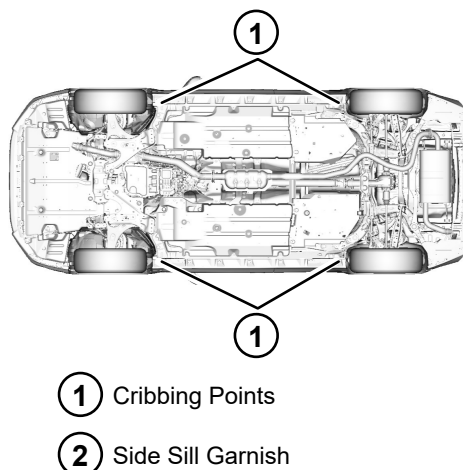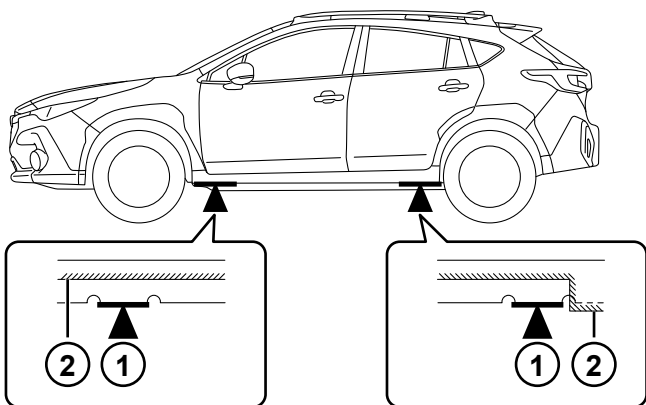

1 Cribbing Points

2 Side Sill Garnish

3. Disable direct hazards / Safety regulations

■ If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.

Power door lock
Electric parking brake





Power window
Power seat controls

Rear gate opener







Once the 12 Volt auxiliary battery is disconnected, power controls will not operate.

■ Perform procedure Main or Alternative to completely shut off the vehicle.

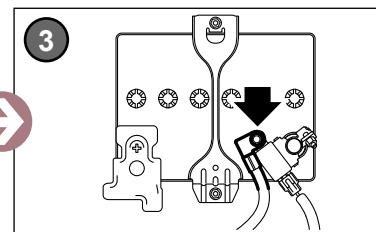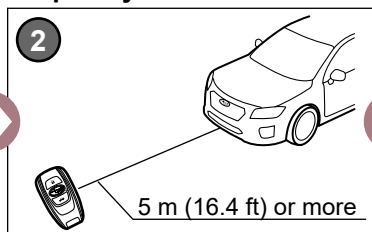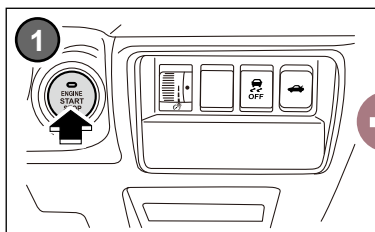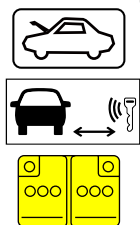


■ Access to Battery low voltage

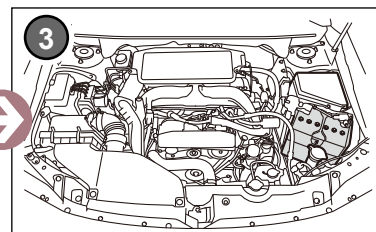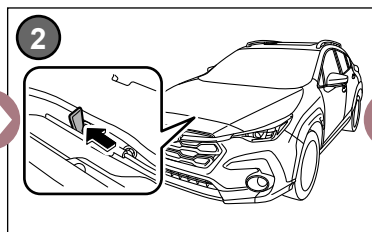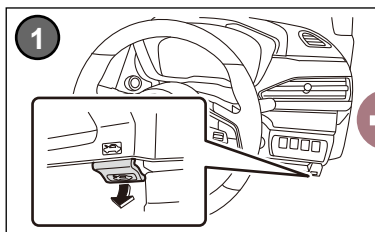

4. Access to the occupants


Window Glass

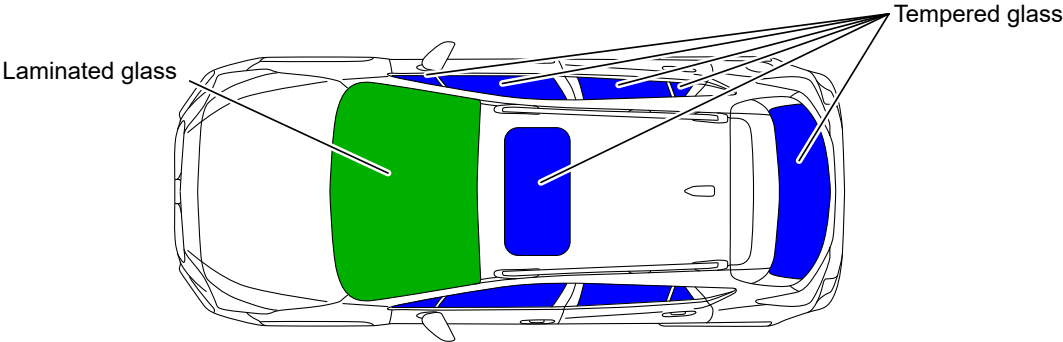


Seat adjustment




<Electric>

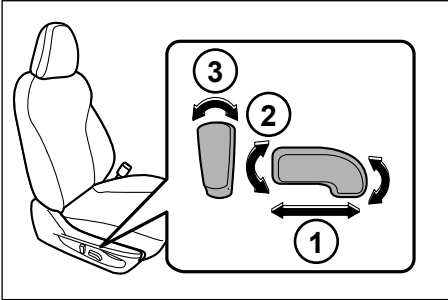


<Manual>

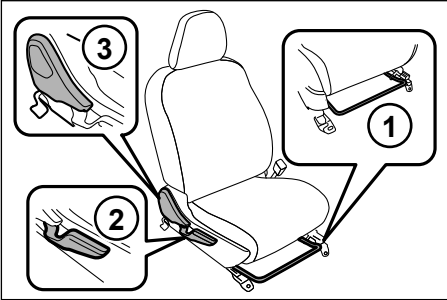

Steering Column adjustment

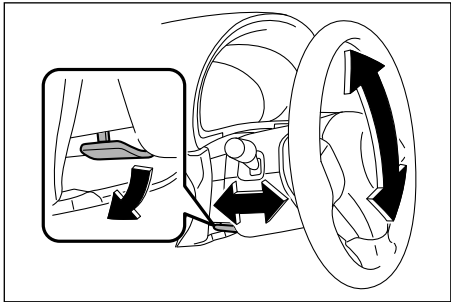


High strength steel in Body

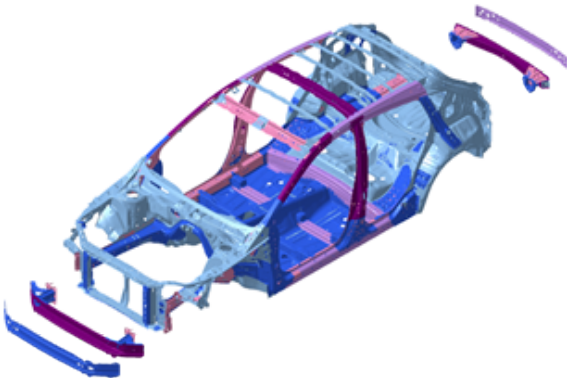


- 270 Mpa (2,753 kgf /cm², 39,150psi)
- 340 (3,467 kgf /cm², 49,299 psi)
400 to 500 Mpa (4,079 to 5,098 kgf /cm², 57,999 to 72,499 psi)
- 590 Mpa (6,016 kgf /cm², 85,549 psi)
- 980 MPa (9,993 kgf /cm², 140,299 psi)
1,180 Mpa (12,032 kgf /cm², 171,098 psi)
- 1,500 Mpa (15,295 kgf /cm², 217,498 psi)

Door Latches

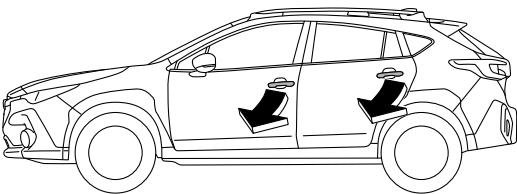

Roof Removal Area

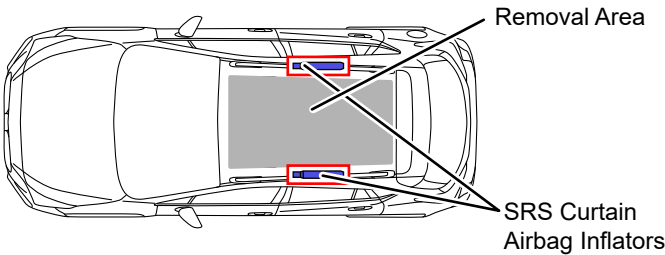

5. Stored energy / Liquids / Gases / Solids

	12 V	
	Impreza : 50 L Crosstrek : 63 L	
	HFO-1234yf : 0.475 kg (1.05 lb)	





6. In case of fire



7. In case of submersion

If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3).

8. Towing / Transportation / Storage

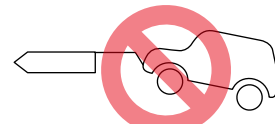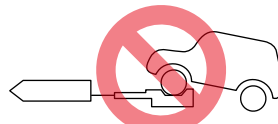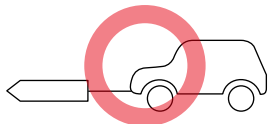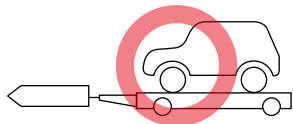


Less than 30 km/h (19 mph)




RE-IGNITION POSSIBLE !

Store the vehicle at a safe distance from other vehicles.



Location Front Hook

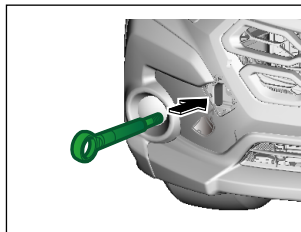

Location Rear Hook

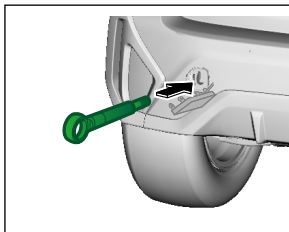


Location Tools

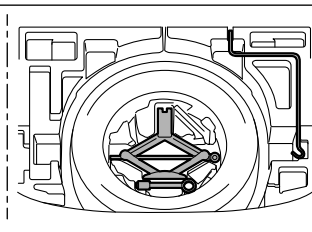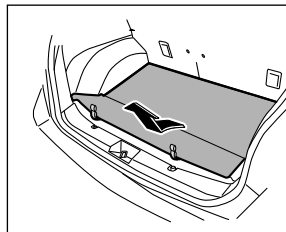

9. Important additional information

■ Seat Cushion Airbag

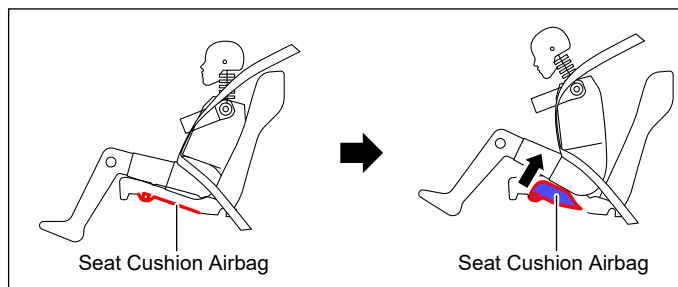

10. Explanation of pictograms used

	Vehicle on fuel of liquid group 2		Battery Low Voltage		Fuel tank
	Steering wheel, tilt control		Seat height adjustment		Bonnet
	Seat adjustment, seat back recline		Seat adjustment, longitudinal		Use thermal Infrared camera
	Remove smart key		Air-conditioning component		General warning sign
	Gases under pressure		Explosive		Flammable
	Corrosives		Hazardous to the human health		Lifting point; central support