




ZEEKR

Zeekr X
Type: 5dr SUV
(2024 -)



Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

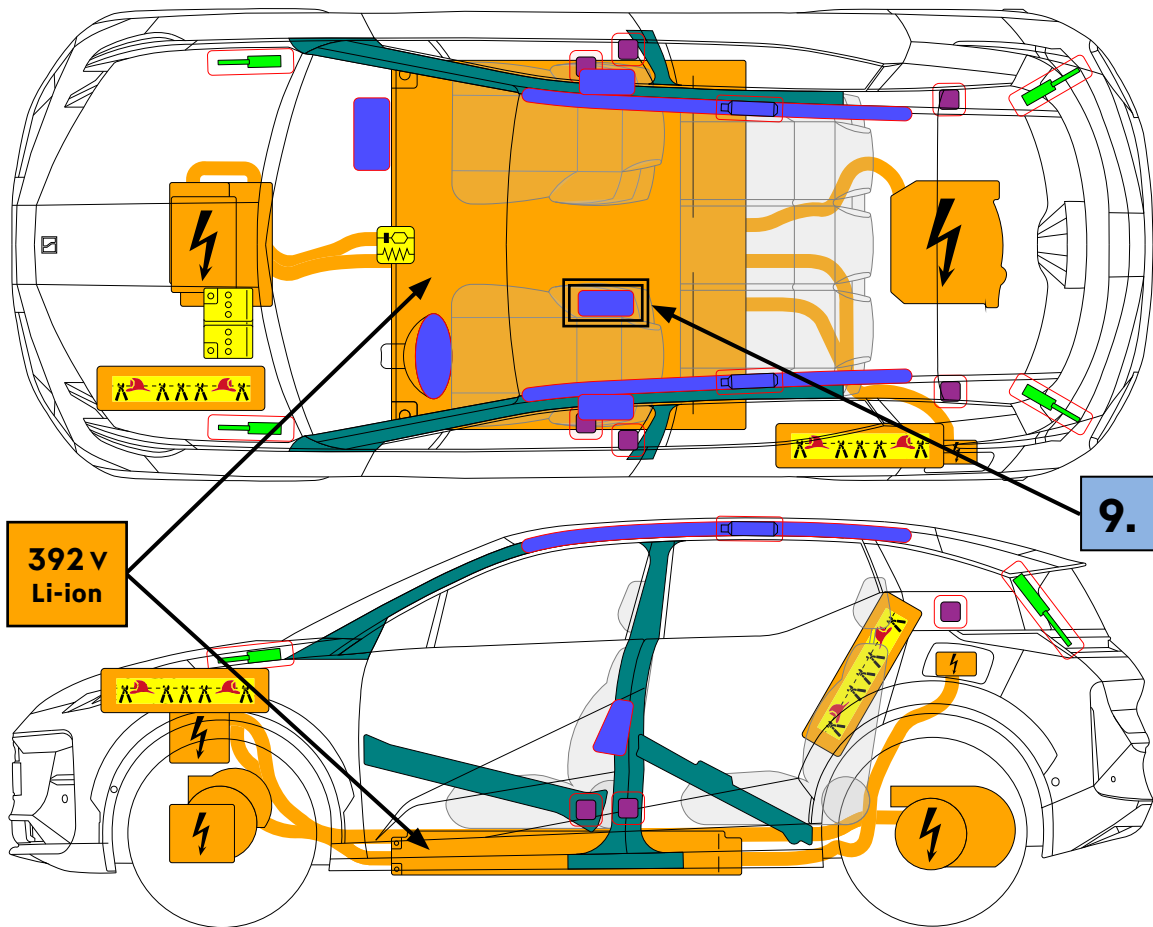

392 v
Li-ion

9.



Airbag



Stored gas inflator



Seat belt pretensioner



SRS control unit



Battery low voltage



Gas strut / Preloaded
spring



High strength zone



Cable cut



High voltage component



Battery pack, high-vol-
tage



High voltage power
cable



Zone requiring special
attention

Internal reference

Zeekr_X_SUV_2024_5d_Electric_EN

Version

03

Creation date

05/2024

Page

1 / 5



ZEEKR

Zeekr X
Type: 5dr SUV
(2024 -)



1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN. WEAR APPROPRIATE PPE.

Brand name front



Model name rear




Charge port



2. Immobilisation / stabilisation / lifting


Immobilise vehicle:

1. Block wheels and set parking brake
2. Push the P (park) button to select the P (park) position

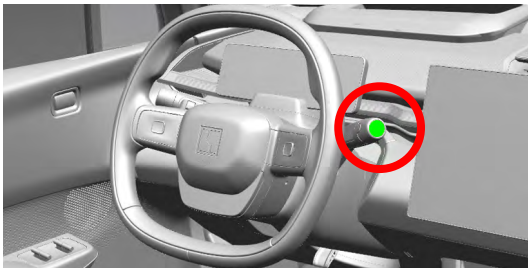

Lifting points:

-  Appropriate lifting points
-  High voltage battery

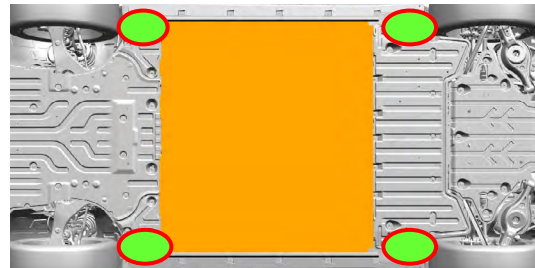


3. Disable direct hazards / safety regulations


Main method:

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.

Alternative method 1:

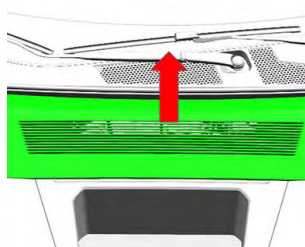

Alternative method 2:

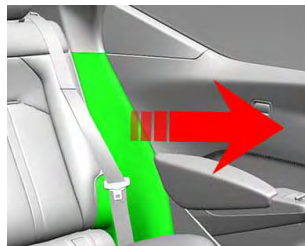







ZEEKR

Zeekr X
Type: 5dr SUV
(2024 -)



Disconnect 12 Volt battery

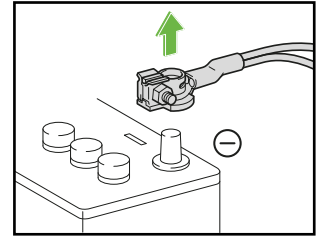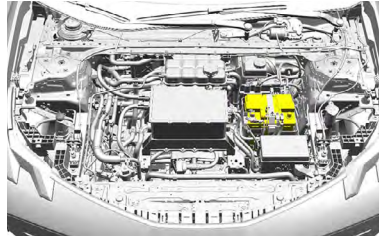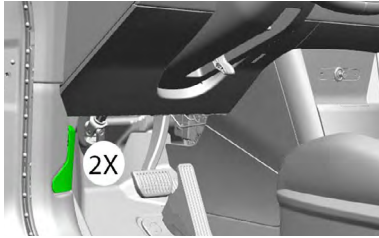

Safety instructions




Always assume the vehicle is powered, even if it is silent!

Make sure that the vehicle is immobilized and the propulsion system is deactivated; Never touch, cut, or open any orange high voltage power cable or high voltage component; In case of a collision with seat belt pretensioner activation / airbag deployment, the high voltage system will be disabled automatically. The restraint systems are still active. Wear appropriate PPE.

4. Access to the occupants


Opening side doors from inside with power

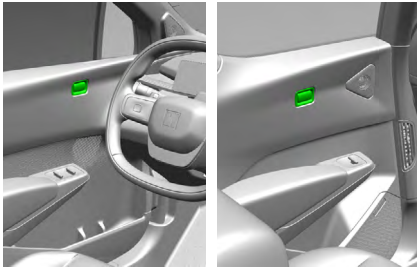

Opening side doors from inside without power





Opening side doors from outside with power

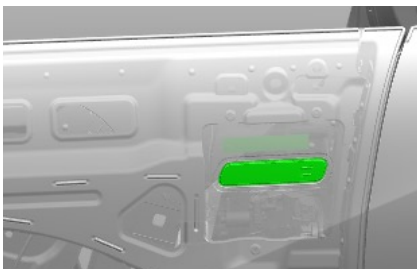


Opening side doors and trunk lid from outside without power


If no- or low battery voltage the side doors and trunk lid cannot be opened from outside. To resolve this, the vehicle must be jumpstarted, see pictures below.

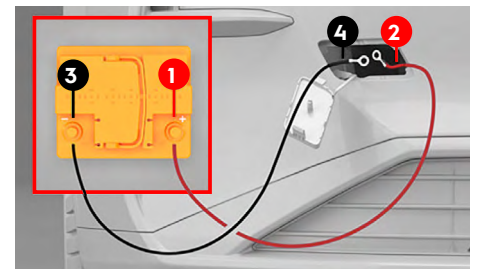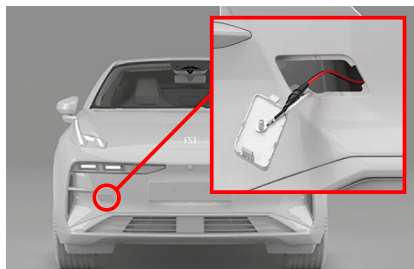

Seat adjustment

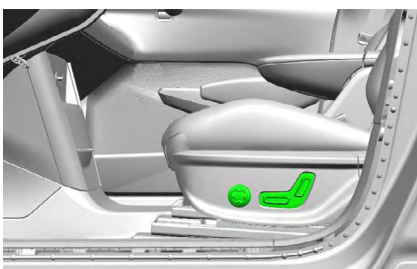

High strength zone

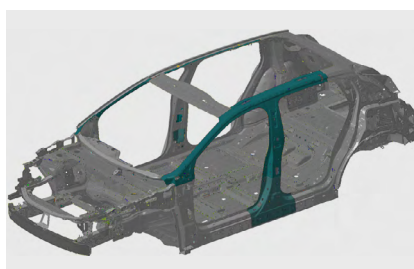

Glass types

- A. Laminated glass
- B. Tempered glass



Internal reference

Zeekr_X_SUV_2024_5d_Electric_EN

Version

03

Creation date

05/2024

Page

3 / 5



ZEEKR

Zeekr X
Type: 5dr SUV
(2024 -)



5. Stored energy / liquids / gases / solids

	392V	
	12V	
	R-1234yf 900 +/- 20 g	



When conventional coolant leaks (check reservoir) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway. Wear appropriate PPE.



6. In case of fire

Extinguishing method for the high voltage (HV) battery:



LARGE AMOUNTS OF PURE WATER



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.



7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3)

8. Towing / transportation / storage


Recovery hook storage




Location front hook



Location rear hook

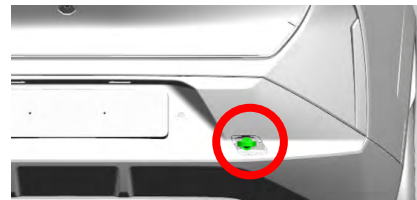

Towing



STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE $\geq 5\text{M}$ FROM OTHER OBJECTS OR VEHICLES!



POTENTIAL RISK OF HV-BATTERY FIRE RE-IGNITION / DELAYED FIRE! WEAR APPROPRIATE PPE.



Internal reference

Version

Creation date

Page

Zeekr_X_SUV_2024_5d_Electric_EN

03

05/2024

4 / 5





ZEEKR

Zeekr X
Type: 5dr SUV
(2024 -)



9. Important additional information

Centre airbag

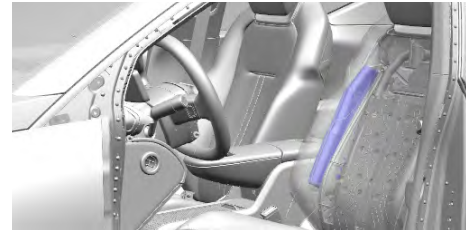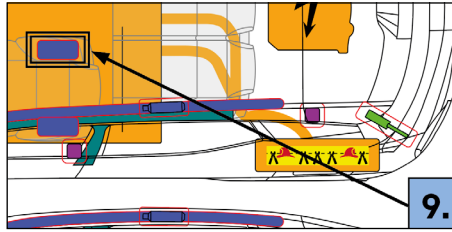

10. Explanation of pictograms used

	Electric Vehicle		Flammable
	Warning, Electricity		Hazardous to the human health
	General warning sign		Acute toxicity
	Warning; low temperature		Corrosives
	Air-conditioning component		Explosive
	Use water to extinguish the fire		Bonnet
	Use thermal Infrared camera		Boot