





NISSAN

X-TRAIL

TYPE: T33, 5-door SUV
(2022 -)

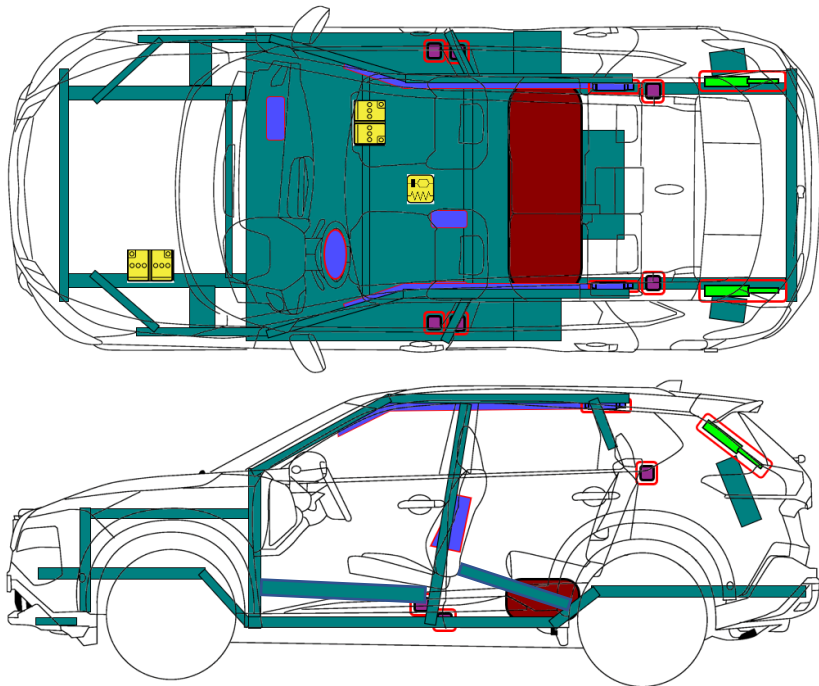

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Gas strut / Preloaded spring		High strength zone		Battery low voltage		Fuel tank content Gasoline / Ethanol

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS SHUT DOWN, WEAR APPROPRIATE PPE.




2. Immobilisation / stabilisation / lifting

Immobilize vehicle:

1. Block wheels
2. For electric shift select the P (park) position
3. Set parking brake
4. Press power switch

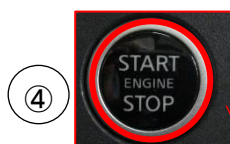

Lifting point:

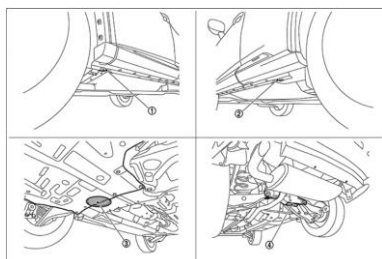

①	Safety stand point and lift up point (front)	②	Safety stand point and lift up point (rear)
③	Garage jack point (front)	④	Garage jack point (rear)


3. Disable direct hazards / safety regulations




In case of collision with seat belt pretensioner activation / airbag deployment, the high voltage System will be disabled automatically. The restraint systems are still active.

1. If there is the Engine sound, shut down engine.


Then, remove the electronic key and keep at least 16 ft. (5 m) away from the vehicle

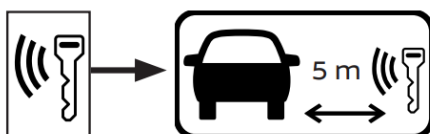

2. Access to the Engine room

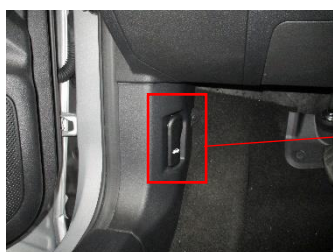

Pull lever

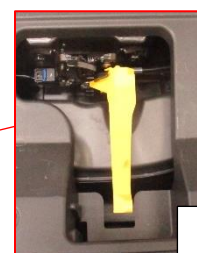

Pull lever

3. Disconnect the 12V battery




4. Access to the occupants

High strength steel in body



High strength steel

Seat adjustment

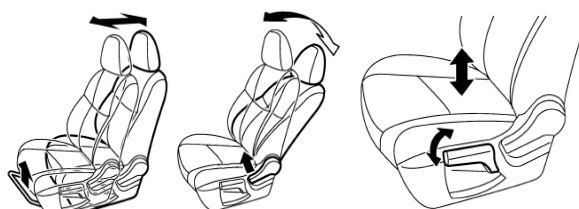


Steering column adjustment




Glass types

A: Laminated glass
B: Tempered glass

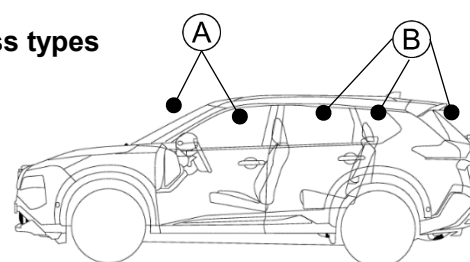

5. Stored energy / liquids / gases / solids

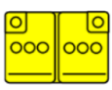	12V	 
	R-1234yf 1.05 kg	   
	55L	 

6. In case of fire



USE WATER



GAS STRUT, RISK OF MISSILE EFFECT





7. In Case of Submersion


- o There is no increased risk of electric shock in water.
- o If possible, remove the vehicle from the water and continue with the deactivation procedure (see chapter 3)
- o Contact your dealer / manufacturer.

8. Towing / transportation / storage

**STORE VEHICLE IN AN OPEN-AIR PARKING AT A SAFE DISTANCE
≥ 5M FROM OTHER AROUND OBJECTS OR VEHICLES!**

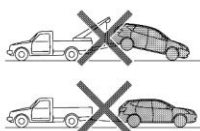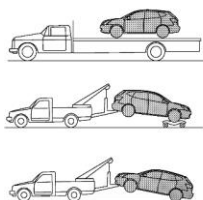

Recovery hook storage

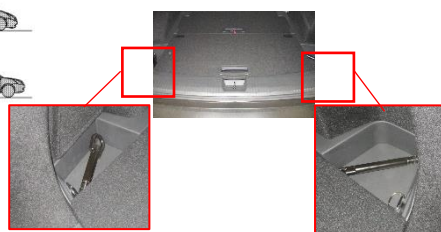

Location of front hook



Location of rear hook



10. Explanation of pictograms used

	General warning sign		Explosive
	Warning; low temperature		Corrosives
	Air conditioning component		Remove smart key
	Flammable		Use water to extinguish the fire
	Hazardous to the human health		