




MGU9 EV
PICK-UP, 4 Doors
2026-5



1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN, WEAR APPROPRIATE PPE

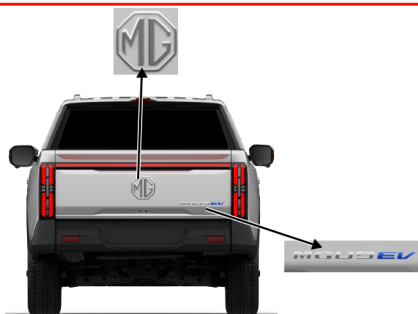


Charging socket



2. Immobilisation / stabilisation / lifting

Immobilisation / stabilisation

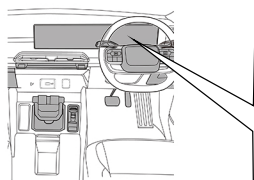


- 1 Secure the vehicle using P gear and parking brake
Shift the gear selector into P gear and parking brake work at the same time .
- 2 Click the "power off "button on the screen .

Chock the Wheels



Lifting

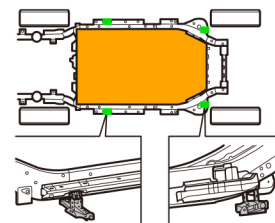


■ Appropriate lift areas ■ High-voltage battery

3. Disable direct hazards / safety regulations

■ Main method




1

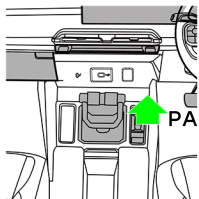

PARKING

- Shift the gear selector into P

2

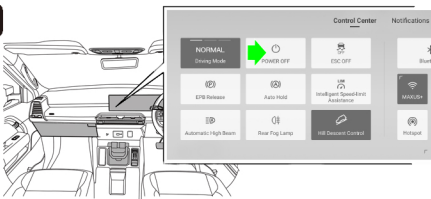


- Click the "power off "button on the screen.

3



4

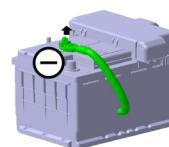


- Disconnect 12 Volt battery

■ Alternative method To stop the engine



1

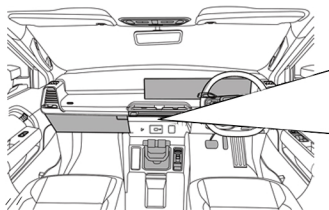

2




PUSH


PUSH 5X
IN 3 SEC

- Press the Hazard warning lamp switch 5 times in 3 seconds

2

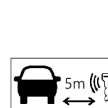

3

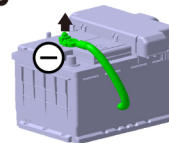


- Disconnect 12 Volt battery

■ Alternative method To discharge HV by remove the fuse




1

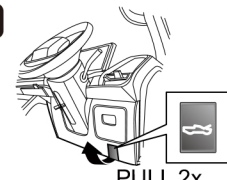


PULL 2x

- Pull the opening handle of the bonnet lock to open the bonnet


2

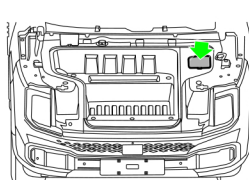


- Open the battery maintenance cover plate

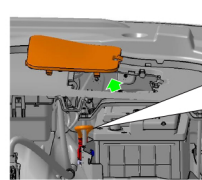

- Double cut the labeled cable

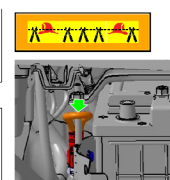

3

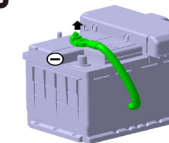

- Disconnect 12 Volt battery

ID No.

LSK-EKK1-EV-E003

Version No.

01

Version date

5/2026

Page

2 of 4